



Contents

68 - Interior equipment	1
1 Interior mirror	1
1.1 Tools	1
1.2 Automatic anti-dazzle interior mirror	1
1.3 Removing and installing interior mirror with rain sensor	1
1.4 Repairing interior mirror retaining plate with rain sensor	2
1.5 Removing and installing interior mirror	4
1.6 Repairing interior mirror retaining plate without rain sensor	5
2 Compartments, covers and trims	7
2.1 Tools	7
2.2 Removing and installing centre console with armrest	7
2.3 Removing and installing centre console without armrest	15
2.4 Removing and installing dash panel middle trim	19
2.5 Removing and installing dash panel end trims	20
2.6 Removing and installing steering column trim	21
2.7 Removing and installing left trim panel on driver side	22
2.8 Removing and installing right trim panel on driver side	24
2.9 Removing and installing centre cover	26
2.10 Removing and installing glove compartment	27
2.11 Removing and installing glove compartment lock cylinder	29
2.12 Removing and installing footwell cover on driver side	30
2.13 Removing and installing dash panel decorative trims	31
2.14 Removing and installing spectacles holder	32
2.15 Removing and installing sun visors	32
3 Sill panel mouldings	34
3.1 Removing and installing sill panel mouldings	34
4 Grab handles	36
4.1 Removing and installing roof grab handle	36
69 - Passenger protection	37
1 Seat belts	37
1.1 General safety regulations when working on airbag, belt tensioner and battery isolator units (pyrotechnic components)	38
1.2 Special instructions for belt tensioners	39
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	39
1.4 Removing and installing front seat belts	39
1.5 Removing and installing front belt buckle	42
1.6 Removing and installing rear seat belts	43
1.7 Removing and installing rear double belt buckle	45
2 Inspecting seat belts	47
2.1 Points to check	47
3 Checking child seat anchors (ISOFIX) after an accident	51
3.1 Points to check	51
4 Airbag	52
4.1 Tools	52
4.2 General safety regulations when working on airbag, belt tensioner and battery isolator units (pyrotechnic components)	54
4.3 Special instructions for driver and front passenger airbag	55
4.4 Special instructions for curtain airbag modules	55
4.5 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	56
4.6 Renewing airbag units following an accident	56



4.7	Removing and installing airbag control unit J234	57
4.8	Removing and installing driver airbag unit	59
4.9	Removing and installing return spring with slip ring	62
4.10	Removing and installing front passenger airbag unit	63
4.11	Removing and installing front side airbag	67
4.12	Removing and installing curtain airbag on driver and passenger side	69
4.13	Removing and installing seat occupied sensor, front passenger side G128	72
4.14	Adapting components	75
5	Crash sensors	76
5.1	Removing and installing side airbag crash sensor, driver side G179	76
5.2	Removing and installing side airbag crash sensor, front passenger side G180	77
5.3	Removing and installing rear side airbag crash sensor, driver side G256	78
5.4	Removing and installing rear side airbag crash sensor, front passenger side G257	79
70	Trim, insulation	81
1	Dash panel	81
1.1	Tools	81
1.2	Removing and installing dash panel	81
1.3	Removing and installing assembly carrier, left-hand drive vehicle	86
2	Door and side trims	93
2.1	Tools	93
2.2	Removing and installing door trim	93
2.3	Removing and installing door trim cover	98
2.4	Removing and installing side trim	99
3	Pillar trims	101
3.1	Removing and installing upper trim for A-pillar	101
3.2	Removing and installing middle trim for A-pillar	102
3.3	Removing and installing lower trim for A-pillar	103
3.4	Releasing and securing B-pillar trim from/in mountings	105
3.5	Removing and installing B-pillar trim	106
3.6	Removing and installing C-pillar trim	107
4	Rear lid trim	110
4.1	Tools	110
4.2	Removing and installing upper rear lid window trim	110
4.3	Removing and installing rear lid window side trim	111
4.4	Removing and installing rear lid trim	112
5	Load and luggage compartment trims	115
5.1	Tools	115
5.2	Removing and installing lock carrier cover	115
5.3	Removing and installing luggage compartment cover side cover	116
5.4	Removing and installing luggage and load compartment side trim	117
6	Roof trims	119
6.1	Tools	119
6.2	Removing and installing roof end strip	120
6.3	Lowering and installing moulded headliner	121
6.4	Removing and installing moulded headlining	125
6.5	Removing and installing roof insulation/reinforcement	130
72	Seat frames	133
1	Front seats, general	133
1.1	Tools	133
1.2	Removing and installing front seat	135
1.3	Removing and installing backrest adjustment wheel	139
1.4	Removing and installing trim on tunnel side	139
1.5	Removing and installing slider	140



1.6	Removing and installing seat height adjuster handle	141
1.7	Removing and installing interconnecting Bowden cable	142
1.8	Removing and installing backrest release Bowden cable	143
1.9	Adjusting backrest release Bowden cable	145
1.10	Removing and installing backrest release holder	147
1.11	Removing and installing handle with holder (easy-entry)	148
1.12	Removing head restraint guides	149
1.13	Removing and installing torsion rod	151
1.14	Removing and installing bearing	155
2	Front seat with manual adjuster	156
2.1	Removing and installing trim on sill side	156
2.2	Removing and installing trim bracket on sill side	157
2.3	Removing and installing seat height adjuster unit	158
2.4	Removing and installing easy-entry trim	159
2.5	Removing and installing driver seat lumbar support adjustment switch E176	159
2.6	Removing and installing front backrest	160
2.7	Removing and installing »easy-entry« Bowden cable B	161
2.8	Removing and installing »easy-entry« Bowden cable A	162
2.9	Checking and adjusting »easy-entry« Bowden cable A	165
3	Front seat with electric adjuster	166
3.1	Tools	166
3.2	Removing and installing trim on sill side	166
3.3	Removing and installing trim bracket on sill side	167
3.4	Removing and installing easy-entry trim	168
3.5	Assembly overview of easy-entry button	169
3.6	Removing and installing easy-entry button	170
3.7	Removing and installing driver side easy-entry control unit J572 / front passenger side easy-entry control unit J573	170
3.8	Removing and installing heated front seats control unit J774	171
3.9	Removing and installing switches	171
3.10	Removing and installing front backrest	172
3.11	Removing and installing 4-way lumbar support	173
3.12	Assembly overview of seat height adjustment motor	175
3.13	Removing and installing height adjustment motor	176
3.14	Assembly overview of seat rake adjustment motor	179
3.15	Removing and installing rake adjustment motor	180
3.16	Assembly overview of seat longitudinal adjustment motor	182
3.17	Removing and installing longitudinal adjustment motor	183
3.18	Removing and installing backrest adjustment motor	184
3.19	Removing and installing backrest adjustment switch unit	189
3.20	Assembly overview - switch unit (microswitch with bracket)	194
3.21	Adjusting switch unit microswitch	195
3.22	Checking switch unit microswitch	199
3.23	Carrying out switch unit adaptation run (calibration)	200
3.24	Perform functional check	201
4	Bucket seats	202
4.1	Tools	202
4.2	Removing and installing trim on sill side	202
4.3	Removing and installing backrest trim	204
4.4	Removing and installing seat bar and operating lever, sill side	205
4.5	Removing and installing trim on tunnel side	206
4.6	Removing and installing backrest	207
4.7	Removing and installing seat pan	208
4.8	Removing and installing Bowden cable for backrest release	210
5	Rear seats	213



5.1	Tools	213
5.2	Removing and installing rear seat	213
5.3	Removing and installing backrest	215
5.4	Removing and installing backrest release with Bowden cables	218
5.5	Removing and installing backrest frame	220
74	Seat - padding, covers	222
1	Front seat covers and padding	222
1.1	Tools	222
1.2	Removing and installing front seat cushion cover and padding	223
1.3	Removal and installation of front bucket seat cushion cover and padding	225
1.4	Removing and installing front seat backrest cover and padding	227
1.5	Removal and installation of front bucket seat backrest cover and padding	231
1.6	Renewing front seat heating element	234
1.7	Renewing front seat backrest heating element	234
2	Rear seat covers and padding	236
2.1	Tools	236
2.2	Removing and installing bench seat cover and padding	236
2.3	Removing and installing backrest cover and padding	237