



## Contents

<b>50 - Body - front</b> .....	<b>1</b>
<b>1 Lock carrier</b> .....	<b>1</b>
1.1 Tools .....	1
1.2 Assembly overview - lock carrier .....	2
1.3 Service position .....	3
1.4 Removing and installing lock carrier with attachments .....	5
1.5 Removing and installing support .....	7
<b>2 Wings</b> .....	<b>10</b>
2.1 Tools .....	10
2.2 Assembly overview - front wing .....	10
2.3 Removing and installing wing .....	11
2.4 Foam elements and end/sealing pieces for wing .....	14
2.5 Removing and installing wing bracket .....	14
<b>3 Plenum chamber bulkhead</b> .....	<b>16</b>
<b>4 Plenum chamber cover</b> .....	<b>17</b>
4.1 Assembly overview - plenum chamber cover .....	17
4.2 Removing plenum chamber cover .....	18
4.3 Installing plenum chamber cover .....	19
<b>5 Noise insulation</b> .....	<b>20</b>
5.1 Tools .....	20
5.2 Assembly overview - noise insulation .....	20
<b>6 Underbody cladding</b> .....	<b>21</b>
6.1 Tools .....	21
6.2 Assembly overview - underbody cladding .....	21
<b>7 Bulkhead</b> .....	<b>23</b>
7.1 Tools .....	23
7.2 Materials .....	24
7.3 Assembly overview - bulkhead .....	24
<b>8 Tunnel cross-piece</b> .....	<b>25</b>
8.1 Tools .....	25
8.2 Assembly overview - tunnel cross-piece .....	25
<b>55 - Bonnet, rear lid</b> .....	<b>27</b>
<b>1 Bonnet (hood)</b> .....	<b>27</b>
1.1 Tools .....	27
1.2 Assembly overview - bonnet .....	27
1.3 Removing and installing bonnet .....	29
1.4 Removing and installing bonnet hinge .....	30
1.5 Removing and installing insulation .....	33
1.6 Assembly overview - bonnet lock and release components .....	35
1.7 Removing and installing lid lock - LHD vehicle .....	36
1.8 Removing and installing lid lock - RHD vehicle .....	38
1.9 Detaching Bowden cable .....	40
1.10 Adjusting bonnet .....	41
1.11 Removing and installing striker pin .....	43
1.12 Removing and installing release lever .....	43
<b>2 Rear lid</b> .....	<b>46</b>
2.1 Tools .....	46
2.2 Assembly overview - rear lid .....	46
2.3 Removing and installing rear lid .....	47
2.4 Assembly overview - gas strut .....	50
2.5 Removing gas strut .....	50



2.6	Releasing gas from gas strut	52
2.7	Assembly overview - rear lid hinge	52
2.8	Removing and installing rear lid hinge	54
2.9	Removing and installing striker pin	56
2.10	Removing and installing stop buffer	57
2.11	Adjusting rear lid	58
2.12	Removing and installing bonnet lock	61
2.13	Rear lid seal	63
2.14	Removing and installing rear lid seal	64
<b>3</b>	<b>Tank flap unit</b>	<b>66</b>
3.1	Tools	66
3.2	Assembly overview - tank flap unit and actuator	66
3.3	Removing and installing tank flap unit	68
3.4	Removing and installing actuator	70
<b>57</b>	<b>Front doors, door components, central locking</b>	<b>71</b>
<b>1</b>	<b>Rear door</b>	<b>71</b>
1.1	Tools	71
1.2	Assembly overview - front door	72
1.3	Assembly overview - door hinges	74
1.4	Removing and installing door	75
1.5	Adjusting door	77
<b>2</b>	<b>Door components</b>	<b>79</b>
2.1	Tools	79
2.2	Removing and installing subframe	80
2.3	Removing and installing door arrester	82
2.4	Assembly overview - door handle and door lock	83
2.5	Removing and installing lock cylinder housing cover cap	84
2.6	Removing and installing lock cylinder housing	85
2.7	Removing and installing cover cap on front passenger side	88
2.8	Removing and installing door handle	90
2.9	Removing and installing door lock	92
2.10	Removing and installing door handle bracket	94
2.11	Window slot inner and outer seals	96
2.12	Removing and installing inner window slot seal	97
2.13	Inner door seal	98
2.14	Removing and installing inner door seal	98
2.15	Removing and installing outer door seal	101
2.16	Assembly overview - insulation	103
<b>3</b>	<b>Central locking</b>	<b>104</b>
3.1	Fitting location overview - central locking components	104
3.2	Adapting remote control keys to remote control	105
3.3	Adapting remote control keys to immobilizer	105
3.4	Removing and installing battery for folding key with remote control	106
<b>60</b>	<b>Sunroof</b>	<b>108</b>
<b>1</b>	<b>Panorama tilting sunroof</b>	<b>108</b>
1.1	Tools	108
1.2	Function	108
1.3	Assembly overview - panorama tilting sunroof	109
1.4	Removing glass panel for panorama tilting sunroof	111
1.5	Installing glass panel	112
1.6	Adjusting glass panel (height adjustment)	113
1.7	Removing and installing slotted plate guide	114
1.8	Removing and installing cable	115



1.9	Removing and installing swivel mounting	116
1.10	Removing and installing drive for panorama tilting sunroof glass panel	117
1.11	Adjusting drive for panorama tilting sunroof glass panel ("0" position)	118
1.12	Removing and installing panorama tilting sunroof switch	118
1.13	Operating without current	118
1.14	Removing and installing carrier unit	119
1.15	Preparing body flange for bonding	124
1.16	Fitting instructions	124
1.17	Minimum curing period	125
1.18	Touching up paint damage	125
1.19	Cleaning in the event of dirt caused by adhesive sealant	125
1.20	Assembly overview - sunroof sun blind	125
1.21	Removing and installing sun blind	127
1.22	Assembly overview - seals	129
1.23	Tools	129
1.24	Materials	130
1.25	Removing and installing seals and retaining strips on glass panel	130
1.26	Removing and installing seals on frame	130
<b>63</b>	<b>- Bumpers</b>	<b>132</b>
<b>1</b>	<b>Front bumper cover</b>	<b>132</b>
1.1	Tools	132
1.2	Front bumper cover	132
1.3	Front bumper cover - »R«	138
1.4	Assembly overview - front bumper carrier	143
1.5	Repairing front bumper cover	143
1.6	Installing holder for parking aid sender	143
<b>2</b>	<b>Rear bumper cover</b>	<b>149</b>
2.1	Tools	149
2.2	Rear bumper cover	149
2.3	Rear bumper cover - »R«	153
2.4	Rear bumper cover substructure parts	157
2.5	Assembly overview - rear bumper carrier	158
2.6	Repairing bumper cover	159
2.7	Installing holder for parking aid sender	159
2.8	Installing retainer for parking aid sender	165
<b>64</b>	<b>- Glazing</b>	<b>168</b>
<b>1</b>	<b>Flush bonded windows</b>	<b>168</b>
1.1	Tools	168
1.2	Materials	169
1.3	Assembly overview - windscreen	170
1.4	Removing windscreen	171
1.5	Installing windscreen	172
1.6	Assembly overview - rear window	172
1.7	Removing undamaged rear window	173
1.8	Removing broken rear window	174
1.9	Installing rear window	175
1.10	Assembly overview - side window	175
1.11	Removing undamaged side window	176
1.12	Removing broken side window	177
1.13	Installing side window	177
1.14	Preparing old undamaged window for glazing	178
1.15	Preparing new window without precoating for glazing	179
1.16	Preparing body flange for glazing	180
1.17	Fitting instructions	181



1.18	Minimum curing period	181
1.19	Touching up paint damage	182
1.20	Cleaning in the event of dirt caused by adhesive sealant	182
<b>2</b>	<b>Front door windows</b>	<b>183</b>
2.1	Tools	183
2.2	Assembly overview	184
2.3	Removing and installing door window	184
2.4	Adjusting door window	187
2.5	Removing and installing window regulator motor	192
2.6	Removing and installing window regulator	194
2.7	Removing and installing window channel	196
<b>66</b>	<b>Exterior equipment</b>	<b>198</b>
<b>1</b>	<b>Wheel housing liner</b>	<b>198</b>
1.1	Tools	198
1.2	Assembly overview - front wheel housing liner	198
1.3	Removing and installing front wheel housing liner	199
1.4	Assembly overview - rear wheel housing liner	201
1.5	Removing and installing rear wheel housing liner	201
<b>2</b>	<b>Exterior mirror</b>	<b>204</b>
2.1	Tools	204
2.2	Assembly overview - exterior mirror	204
2.3	Removing and installing mirror glass	205
2.4	Removing and installing mirror housing	207
2.5	Removing and installing trim	208
2.6	Removing and installing side turn signal and entry light in exterior mirror	209
2.7	Removing and installing exterior mirror	211
<b>3</b>	<b>Radiator grille</b>	<b>213</b>
3.1	Tools	213
3.2	Removing and installing radiator grille	213
<b>4</b>	<b>Roof spoiler</b>	<b>216</b>
4.1	Tools	216
4.2	Assembly overview - roof spoiler	216
4.3	Removing roof spoiler	218
4.4	Installing roof spoiler	219
4.5	Removing side trim	221
4.6	Installing side trim	222
<b>5</b>	<b>Mouldings and trims</b>	<b>224</b>
5.1	Tools	224
5.2	Protective side mouldings on door and side panel	225
5.3	Cover strip	229
5.4	Wheel arch trim »R« and »R Line«	230
<b>6</b>	<b>Special attachments »R« and »R Line«</b>	<b>232</b>
6.1	Safety requirements	232
6.2	Tools	232
6.3	Materials	233
6.4	Assembly overview	234
6.5	Side member extension »R« and »R Line«	235
6.6	Installation instructions for side member extension	239
6.7	Preparing new add-on part for bonding	240
6.8	Preparing body component for bonding	240
6.9	Fitting instructions	241
6.10	Minimum curing period	241
6.11	Touching up paint damage	242
6.12	Cleaning in the event of dirt caused by adhesive sealant	242



6.13	Cleaning guidelines	242
<b>7</b>	<b>Lettering</b>	<b>243</b>
7.1	Tools	243
7.2	Fitting instructions	243
7.3	Removing and installing company emblem on rear lid	243
7.4	Removing and installing company emblem on bonnet	245
7.5	»R« lettering on radiator grille	246
7.6	Rear lettering - dimensions	247
7.7	Lettering on wing	249

