



Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions for vehicles with a start-stop system	1
2 Identification	2
2.1 Gearbox identification	2
3 Identification codes, assembly allocation, ratios and capacities	3
3.1 Identification codes, assembly allocation, gear ratios and capacities, Golf 2004 ▶	3
3.2 Identification codes, assembly allocation, gear ratios and capacities, Golf 2009 ▶	3
3.3 Identification codes, assembly allocation, ratios and capacities, Golf Plus 2005 ▶	5
3.4 Identification codes, assembly allocation, ratios and capacities, Golf Plus 2009 ▶	5
3.5 Identification codes, assembly allocation and capacities, Passat 2006 ▶	6
3.6 Identification code, assembly allocation, transmission ratios and capacities, Passat 2011 ▶	7
3.7 Identification codes, assembly allocation and capacities, Eos 2006 ▶	8
3.8 Identification codes, assembly allocation, ratios and capacities, Scirocco 2009 ▶	10
3.9 Identification codes, assembly allocation, ratios and capacities, Touran 2003 ▶	12
3.10 Calculation of gear ratios	13
4 Overview - power transmission	15
5 General repair instructions	17
30 - Clutch	20
1 Clutch mechanism	20
1.1 Overview - clutch actuation	20
1.2 Assembly overview, pedal cluster with clutch pedal switch F36 , only Touran up to 05.03	22
1.3 Only Touran up to 05.03 - removing and installing clutch pedal switch F36	23
1.4 Assembly overview, pedal cluster with clutch position sender G476 - Touran from 06.03, Passat, Eos, Scirocco, Golf, and Golf Plus	24
1.5 Removing and installing over-centre spring	27
1.6 Removing and installing clutch pedal	51
1.7 Removing and installing mounting bracket	78
1.8 Removing and installing master cylinder	114
1.9 Removing and installing clutch position sender G476	120
1.10 Assembly overview - hydraulics (LHD)	122
1.11 Assembly overview - hydraulics (RHD)	124
1.12 Removing and installing slave cylinder	125
1.13 Bleeding clutch system	127
2 Clutch release mechanism	129
2.1 Assembly overview - clutch release mechanism	129
2.2 Repairing clutch release mechanism	130
3 Clutch	132
3.1 Assembly overview - clutch	132
3.2 Removing and installing clutch	134
34 - Controls, housing	138
1 Selector mechanism	138
1.1 Installation position of selector mechanism	138
1.2 Overview - selector mechanism	139
1.3 Assembly overview - gear knob and cover	139
1.4 Removing and installing gear knob with gaiter and noise insulation	141
1.5 Assembly overview - Gear lever and selector housing	147
1.6 Dismantling and assembling selector mechanism (from 11.06)	151
1.7 Assembly overview - Selector cables	156



1.8	Removing and installing selector mechanism	164
1.9	Adjusting selector mechanism	168
2	Removing and installing gearbox	171
2.1	Removing and installing gearbox, Touran (except vehicles with 1.2 l engine)	171
2.2	Removing and installing gearbox, Touran (only vehicles with 1.2 l engine)	185
2.3	Removing and installing gearbox, Golf 2004 ▶	201
2.4	Removing and installing gearbox, Golf 2009 ▶ with 1.2 l engine	215
2.5	Removing and installing gearbox, Golf 2009 ▶ with 1.4 l engine and Passat 2011 ▶	231
2.6	Removing and installing gearbox, Golf Plus with 1.2 l engine	249
2.7	Removing and installing gearbox, Golf Plus with 1.4 l engine	263
2.8	Removing and installing gearbox, Passat 2006 ▶ and Eos	279
2.9	Removing and installing gearbox - Scirocco	291
3	Transporting gearbox	307
4	Securing to engine and gearbox support	308
5	Gear oil	310
5.1	Checking gear oil level	310
5.2	Fill with gear oil	311
6	Dismantling and assembling gearbox	313
6.1	Overview - gearbox	313
6.2	Overview - dismantling and assembling gearbox	314
6.3	Assembly overview - Removing and installing cover for gearbox housing and 5th and 6th gears	315
6.4	Assembly overview - removing and installing clutch housing	317
6.5	Assembly overview - removing and installing input shaft, output shaft, differential, selector mechanism and selector forks	318
6.6	Dismantling and assembling gearbox	319
7	Gearbox housing and clutch housing	335
7.1	Assembly overview - gearbox housing and clutch housing	335
8	Gearbox housing cover	338
8.1	Assembly overview - gearbox housing cover	338
8.2	Repairing gearbox housing cover	339
9	Selector unit	341
9.1	Assembly overview - selector unit	341
9.2	Repairing selector unit	342
10	Selector forks	344
10.1	Assembly overview - selector forks	344
10.2	Repairing selector forks	345
35 - Gears, shafts		349
1	Input shaft	349
1.1	Assembly overview - input shaft	349
1.2	Dismantling and assembling input shaft	352
1.3	Renewing input shaft seal	360
2	Output shaft	362
2.1	Assembly overview - output shaft	362
2.2	Dismantling and assembling output shaft	365
39 - Final drive - differential		371
1	Oil seals	371
1.1	Renewing left flange shaft oil seal with gearbox installed	371
1.2	Renewing right flange shaft oil seal with gearbox installed	372
2	Differential	376
2.1	Assembly overview - differential	376
2.2	Dismantling and assembling differential	378



2.3	Adjusting differential	382
-----	------------------------------	-----

