



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification of gearbox</b> .....	<b>1</b>
1.1 Location on gearbox .....	1
1.2 Identification codes, engine allocation, capacities - Golf GTI Edition 30 and Golf GTI Pirelli .....	2
1.3 Identification codes, assembly allocation, capacities - Golf R .....	2
1.4 Identification codes, assembly allocation, capacities - Scirocco R .....	3
<b>2 Front-wheel drive - Overview power transmission</b> .....	<b>4</b>
<b>3 Overview - all-wheel drive power train</b> .....	<b>6</b>
<b>4 Calculating overall gear ratio "i"</b> .....	<b>8</b>
<b>5 All-wheel drive - notes on performance test</b> .....	<b>9</b>
<b>6 General repair instructions</b> .....	<b>10</b>
6.1 Contact corrosion .....	10
6.2 Special tool .....	10
6.3 Front-wheel drive - gearbox .....	10
6.4 four-wheel drive - gearbox .....	10
6.5 Gaskets and seals .....	11
6.6 Sealant .....	11
6.7 Locking devices .....	11
6.8 Nuts and bolts .....	11
6.9 Mountings .....	12
6.10 Shims .....	12
6.11 Synchro-rings .....	12
6.12 Gear wheels .....	12
6.13 Synchromeshed gears .....	13
6.14 Clutch .....	13
<b>7 Safety precautions for vehicles with a start-stop system</b> .....	<b>14</b>
<b>30 - Clutch</b> .....	<b>15</b>
<b>1 Repairing clutch mechanism</b> .....	<b>15</b>
1.1 Overview .....	15
1.2 Assembly overview - pedal cluster .....	16
1.3 Removing and installing over-centre spring .....	18
1.4 Removing and installing clutch pedal - Golf 2004 ▶ .....	31
1.5 Removing and installing clutch pedal, Golf 2009 ▶ left-hand drive and Scirocco .....	36
1.6 Removing and installing clutch pedal - Golf 2009 ▶ right-hand drive .....	42
1.7 Removing and installing mounting bracket, Golf 2004 ▶ .....	47
1.8 Removing and installing mounting bracket - Golf 2009 ▶ left-hand drive and Scirocco .....	52
1.9 Removing and installing mounting bracket, Golf 2009 ▶, RHD vehicles .....	58
1.10 Removing and installing master cylinder .....	63
1.11 Assembly overview - hydraulics (LHD) .....	65
1.12 Assembly overview - hydraulics (RHD) .....	68
1.13 Bleeding clutch mechanism .....	69
<b>2 Removing and installing clutch position sender G476</b> .....	<b>71</b>
2.1 Removing .....	71
2.2 Installing .....	73
<b>3 Bleeding clutch mechanism</b> .....	<b>74</b>
<b>4 Repairing clutch release mechanism</b> .....	<b>76</b>
4.1 Assembly overview .....	76
4.2 Removing line and bleeder from and installing on slave cylinder .....	77
4.3 Removing and installing slave cylinder with release bearing .....	78
4.4 Removing and installing line for clutch mechanism .....	79



<b>5</b>	<b>Repairing clutch, in conjunction with dual-mass flywheel</b>	<b>82</b>
5.1	Removing and installing "Sachs" clutch	83
5.2	Repairing "Sachs" clutch	85
5.3	Removing and installing "LuK" clutch	86
5.4	Repairing LuK clutch	89
<b>6</b>	<b>Repairing clutch, in conjunction with one-piece flywheel</b>	<b>91</b>
<b>34</b>	<b>Controls, housing</b>	<b>94</b>
<b>1</b>	<b>Repairing selector mechanism</b>	<b>94</b>
1.1	Installation position of selector mechanism	94
1.2	Overview of selector mechanism	95
1.3	Assembly overview - gear knob and cover	96
1.4	Removing and installing gaiter with gear knob and noise insulation	96
1.5	Repairing gear lever and selector housing	98
1.6	Assembly overview - removing and installing selector cables	103
1.7	Removing and installing selector mechanism	107
1.8	Adjusting selector mechanism	111
1.9	Function	114
<b>2</b>		<b>115</b>
<b>3</b>	<b>Removing and installing gearbox, Golf 2004 ►</b>	<b>118</b>
3.1	Removing gearbox	120
3.2	Transporting gearbox	127
3.3	Install gearbox	128
3.4	Specified torques	135
<b>4</b>	<b>Removing and installing gearbox, Golf 2009 ►</b>	<b>136</b>
4.1	Removing and installing gearbox, Golf 2009 ►, vehicles with front-wheel drive	136
4.2	Removing and installing gearbox, Golf 2009 ►, vehicles with all-wheel drive	155
<b>5</b>	<b>Removing and installing gearbox, Scirocco</b>	<b>176</b>
5.1	Removing gearbox	178
5.2	Transporting gearbox	186
5.3	Install gearbox	187
5.4	Specified torques	194
<b>6</b>	<b>Transporting gearbox</b>	<b>196</b>
6.1	Front-wheel drive - transporting gearbox	196
6.2	All-wheel drive - transporting gearbox	196
<b>7</b>	<b>Checking gear oil</b>	<b>198</b>
<b>8</b>	<b>Removing and installing bevel box, Golf 2009 ►, all-wheel drive</b>	<b>200</b>
<b>9</b>	<b>Checking or topping up gear oil in bevel box</b>	<b>206</b>
9.1	Checking gear oil in bevel box	206
9.2	Topping up gear oil in bevel box	207
<b>10</b>	<b>Dismantling and assembling gearbox</b>	<b>210</b>
10.1	Front-wheel drive - gearbox overview, Golf 2004 ►	210
10.2	Overview - front-wheel drive gearbox, Scirocco	211
10.3	All-wheel drive - gearbox overview, Golf 2009 ►	212
10.4	Assembly overview - front-wheel drive	213
10.5	Assembly overview - all-wheel drive	214
10.6	Assembly overview - removing and installing gearbox housing and selector mechanism	215
10.7	Assembly overview - front-wheel drive: Removing and installing input shaft, output shafts, differential and selector rods - Golf 2004 ►	217
10.8	Assembly overview - front-wheel drive: Removing and installing input shaft, output shafts, differential and selector rods - Scirocco	219
10.9	All-wheel drive - removing and installing input shaft, output shafts, differential, bevel box and selector rods	221
10.10	Assembly order, gearbox »without« retaining ring A for input shaft sealing cover	222



10.11	Assembly sequence, gearbox »with« retaining ring A for input shaft sealing cover . . . . .	235
<b>11</b>	<b>Repairing gearbox housing . . . . .</b>	<b>248</b>
<b>12</b>	<b>Front-wheel drive - repairing clutch housing . . . . .</b>	<b>259</b>
<b>13</b>	<b>four-wheel drive - repairing clutch housing . . . . .</b>	<b>263</b>
<b>14</b>	<b>Repairing selector unit . . . . .</b>	<b>267</b>
14.1	Renewing oil seal for selector shaft . . . . .	268
<b>15</b>	<b>Repairing selector forks . . . . .</b>	<b>270</b>
<b>35 - Gears, shafts . . . . .</b>		<b>273</b>
<b>1</b>	<b>Input shaft . . . . .</b>	<b>273</b>
1.1	Assembly overview - input shaft . . . . .	273
1.2	Dismantling and assembling input shaft . . . . .	275
1.3	Renewing input shaft seal . . . . .	281
<b>2</b>	<b>Output shaft for 1st through 4th gears . . . . .</b>	<b>283</b>
2.1	Assembly overview - output shaft for 1st through 4th gears . . . . .	283
2.2	Dismantling and assembling output shaft for 1st through 4th gears . . . . .	286
2.3	Adjusting output shaft for 1st through 4th gears . . . . .	305
<b>3</b>	<b>Output shaft for 5th and 6th gears and reverse gear . . . . .</b>	<b>311</b>
3.1	Assembly overview - output shaft for 5th, 6th and reverse gears . . . . .	311
3.2	Dismantling and assembling output shaft for 5th, 6th and reverse gears . . . . .	313
3.3	Adjusting output shaft for 5th, 6th and reverse gears . . . . .	322
<b>39 - Final drive - differential . . . . .</b>		<b>328</b>
<b>1</b>	<b>Front-wheel drive - renewing seals for flange shafts or stub shaft with gearbox installed . . . . .</b>	<b>328</b>
1.1	Renewing oil seal for left flange shaft . . . . .	328
1.2	Identifying gearbox to renew right oil seal, Golf and Touran . . . . .	330
1.3	Renewing stub shaft seal - Golf and Touran through gearbox manufacture date 31 10 4 . . . . .	331
1.4	Renewing oil seal for right flange shaft, Golf and Touran from gearbox manufacture date 01 11 4, Golf Plus, Passat, Passat CC, CC, Eos and Scirocco . . . . .	332
<b>2</b>	<b>All-wheel drive - renewing flange shaft oil seals with gearbox and bevel box installed . . . . .</b>	<b>335</b>
2.1	Renewing oil seal for left flange shaft . . . . .	335
2.2	Renewing seal for right flange shaft . . . . .	336
<b>3</b>	<b>Renewing seal between manual gearbox and bevel box . . . . .</b>	<b>340</b>
<b>4</b>	<b>Assembly overview - seals, flange shaft mount and output flange mount in bevel box . . . . .</b>	<b>342</b>
<b>5</b>	<b>Renewing seal between gearbox and bevel box with bevel box removed . . . . .</b>	<b>344</b>
<b>6</b>	<b>Renewing bevel box output flange oil seal (bevel box removed) . . . . .</b>	<b>346</b>
<b>7</b>	<b>Resetting shim when renewing output flange . . . . .</b>	<b>356</b>
<b>8</b>	<b>Renewing polygon needle bearing and seal on right flange shaft . . . . .</b>	<b>357</b>
8.1	Removing . . . . .	358
8.2	Installing . . . . .	359
<b>9</b>	<b>Adjustment overview - manual gearbox . . . . .</b>	<b>361</b>
<b>10</b>	<b>Differential . . . . .</b>	<b>362</b>
10.1	Front-wheel drive - dismantling and assembling differential . . . . .	362
10.2	All-wheel drive - dismantling and assembling differential . . . . .	368
10.3	Adjusting differential . . . . .	375

