



Contents

00 - Technical data	1
1 Safety instructions	1
1.1 General safety regulations	1
1.2 Safety precautions when working on vehicles with a start/stop system	2
1.3 Safety measures when tow-starting and towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
2 Identification	4
2.1 Gearbox identification	4
3 Repair instructions	7
3.1 General repair notes	7
3.2 Seals and sealing rings	8
3.3 Nuts and bolts	8
4 Technical data	9
4.1 Allocation gearbox - engine	9
4.2 Capacities	9
5 Electrical components	10
5.1 Fitting location overview - electrical components	10
30 - Clutch	11
1 Clutch	11
1.1 Assembly overview - dual clutch	11
1.2 Removing and installing clutch end cover	13
1.3 Removing dual clutch	17
1.4 Installing dual clutch	18
34 - Controls, housing	24
1 Mechatronic unit	24
1.1 Assembly overview - mechatronic unit	24
1.2 Removing and installing sump	26
1.3 Removing and installing mechatronic unit	29
2 Selector mechanism	49
2.1 Assembly overview - selector mechanism	49
2.2 Emergency release from position P	52
2.3 Removing and installing selector lever handle	53
2.4 Moving push button to installation position in the handle	55
2.5 Removing and installing selector mechanism	57
2.6 Removing and installing selector lever cable	64
2.7 Checking selector mechanism	67
2.8 Checking and adjusting selector lever cable	68
2.9 Renewing oil seal for selector shaft	70
3 Removing and installing gearbox	73
3.1 Removing gearbox	73
3.2 Installing gearbox	78
3.3 Specified torques for gearbox	81
4 Assembly mountings	82
4.1 Assembly overview - assembly mountings	82
5 Transporting gearbox	84
6 Dismantling and assembling gearbox	85
6.1 Assembly overview - gearbox	85
7 Attachment to engine and gearbox support	88
8 Gearbox oil circuit	89



8.1	Removing and installing gearbox oil cooler	89
8.2	Removing and installing cover for gear oil pump	91
8.3	Removing and installing gearbox oil pump	93
8.4	Removing and installing gearbox oil filter	94
9	Gear oil	96
9.1	Checking gear oil level	96
9.2	Draining and filling gearbox oil	99
35	Gears, shafts	103
1	Currently, no repairs can be made to gears and shafts.	103
39	Final drive - differential	104
1	Oil seals	104
1.1	Fitting location overview - seals	104
1.2	Renewing left oil seal	104
1.3	Renewing right oil seal	107
1.4	Dismantling and assembling flange shaft	112