



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification of gearbox</b>	<b>1</b>
<b>2 Overview - power transmission</b>	<b>2</b>
<b>3 Code, engine allocation</b>	<b>3</b>
3.1 Polo 2010 ▶	3
3.2 Touran 2003 ▶	3
3.3 Golf 2004 ▶	3
3.4 Passat CC 2009 ▶; CC 2010 ▶	4
3.5 Passat 2006 ▶	4
3.6 Golf 2009 ▶	4
3.7 Golf Plus 2009 ▶	4
3.8 Golf Plus 2005 ▶, Cross Golf	5
3.9 Scirocco 2009 ▶	5
<b>4 Capacities</b>	<b>6</b>
<b>5 General repair instructions</b>	<b>7</b>
5.1 Tools	7
5.2 Gearbox	7
5.3 Anti-friction bearings	9
5.4 Oil	9
5.5 Working with tester	9
<b>30 - Clutch</b>	<b>11</b>
<b>1 Removing and installing dual clutch, gearboxes made up to 05.2011</b>	<b>11</b>
1.1 Assembly overview - dual clutch, gearboxes made up to 05.2011	11
1.2 Removing dual clutch, gearboxes made up to 05.2011	13
1.3 Adjusting position of engagement bearings for clutches "K 1" and "K 2", gearboxes made up to 05.2011	17
1.4 Installing dual clutch, gearboxes made as of 05.2011	30
<b>2 Removing and installing dual clutch, gearboxes made from 06.2011 onwards</b>	<b>37</b>
2.1 Assembly overview - dual clutch, gearboxes made as of 06.2011	37
2.2 Removing dual clutch, gearboxes made as of 06.2011	39
2.3 Adjusting position of engagement bearings for clutches "K 1" and "K 2", gearboxes made as of 06.2011	43
2.4 Installing dual clutch, gearbox date from 06.2011	56
<b>3 Removing and installing oil seals at clutch end</b>	<b>63</b>
<b>34 - Controls, housing</b>	<b>66</b>
<b>1 Emergency release of selector lever</b>	<b>66</b>
<b>2 Removing and installing selector lever handle</b>	<b>67</b>
2.1 Moving push-button in the handle to installation position	69
<b>3 Selector mechanism in vehicles up to 02.2009</b>	<b>72</b>
3.1 Overview of selector mechanism up to 02.2009	72
3.2 Removing and installing selector lever cable up to 02.2009	73
<b>4 Selector mechanism from 03.2009 onwards</b>	<b>80</b>
4.1 Overview of selector mechanism in vehicles from 03.2009 onwards	80
4.2 Removing and installing selector mechanism	81
<b>5 Checking selector mechanism</b>	<b>85</b>
5.1 Selector lever in "P" position and ignition switched on	85
5.2 Selector lever in "N" position and ignition switched on	85
5.3 Selector lever in position "Tiptronic"	85
5.4 Ignition and light switched on	85
5.5 Selector lever position indicator	85



5.6	Checking and adjusting selector lever cable	85
<b>6</b>	<b>Safety note on mechatronic unit for dual clutch gearbox J743</b>	<b>89</b>
<b>7</b>	<b>Overview - mechatronic unit</b>	<b>90</b>
<b>8</b>	<b>Removing mechatronic unit for dual clutch gearbox J743 ; gearbox is installed</b>	<b>92</b>
<b>9</b>	<b>Moving mechatronic unit for dual clutch gearbox J743 into »removal position« by hand</b>	<b>104</b>
<b>10</b>	<b>Installing mechatronic unit for dual clutch gearbox J743</b>	<b>106</b>
<b>11</b>	<b>View on selector forks; mechatronic unit is removed</b>	<b>114</b>
<b>12</b>	<b>Renewing clutch actuator</b>	<b>115</b>
<b>13</b>	<b>Renewing control unit for mechatronic unit for dual clutch gearbox J743</b>	<b>121</b>
<b>14</b>	<b>Removing and installing gearbox</b>	<b>126</b>
14.1	Notes on different vehicles, different gearboxes	126
14.2	Removing gearbox, Golf 2009 ► and Golf Plus 2009 ►, 1.2 l - 63 and 77 kW petrol engine	128
14.3	Removing gearbox, Golf 2009 ►, 1.8 l - 118 kW petrol engine	136
14.4	Removing gearbox, Polo 2010 ►, 1.2 l - 63 and 77 kW petrol engine	142
14.5	Removing gearbox, Polo 2010 ►, 1.4 l - 63 kW petrol engine	147
14.6	Removing gearbox, Polo 2010 ►, 1.4 l - 103 kW petrol engine	154
14.7	Removing gearbox, Polo 2010 ►, 1.6 l - 66 kW diesel engine	158
14.8	Removing gearbox, Polo 2010 ►, 1.4 l - 132 kW petrol engine	165
14.9	Removing gearbox with flange shafts; Touran 1.4 l - 103, 110 and 125 kW petrol engine (and 110 kW Eco-Fuel)	171
14.10	Removing gearbox, Touran 1.6 l - 77 kW TDI engine	177
14.11	Removing gearbox, Touran 1.9 l - 77 kW TDI engine	183
14.12	Removing gearbox, Passat 2006 ► 1.4 l - 110 kW Eco-Fuel engine	189
14.13	Removing gearbox, Passat 1.4 l - 90 and 110 kW petrol engine	195
14.14	Removing gearbox, Passat 1.8 l - 90 and 118 kW petrol engine	200
14.15	Removing gearbox, Golf Plus 2009 ►, 1.4 l - 90 kW and 118 kW petrol engine	205
14.16	Removing gearbox, Golf Plus 2009 ►, 1.6 l - 75 kW petrol engine	212
14.17	Removing gearbox, Scirocco 2009 ►, 1.4 l - 118 kW TSI engine	219
14.18	Removing gearbox, Golf 2009 ►, 1.6 l - 75 kW petrol engine	226
14.19	Removing gearbox, Golf 2009 ►, 1.4 l - 90 or 118 kW petrol engine	232
14.20	Removing gearbox, Golf 2004 ►, Golf Plus 2005 ► and Cross Golf 1.4 l - 90, 118 kW TSI engine	239
14.21	Removing gearbox, Golf Plus 2009, 1.6 l - 77 kW diesel engine	246
14.22	Removing gearbox, Golf 2009 1.6 l and 1.9 l - 77 kW diesel engine	253
14.23	Removing gearbox, Golf 2004 and Golf Plus 2005 1.9 l - 77 kW TDI engine	259
14.24	Removing gearbox, Passat CC 2009 ►, CC 2010 ►, Passat 2011 ► 1.4 l - 90, 110, 118 kW petrol engine and 1.4 l - 110 kW Eco-Fuel engine	265
14.25	Removing gearbox, Passat CC 2009►, CC 2010►, 1.8 l - 90 and 118 kW petrol engine	272
14.26	Removing gearbox, Golf Cabriolet 2012 ►, 1.4 l - 90 or 118 kW petrol engine	278
14.27	Install gearbox	284
14.28	Torque settings »Gearbox to engine« and notes on assembly mounting	287
<b>15</b>	<b>Transporting gearbox and securing to assembly stand</b>	<b>295</b>
<b>16</b>	<b>Gear oil</b>	<b>297</b>
16.1	Draining and filling gear oil	297
16.2	Draining and filling hydraulic fluid for mechatronic unit	299
<b>35 - Gears, shafts</b>		<b>303</b>
<b>1</b>	<b>Notes on gearbox disassembly</b>	<b>303</b>
1.1	Overview: gearbox disassembly	303
<b>2</b>	<b>Dismantling gearbox</b>	<b>305</b>
<b>3</b>	<b>Assembling gearbox</b>	<b>312</b>
<b>4</b>	<b>Dismantling and assembling gearbox housing</b>	<b>323</b>
<b>5</b>	<b>Dismantling and assembling clutch housing</b>	<b>327</b>



<b>6</b>	<b>Dismantling and assembling outer input shaft</b>	<b>331</b>
<b>7</b>		<b>333</b>
<b>8</b>	<b>Dismantling and assembling output shaft 1 - overview</b>	<b>336</b>
8.1	Dismantling output shaft 1 partially	337
8.2	Dismantling output shaft 1 completely	339
8.3	Assembling output shaft 1	341
8.4	Dismantling and assembling locking collars and synchro-hubs of output shaft 1	346
<b>9</b>	<b>Dismantling and assembling output shaft 2 - overview</b>	<b>347</b>
9.1	Dismantling output shaft 2	348
9.2	Assembling output shaft 2	350
9.3	Dismantling and assembling locking collars and synchro-hubs of output shaft 2	354
<b>10</b>	<b>Dismantling and assembling output shaft 3 - overview</b>	<b>355</b>
10.1	Dismantling output shaft 3	355
10.2	Assembling output shaft 3	357
10.3	Dismantling and assembling locking collar and synchro-hub of output shaft 3	359
<b>11</b>	<b>Notes on gearbox adjustment</b>	<b>360</b>
11.1	Calculating shims for clutch housing	361
<b>12</b>	<b>Calculating shims for gearbox housing</b>	<b>374</b>
<b>13</b>	<b>Parking lock</b>	<b>394</b>
13.1	Removing and installing cover for parking lock	394
13.2	Removing and installing parking lock	395
<b>39</b>	<b>Final drive - front differential</b>	<b>397</b>
<b>1</b>	<b>Oil seals</b>	<b>397</b>
1.1	Renewing oil seal for right stub shaft	397
1.2	Renewing oil seal for left stub shaft	398
1.3	Renewing seal for right flange shaft	400
1.4	Renewing oil seal for left flange shaft	402

