



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Engine number	1
1.2 Engine data	1
<b>10 - Removing and installing engine</b>	<b>3</b>
<b>1 Removing and installing engine (Golf, Golf Plus, Eos, Scirocco)</b>	<b>3</b>
1.1 Removing engine	3
1.2 Securing engine to assembly stand	11
1.3 Installing engine	11
1.4 Torque settings	14
1.5 Assembly mountings	14
1.6 Additional information and assembly work for vehicles with air conditioner	15
<b>2 Removing and installing engine (Tiguan)</b>	<b>16</b>
2.1 Removing engine	16
2.2 Securing engine to assembly stand	25
2.3 Installing engine	25
2.4 Torque settings	27
2.5 Assembly mountings	28
2.6 Additional information and assembly work for vehicles with air conditioner	29
<b>3 Removing and installing engine (Passat)</b>	<b>30</b>
3.1 Removing engine	30
3.2 Securing engine to assembly stand	41
3.3 Installing engine	41
3.4 Torque settings	44
3.5 Assembly mountings	44
3.6 Additional information and assembly work for vehicles with air conditioner	45
<b>13 - Crankshaft group</b>	<b>46</b>
<b>1 Dismantling and assembling engine</b>	<b>46</b>
1.1 Assembly overview - parts I and II	46
1.2 Assembly overview - part I, belt drive	48
1.3 Assembly overview - part II, cylinder block	49
1.4 Removing and installing poly-V belt	51
1.5 Removing and installing valve timing housing (Golf, Golf Plus, Eos, Scirocco)	52
1.6 Removing and installing valve timing housing (Tiguan)	57
1.7 Removing and installing valve timing housing (Passat)	61
1.8 Removing and installing bracket for ancillaries	66
<b>2 Removing and installing sealing flanges and flywheel or drive plate</b>	<b>68</b>
2.1 Assembly overview	68
2.2 Removing and installing engine speed sender G28	69
2.3 Renewing crankshaft oil seal - belt pulley end	70
2.4 Removing and installing crankshaft pulley	72
2.5 Renewing crankshaft sealing flange - flywheel end	75
<b>3 Crankshaft</b>	<b>84</b>
3.1 Assembly overview	84
3.2 Pulling needle bearing out of and driving into crankshaft	85
3.3 Crankshaft dimensions	87
<b>4 Dismantling and assembling pistons and conrods</b>	<b>88</b>
4.1 Assembly overview	88
4.2 Checking piston	90
4.3 Separating new conrod	91



4.4	Piston and cylinder dimensions .....	91
4.5	Removing and installing pistons .....	92
4.6	Removing and installing oil spray jets .....	93
<b>15</b>	<b>- Cylinder head, valve gear .....</b>	<b>94</b>
<b>1</b>	<b>Cylinder head .....</b>	<b>94</b>
1.1	Assembly overview .....	94
1.2	Checking valve timing .....	97
1.3	Adjusting valve timing .....	99
1.4	Checking timing chain .....	108
1.5	Removing and installing timing chain and chain drive for oil pump .....	114
1.6	Removing and installing camshaft housing .....	122
1.7	Removing and installing cylinder head .....	128
1.8	Checking compression .....	131
<b>2</b>	<b>Repairing valve gear .....</b>	<b>134</b>
2.1	Assembly overview .....	134
2.2	Checking camshaft axial clearance .....	136
2.3	Removing and installing camshaft .....	136
2.4	Reworking valve seats .....	137
2.5	Checking valve guides .....	138
2.6	Renewing valve stem seals .....	139
<b>17</b>	<b>- Lubrication .....</b>	<b>141</b>
<b>1</b>	<b>Removing and installing parts of lubrication system .....</b>	<b>141</b>
1.1	Engine oil, oil capacities, engine oil specification .....	141
1.2	Assembly overview (▶ model year 2008) .....	141
1.3	Assembly overview (model year 2009 ▶) .....	144
1.4	Removing and installing oil sump .....	146
1.5	Removing and installing oil pump .....	149
1.6	Checking oil pressure and oil pressure switch .....	151
<b>19</b>	<b>- Cooling .....</b>	<b>154</b>
<b>1</b>	<b>Removing and installing parts of cooling system .....</b>	<b>154</b>
1.1	Assembly overview - parts of cooling system, body side .....	155
1.2	Assembly overview - parts of cooling system, engine side .....	157
1.3	Coolant hose connection diagram .....	158
1.4	Draining and adding coolant .....	159
1.5	Removing and installing radiator fan V7 and radiator fan 2 V177 (Golf, Golf Plus, Eos, Scirocco) .....	162
1.6	Removing and installing radiator fan V7 and radiator fan 2 V177 (Tiguan, Passat) .....	163
1.7	Checking cooling system for leaks .....	164
1.8	Removing and installing radiator (Golf, Golf Plus, Scirocco, Eos) .....	165
1.9	Removing and installing radiator (Tiguan, Passat) .....	167
1.10	Removing and installing auxiliary radiator for charge air system (Tiguan, Passat) .....	169
1.11	Removing and installing coolant pump .....	173
1.12	Removing and installing coolant circulation pump V50 .....	175
<b>20</b>	<b>- Fuel supply system .....</b>	<b>178</b>
<b>1</b>	<b>Safety precautions .....</b>	<b>178</b>
1.1	Safety regulations for working on fuel supply .....	178
1.2	Releasing pressure in high-pressure area .....	179
<b>2</b>	<b>Separating plug-in connectors .....</b>	<b>180</b>
<b>3</b>	<b>Fuel tank (Golf, Golf Plus, Scirocco) .....</b>	<b>183</b>
3.1	Assembly overview - fuel tank .....	183
3.2	Emptying fuel tank .....	184
3.3	Removing and installing fuel tank .....	187



<b>4</b>	<b>Fuel tank (Passat)</b> .....	<b>189</b>
4.1	Assembly overview - fuel tank .....	189
4.2	Emptying fuel tank .....	190
4.3	Removing and installing fuel tank .....	193
<b>5</b>	<b>Fuel tank (Eos)</b> .....	<b>197</b>
5.1	Assembly overview - fuel tank .....	197
5.2	Emptying fuel tank .....	199
5.3	Removing and installing fuel tank .....	201
<b>6</b>	<b>Fuel tank (Tiguan)</b> .....	<b>204</b>
6.1	Assembly overview - fuel tank (Tiguan) .....	204
6.2	Draining fuel tank (Tiguan) .....	206
6.3	Removing and installing fuel tank (Tiguan) .....	208
<b>7</b>	<b>Repairing fuel supply system (Golf, Golf Plus, Scirocco, Eos)</b> .....	<b>213</b>
7.1	Rules for cleanliness .....	213
7.2	Crash fuel shut-off .....	213
7.3	Removing and installing fuel delivery unit (Golf Plus, Golf, Scirocco, Eos) .....	214
7.4	Removing and installing fuel gauge sender G .....	216
7.5	Checking fuel pump .....	217
<b>8</b>	<b>Repairing fuel supply (Passat)</b> .....	<b>229</b>
8.1	Rules for cleanliness .....	229
8.2	Crash fuel shut-off .....	229
8.3	Removing and installing fuel delivery unit .....	230
8.4	Removing and installing fuel gauge sender G .....	233
8.5	Checking fuel pump .....	235
<b>9</b>	<b>Repairing fuel supply (Tiguan)</b> .....	<b>244</b>
9.1	Rules for cleanliness .....	244
9.2	Crash fuel shut-off .....	244
9.3	Removing and installing fuel delivery unit (Tiguan) .....	245
9.4	Removing and installing fuel gauge sender G (Tiguan) .....	247
9.5	Removing and installing suction-jet pump (Tiguan) .....	248
9.6	Removing and installing fuel gauge sender 2 G169 (Tiguan) .....	251
9.7	Removing and installing fuel pump control unit J538 (Tiguan) .....	251
9.8	Checking fuel pump (Tiguan) .....	253
<b>10</b>	<b>Repairing electronic power control (EPC)</b> .....	<b>262</b>
10.1	Assembly overview .....	262
10.2	Removing and installing accelerator pedal module .....	262
<b>11</b>	<b>Activated charcoal filter system (Golf, Golf Plus, Eos, Scirocco)</b> .....	<b>264</b>
11.1	Assembly overview (Golf, Golf Plus, Eos, Scirocco) .....	264
11.2	Checking fuel tank breather (Golf, Golf Plus, Eos, Scirocco) .....	265
11.3	Rules for cleanliness .....	265
<b>12</b>	<b>Activated charcoal filter system (Passat)</b> .....	<b>267</b>
12.1	Assembly overview .....	267
12.2	Checking fuel tank breather .....	268
12.3	Rules for cleanliness .....	269
<b>13</b>	<b>Activated charcoal filter system (Tiguan)</b> .....	<b>270</b>
13.1	Assembly overview (Tiguan) .....	270
13.2	Checking fuel tank breather (Tiguan) .....	271
13.3	Rules for cleanliness .....	272
<b>21</b>	<b>Turbocharging/supercharging</b> .....	<b>273</b>
<b>1</b>	<b>Exhaust turbocharger</b> .....	<b>273</b>
1.1	Assembly overview - turbocharger .....	273
1.2	Part I .....	275
1.3	Part II .....	276



1.4	Removing and installing turbocharger	277
1.5	Removing and installing compressor housing and turbine housing	282
1.6	Checking vacuum unit for turbocharger	286
1.7	Removing and installing vacuum unit for turbocharger	288
1.8	Adjusting vacuum unit for turbocharger	290
<b>2</b>	<b>Charge air system</b>	<b>297</b>
2.1	Assembly overview - charge air system	297
2.2	Removing and installing intake manifold charge air cooler	298
<b>24</b>	<b>Mixture preparation - injection</b>	<b>300</b>
<b>1</b>	<b>Injection system</b>	<b>300</b>
1.1	Assembly overview - parts I and II, intake manifold	300
1.2	Assembly overview - part I, intake manifold	302
1.3	Assembly overview - part II, intake manifold	303
1.4	Assembly overview - fuel rail with injectors	304
1.5	Assembly overview - air filter	304
1.6	Removing and installing air filter	305
1.7	Removing and installing throttle valve module J338	306
1.8	Cleaning throttle valve module J338	309
1.9	Removing and installing intake manifold	310
1.10	Assembly overview - high-pressure pump	311
1.11	Checking fuel pressure sender G247	312
1.12	Removing and installing high-pressure pump	315
1.13	Removing and installing injectors	319
1.14	Renewing Teflon seal and support washer on injector	322
1.15	Safety precautions	325
1.16	Rules for cleanliness	327
1.17	Technical data	327
<b>2</b>	<b>Engine control unit J623</b>	<b>328</b>
2.1	Removing and installing engine control unit J623 (Golf ▶ 2008, Eos)	328
2.2	Removing and installing anti-theft engine control unit J623 (Golf ▶ 2008, Eos ▶ 10.2008)	329
2.3	Removing and installing engine control unit J623 (Golf 2009 ▶)	331
2.4	Removing and installing anti-theft engine control unit J623 (Golf 2009 ▶, Eos 11.2008 ▶, Scirocco 10.2008▶, Passat 2011▶)	333
2.5	Removing and installing engine control unit J623 (Golf Plus)	335
2.6	Removing and installing anti-theft engine control unit J623 (Golf Plus)	336
2.7	Removing and installing engine control unit J623 (Passat 2006 ▶)	339
2.8	Removing and installing anti-theft engine control unit J623 (Passat 2006 ▶)	340
2.9	Removing and installing engine control unit J623 (Scirocco)	341
2.10	Removing and installing anti-theft engine control unit J623 (Scirocco ▶ 09.2008)	342
2.11	Removing and installing engine control unit J623 (Tiguan)	344
2.12	Removing and installing anti-theft engine control unit J623 (Tiguan)	345
<b>26</b>	<b>Exhaust system</b>	<b>348</b>
<b>1</b>	<b>Removing and installing parts of exhaust system</b>	<b>348</b>
1.1	Assembly overview - catalytic converter and attachments	348
1.2	Assembly overview - silencer with mountings (Golf, Golf Plus, Scirocco)	351
1.3	Assembly overview - silencer with mountings (Passat 2006 ▶)	352
1.4	Assembly overview - silencer with mountings (Passat 2011 ▶)	353
1.5	Assembly overview - silencer with mountings (Eos)	354
1.6	Assembly overview - silencer with mountings (Tiguan)	355
1.7	Removing and installing centre and rear silencers (Golf, Golf Plus, Scirocco, Eos)	355
1.8	Detaching centre and rear silencers (Passat)	357
1.9	Detaching centre and rear silencers (Tiguan)	359
1.10	Installation position and specified torque of clamp	360



<b>28 - Ignition system</b> .....	<b>362</b>
<b>1 Repairing ignition system</b> .....	<b>362</b>
1.1 Assembly overview - ignition system .....	362
1.2 Removing and installing ignition coils with output stage .....	363
1.3 Safety precautions .....	364
1.4 Test data, spark plugs .....	365

