



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number, engine data	1
<b>2 Safety instructions</b>	<b>3</b>
2.1 Safety precautions when working on fuel supply system	3
2.2 Safety precautions when working on vehicles with a Start/Stop system	3
2.3 Safety precautions during road tests in which test and measuring equipment is used	4
2.4 Safety precautions when working on cooling system	4
2.5 Safety precautions when working on ignition system	4
<b>3 Repair instructions</b>	<b>5</b>
3.1 Rules for cleanliness	5
<b>10 - Removing and installing engine</b>	<b>6</b>
<b>1 Removing and installing engine</b>	<b>6</b>
1.1 Removing engine	6
1.2 Securing engine on engine and gearbox support	14
1.3 Installing engine	14
<b>2 Assembly mountings</b>	<b>17</b>
2.1 Assembly overview - assembly mountings	17
<b>13 - Crankshaft group</b>	<b>18</b>
<b>1 Cylinder block (pulley end)</b>	<b>18</b>
1.1 Assembly overview - poly V-belt drive	18
1.2 Assembly overview - cylinder block (pulley end)	19
1.3 Removing and installing poly V-belt	21
1.4 Removing and installing ancillary bracket	22
1.5 Removing and installing belt pulley	23
1.6 Renewing crankshaft oil seal - belt pulley end	27
<b>2 Cylinder block, gearbox end</b>	<b>30</b>
2.1 Assembly overview - cylinder block, gearbox end	30
2.2 Renewing crankshaft oil seal - gearbox end	31
<b>3 Crankshaft</b>	<b>39</b>
3.1 Assembly overview - crankshaft	39
3.2 Crankshaft dimensions	40
3.3 Renewing needle bearing in crankshaft	40
<b>4 Pistons and conrods</b>	<b>42</b>
4.1 Assembly overview - pistons and conrods	42
4.2 Removing and installing pistons	43
4.3 Removing and installing oil spray jets	44
4.4 Checking piston and cylinder bore	46
4.5 Separating new conrod	47
<b>15 - Cylinder head, valve gear</b>	<b>48</b>
<b>1 Cylinder head</b>	<b>48</b>
1.1 Assembly overview - cylinder head	48
1.2 Removing and installing camshaft housing	51
1.3 Removing and installing cylinder head	56
1.4 Checking compression	59
<b>2 Cover for timing chain</b>	<b>62</b>
2.1 Removing and installing valve timing housing	62
<b>3 Chain drive</b>	<b>66</b>
3.1 Removing and installing timing chain and chain drive for oil pump	66



3.2	Checking valve timing	74
3.3	Adjusting valve timing	77
3.4	Checking timing chain	86
<b>4</b>	<b>Valve gear</b>	<b>92</b>
4.1	Assembly overview - valve gear	92
4.2	Measuring axial play of camshaft	94
4.3	Removing and installing camshaft	94
4.4	Removing and installing valve stem seals	95
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>97</b>
5.1	Reworking valve seats	97
5.2	Checking valve guides	98
5.3	Valve dimensions	99
<b>17</b>	<b>- Lubrication</b>	<b>100</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>100</b>
1.1	Assembly overview - sump / oil pump	100
1.2	Engine oil	103
1.3	Removing and installing oil sump	103
1.4	Removing and installing oil pump	105
<b>2</b>	<b>Oil filter, oil pressure switch</b>	<b>108</b>
2.1	Checking oil pressure and oil pressure switch	108
<b>19</b>	<b>- Cooling</b>	<b>110</b>
<b>1</b>	<b>Cooling system, coolant</b>	<b>110</b>
1.1	Coolant hose schematic diagram	110
1.2	Checking cooling system for leaks	111
1.3	Draining and filling coolant	113
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>117</b>
2.1	Assembly overview - thermostat	117
2.2	Removing and installing coolant pump	118
2.3	Removing and installing electric coolant pump	119
<b>3</b>	<b>Radiator, radiator fan</b>	<b>122</b>
3.1	Assembly overview - radiator/radiator fan	122
3.2	Removing and installing radiator	124
3.3	Removing and installing radiator fan V7 and radiator fan 2 V177	125
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>127</b>
<b>1</b>	<b>Turbocharger</b>	<b>127</b>
1.1	Assembly overview - turbocharger	127
1.2	Removing and installing turbocharger	131
1.3	Removing and installing compressor housing and turbine housing	136
1.4	Checking vacuum unit for turbocharger	140
1.5	Adjusting vacuum unit for turbocharger	142
1.6	Renewing vacuum unit for turbocharger	148
<b>2</b>	<b>Charge air system</b>	<b>151</b>
2.1	Assembly overview - charge air system	151
2.2	Removing and installing charge air cooler	152
<b>24</b>	<b>- Mixture preparation - injection</b>	<b>154</b>
<b>1</b>	<b>Injection system</b>	<b>154</b>
1.1	Assembly overview - fuel system	154
1.2	Releasing high pressure in fuel system	155
<b>2</b>	<b>Injectors</b>	<b>156</b>
2.1	Assembly overview - fuel rail with injectors	156
2.2	Removing and installing injectors	157



2.3	Renewing seals on injectors	160
<b>3</b>	<b>Air filter</b>	<b>165</b>
3.1	Assembly overview - air filter housing	165
3.2	Removing and installing air filter housing	166
<b>4</b>	<b>Intake manifold</b>	<b>167</b>
4.1	Assembly overview - intake manifold	167
4.2	Removing and installing intake manifold	168
4.3	Removing and installing throttle valve module J338	169
4.4	Cleaning throttle valve module	172
<b>5</b>	<b>Senders and sensors</b>	<b>174</b>
5.1	Checking fuel pressure sender G247	174
<b>6</b>	<b>Engine control unit</b>	<b>177</b>
6.1	Removing and installing engine control unit J623	177
6.2	Removing and installing engine control unit J623 with protective housing	178
<b>7</b>	<b>High-pressure pump</b>	<b>181</b>
7.1	Assembly overview - high-pressure pump	181
7.2	Removing and installing high-pressure pump	182
<b>26</b>	<b>Exhaust system</b>	<b>186</b>
<b>1</b>	<b>Exhaust pipes, silencers</b>	<b>186</b>
1.1	Assembly overview - silencers	186
1.2	Separating exhaust pipes, silencers	187
1.3	Installation position of clamp	188
<b>2</b>	<b>Emission control</b>	<b>190</b>
2.1	Assembly overview - emission control	190
<b>28</b>	<b>Ignition system</b>	<b>192</b>
<b>1</b>	<b>Ignition system</b>	<b>192</b>
1.1	Assembly overview - ignition system	192
1.2	Test data, spark plugs	193
1.3	Removing and installing ignition coils with output stage	194
1.4	Removing and installing engine speed sender G28	195



Scirocco 2015 ➤

4-cylinder injection engine (1.4 l direct injection engine, turbocharger) - Edition 07.2015

---