



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on ignition system	2
1.5 Safety precautions when working on the cooling system	2
2 Identification	3
2.1 Engine number/engine data	3
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 Foreign objects in engine	5
3.3 Contact corrosion	5
3.4 Routing and attachment of lines	5
3.5 Fitting radiator and condensers	6
3.6 Checking vacuum system	6
10 - Removing and installing engine	7
1 Removing and installing engine	7
1.1 Removing engine	7
1.2 Separating engine and gearbox	19
1.3 Securing engine on engine and gearbox support	20
1.4 Installing engine	22
2 Assembly mountings	25
2.1 Assembly overview - assembly mountings	25
2.2 Supporting engine in installation position	27
2.3 Removing and installing engine mounting	31
2.4 Removing and installing gearbox mounting	32
2.5 Removing and installing pendulum support	34
2.6 Checking adjustment of assembly mountings	35
2.7 Adjusting assembly mountings	35
3 Engine cover panel	38
3.1 Removing and installing engine cover	38
13 - Crankshaft group	39
1 Cylinder block (pulley end)	39
1.1 Assembly overview - cylinder block (pulley end)	39
1.2 Removing and installing poly-V belt	42
1.3 Removing and installing tensioner for poly V-belt	43
1.4 Removing and installing bracket for ancillaries	46
1.5 Removing and installing vibration damper	48
1.6 Removing and installing engine support	56
2 Cylinder block, gearbox end	58
2.1 Assembly overview - cylinder block, gearbox end	58
2.2 Removing and installing flywheel	59
2.3 Removing and installing sealing flange on gearbox side	61
3 Crankshaft	70
3.1 Assembly overview - crankshaft	70
3.2 Crankshaft dimensions	72
3.3 Allocation of main bearing shells	72
3.4 Renewing needle bearing in crankshaft	74
3.5 Measuring axial clearance of crankshaft	76



3.6	Measuring radial clearance of crankshaft	77
3.7	Removing and installing sender wheel	78
4	Balancer shaft	80
4.1	Assembly overview - balance shaft	80
4.2	Removing and installing balance shaft	83
5	Pistons and conrods	91
5.1	Assembly overview - pistons and conrods	91
5.2	Removing and installing pistons	95
5.3	Removing and installing oil spray jets	97
5.4	Checking pistons and cylinder bores	98
5.5	Separating new conrod	101
5.6	Checking radial clearance of conrods	101
15	Cylinder head, valve gear	103
1	Cylinder head	103
1.1	Assembly overview - cylinder head	103
1.2	Renewing oil non-return valve in cylinder head	107
1.3	Removing and installing cylinder head	108
1.4	Checking compression	125
1.5	Removing and installing vacuum pump	127
2	Cover for timing chain	129
2.1	Assembly overview - cover for timing chain	129
2.2	Removing and installing upper timing chain cover	131
2.3	Removing and installing timing chain cover (bottom)	134
2.4	Renewing seal for vibration damper	139
3	Chain drive	143
3.1	Assembly overview - camshaft timing chains	143
3.2	Removing and installing camshaft timing chain	144
3.3	Removing and installing drive chain for balance shaft	161
3.4	Checking valve timing	162
4	Valve gear	165
4.1	Assembly overview - valve gear	165
4.2	Removing and installing camshaft	168
4.3	Removing and installing camshaft control valve 1 N205	187
4.4	Measuring axial play of camshaft	187
4.5	Renewing valve stem seals	188
5	Inlet and exhaust valves	201
5.1	Checking valve guides	201
17	Lubrication	203
1	Sump, oil pump	203
1.1	Assembly overview - sump/oil pump	203
1.2	Removing and installing lower part of sump	206
1.3	Removing and installing oil pump	209
1.4	Removing and installing upper part of sump	211
1.5	Engine oil:	216
2	Engine oil cooler	218
2.1	Removing and installing engine oil cooler	218
3	Crankcase ventilation	220
3.1	Removing and installing oil separator	220
4	Oil filter, oil pressure switch	221
4.1	Assembly overview - oil filter/oil pressure switch	221
4.2	Removing and installing oil pressure regulating valve N428	223
4.3	Removing and installing oil pressure switch F1	223



4.4	Removing and installing oil pressure switch for reduced oil pressure F378	225
4.5	Checking oil pressure	226
19	Cooling	230
1	Cooling system/coolant	230
1.1	Connection diagram - coolant hoses	230
1.2	Draining and adding coolant	231
1.3	Checking cooling system for leaks	237
2	Coolant pump, regulation of cooling system	242
2.1	Assembly overview - coolant pump, thermostat	242
2.2	Assembly overview - electric coolant pump	245
2.3	Removing and installing electric coolant pump	246
2.4	Removing and installing coolant pump with thermostat housing	248
2.5	Removing and installing coolant pump on thermostat housing	250
2.6	Removing and installing thermostat	253
2.7	Removing and installing toothed belt for coolant pump	256
2.8	Renewing oil seal for coolant pump drive	259
2.9	Removing and installing coolant temperature sender G62	261
3	Coolant pipes	264
3.1	Assembly overview - coolant pipes	264
3.2	Removing and installing lower coolant pipes	264
3.3	Removing and installing upper coolant pipes	266
4	Radiator, radiator fan	270
4.1	Assembly overview - radiator/radiator fan	270
4.2	Removing and installing radiator	270
4.3	Removing and installing radiator cowl	271
4.4	Removing and installing radiator fan V7 and radiator fan 2 V177	273
21	Turbocharging/supercharging	275
1	Turbocharger	275
1.1	Assembly overview - turbocharger	275
1.2	Removing and installing turbocharger	280
1.3	Checking vacuum unit for turbocharger	287
1.4	Renewing vacuum unit for turbocharger	289
2	Charge air system	290
2.1	Schematic overview - charge air system	290
2.2	Assembly overview - charge air system	291
2.3	Assembly overview - charge-air hose connections	292
2.4	Removing and installing charge air cooler	293
2.5	Checking charge air system for leaks	295
24	Mixture preparation - injection	299
1	Injection system	299
1.1	Overview of fitting locations - injection system	299
2	Injectors	306
2.1	Assembly overview - fuel rail with injectors	306
2.2	Removing and installing injectors	308
2.3	Renewing seals on injectors	312
2.4	Cleaning injectors	314
3	Air filter	317
3.1	Assembly overview - air filter housing	317
3.2	Removing and installing air filter housing	319
4	Intake manifold	320
4.1	Assembly overview - intake manifold	320
4.2	Removing and installing intake manifold with fuel rail	322



4.3	Removing and installing fuel rail	329
4.4	Removing and installing throttle valve module J338	330
4.5	Cleaning throttle valve module	332
4.6	Checking intake manifold change-over	333
5	Senders and sensors	336
5.1	Assembly overview - actuator for structure-borne sound R214 and control unit for structure-borne sound J869	336
5.2	Removing and installing air mass meter G70	336
5.3	Removing and installing fuel pressure sender G247	337
5.4	Checking fuel pressure sender G247	339
6	Engine (motor) control unit	344
6.1	Removing and installing engine control unit J623	344
7	High-pressure pump	350
7.1	Assembly overview - high-pressure pump	350
7.2	Removing and installing high-pressure pump	352
26	- Exhaust system	355
1	Exhaust pipes and silencers	355
1.1	Assembly overview – silencers	355
1.2	Separating exhaust pipes from silencers	357
1.3	Aligning exhaust system free of stress	359
1.4	Installation position of clamp	360
1.5	Checking exhaust system for leaks	361
2	Emission control	362
2.1	Assembly overview – emission control	362
2.2	Removing and installing catalytic converter	364
3	Exhaust manifold	367
28	- Ignition system	368
1	Ignition system	368
1.1	Assembly overview - ignition system	368
1.2	Removing and installing ignition coils with output stage	369
1.3	Removing and installing knock sensor 1 G61	370
1.4	Removing and installing engine speed sender G28	371
1.5	Test data, spark plugs	372