



Contents

00 - Technical data	1
1 Basic instructions	1
2 Vehicle identification data	2
2.1 Vehicle identification number	2
2.2 Identification plate	3
2.3 Vehicle data sticker	3
3 Safety instructions	4
4 Moulded foam elements	5
5 Galvanized body parts, high- and higher-strength and hot-formed body panels	7
6 Laser welding	11
7 Gaps/shut lines	12
7.1 Body - front	12
7.2 Body - rear	14
8 Body dimensions	15
8.1 Body - front	15
8.2 Body - centre	18
8.3 Body - rear	22
8.4 Floor group - front	25
8.5 Floor group - centre	27
8.6 Floor group - rear	28
9 Alignment bracket set	31
9.1 Overview	31
10 Portal gauge	32
10.1 Overview - portal gauge	32
50 - Body - front	33
1 Renewing right bracket	33
1.1 Tools	33
1.2 Removing	33
1.3 Installing	35
2 Renewing left console	37
2.1 Tools	37
2.2 Removing	37
2.3 Installing	40
3 Renewing retaining bracket for subframe	43
3.1 Tools	43
3.2 Removing	43
3.3 Installing	44
4 Renewing bumper bracket	47
4.1 Tools	47
4.2 Removing	47
4.3 Installing	49
5 Renewing upper wheel housing longitudinal member	51
5.1 Tools	52
5.2 Removing	52
5.3 Installing	54
6 Renewing front wheel housing	59
6.1 Tools	60
6.2 Removing	60
6.3 Installing	62



7	Renewing front longitudinal member	70
7.1	Tools	71
7.2	Removing	71
7.3	Installing	73
8	Renewing front longitudinal member - part section	78
8.1	Tools	78
8.2	Removing	78
8.3	Installing	80
9	Repairing threads for securing subframe	82
9.1	Tools	83
9.2	Contents of thread repair kit	83
9.3	Repairing threads	84
51 - Body - centre		87
1	Renewing roof - vehicles with no panorama tilting sunroof	87
1.1	Tools	88
1.2	Removing	89
1.3	Installing	91
2	Renewing roof - vehicles with panorama tilting sunroof	103
2.1	Tools	104
2.2	Removing	105
2.3	Installing	107
3	Renewing roof side member	119
3.1	Tools	120
3.2	Removing	120
3.3	Installing	122
4	Renewing front roof cross member - vehicles with no panorama tilting sunroof	127
4.1	Tools	128
4.2	Removing	128
4.3	Installing	129
5	Renewing front roof cross member - models with panorama tilting sunroof	131
5.1	Tools	132
5.2	Removing	132
5.3	Installing	133
6	Renewing roof reinforcing - vehicles with panorama tilting sunroof	135
6.1	Tools	136
6.2	Removing	136
6.3	Installing	137
7	Renewing rear roof cross member	139
7.1	Tools	140
7.2	Removing	140
7.3	Installing	141
8	Renewing A-pillar	143
8.1	Tools	144
8.2	Removing	144
8.3	Installing	147
9	Renewing A-pillar reinforcement	154
9.1	Tools	155
9.2	Removing	155
9.3	Installing	156
10	Renewing inner B-pillar	162
10.1	Tools	163
10.2	Removing	163
10.3	Installing	164



11	Renewing B-pillar reinforcement	167
11.1	Tools	168
11.2	Removing	169
11.3	Installing	170
12	Renewing outer side member	178
12.1	Tools	179
12.2	Removing	179
12.3	Installing	180
13	Renewing outer mounting for seat outer cross member	185
13.1	Tools	186
13.2	Removing	187
13.3	Installing	188
14	Renewing inner mounting for seat inner cross member	191
14.1	Tools	192
14.2	Removing	193
14.3	Installing	194
15	Renewing front side member reinforcement	197
15.1	Tools	198
15.2	Removing	198
15.3	Installing	199
16	Renewing rear side member reinforcement	203
16.1	Tools	204
16.2	Removing	204
16.3	Installing	205
17	Renewing seat middle cross member	209
17.1	Tools	210
17.2	Removing	210
17.3	Installing	211
53 - Body - rear		214
1	Renewing rear cross panel	214
1.1	Tools	215
1.2	Removing	215
1.3	Installing	217
2	Renewing tail light mounting	220
2.1	Tools	221
2.2	Removing	221
2.3	Installing	222
3	Renewing lower corner part	225
3.1	Tools	226
3.2	Removing	226
3.3	Installing	227
4	Renewing sealing channel - part section	230
4.1	Tools	231
4.2	Removing	231
4.3	Installing	232
5	Renewing cross panel member	235
5.1	Tools	236
5.2	Removing	236
5.3	Installing	237
6	Renewing lower C-pillar reinforcement	240
6.1	Tools	241
6.2	Removing	242
6.3	Installing	243



7	Renewing rear longitudinal member - part section	246
7.1	Tools	247
7.2	Removing	248
7.3	Installing	249
8	Renewing side panel - part section	252
8.1	Tools	253
8.2	Removing	253
8.3	Renewing sealing plate for side panel	256
8.4	Installing	260
9	Renewing outer wheel housing	266
9.1	Tools	267
9.2	Removing	267
9.3	Installing	268
10	Renewing rear part of luggage compartment floor	273
10.1	Tools	274
10.2	Removing	274
10.3	Installing	275