

# Workshop Manual Golf, Jetta, Scirocco.

Running Gear.

<b>Golf</b>	<b>1974</b>	<b>▶</b>	<b>1983</b>
<b>Golf Cabriolet</b>	<b>1979</b>	<b>▶</b>	
<b>Jetta</b>	<b>1981</b>	<b>▶</b>	<b>1983</b>
<b>Scirocco</b>	<b>1974</b>	<b>▶</b>	
<b>Caddy</b>	<b>1983</b>	<b>▶</b>	

May 1985 Edition.

Service Department.

## Workshop Manual Golf, Jetta, Scirocco.

Running Gear.

May 1985 Edition.

Supersedes the March 1979 Edition  
of the Golf/Scirocco Manual.

---

**The manual is divided into separate booklets which can be ordered separately and allocated on the shop floor as required.**

This manual is valid from the start of production of

Scirocco – March 1974

Golf – May 1974

Jetta – August 1979

Caddy – October 1982

It describes all the operations which require special instructions to ensure satisfactory work.

### Layout of booklets

Each booklet has the contents listed according to repair operations and items to make it easy to find the information required. In the repair operations list, the special tools and workshop equipment required for each operation are given. This list also shows which tools have Audi alternative tools and vice versa.

The technical data is followed by a description of the repair operations. Where practical, each operation is preceded by an exploded view which also contains all

the main repair instructions. This is supplemented, where necessary, by photographs – which are referred to in the exploded view – giving details of the fitting positions of parts or showing special tools in use. If a definite sequence has to be followed when dismantling and assembling a component, the exploded view is followed by a description of the main steps of the work sequence. Any adjustments required are also explained.

### Workshop bulletins

Workshop bulletins will be allocated to the individual booklets and should be filed at the back of the booklet concerned. To remind you that bulletins have been published, the manual pages should be marked by hand with the bulletin number as explained in the bulletin heading.

### Fault finding

Please see the appropriate file for general fault finding instructions.

Instructions on the elimination of current defects are given in the "Fault finding handbook".

**Technical information should always be made available to all foremen and mechanics because compliance with the instructions given is essential to ensure vehicle roadworthiness and safety. In addition, the normal safety precautions to be observed when working on motor vehicles are also applicable.**

---

# Contents

---

## ALPHABETICAL LIST

	Page		Page
Anti-roll bar, front removing and installing	13	Coil springs rear, removing and installing	33
Anti-roll bar, rear removing and installing	33	Coil springs rear, allocation	37
Axle beam rear, removing and installing	33	Coil springs front, removing and installing	6, 17
Axle beam, checking (rear axle installed)	34	Coil springs front, allocation	21, 22
<b>Ball joint, removing and installing (wishbone removed)</b>	6, 12	Cover for steering wheel, removing and installing	111, 113, 114
Ball joint, checking (installed)	11	Caliper front, removing and installing	51, 56, 61
Brake system, bleeding	109	Caliper front, repairing	88, 91, 93
Brake shoes rear, removing and installing	76, 77, 80	Constant velocity joints, removing and installing	23
Brake shoes front, removing and installing	67	Constant velocity joints, checking	23
Brake lines, renewing	106	<b>Drive shafts, lubricating</b>	23
Brake linings, rear removing and installing	76, 77, 80	Drive shaft, dimensions	24
Brake linings, front removing and installing	67	Drive shafts, removing and installing	6
Brake push-rod, adjusting	70	<b>Front wheel brakes, adjusting</b>	67
Brake fluid, renewing	109	Front wheel toe, adjusting	48
Brake pressure regulator – load sensitive/pressure dependent		Front wheel toe, measuring	48
● checking operation	97	Front wheel alignment, adjusting	48
● pressure test	97	Front and rear wheel, alignment measuring	48, 49
● adjusting	97	Front wheel alignment, measuring (setting figures)	48
Brake pressure regulator – Caddy	99	<b>Handbrake, adjusting</b>	83
Brake discs front, skimming	51, 56, 61	Handbrake lever, removing and installing	83
Brake discs front, removing and installing	51, 56, 61	Handbrake lever, dismantling and assembling	83
Brake backplate rear, removing and installing	76, 77, 80	<b>Linkage for brake servo, removing and installing (RHD vehicles)</b>	74
Brake drums rear, removing and installing	76, 77, 80	<b>Master cylinder, removing and installing</b>	70, 71, 72, 74
Brake drums front, removing and installing	66	Master cylinder, servicing	
Brake drums rear, skimming	76, 77, 80	● vehicles without servo	85
Brake drums, front skimming	66	● vehicles with servo	86
Bellows for universal joint shaft (steering column), removing and installing	111, 113, 116	<b>Pedal, removing and installing</b>	70, 71, 72, 74
Boots for constant velocity joints, removing and installing	23	Power assisted steering	121
Bellows for steering box, removing and installing	116	<b>Rear wheel brakes, adjusting</b>	76, 77
Bush for brake pedal, removing and installing	70, 71, 72, 73	Rear axle repairing, Caddy	38

	Page		Page
Rear axle mounting with bushes for axle beam, removing and installing	33	Universal joint shaft (steering), removing and installing	111, 113, 114
Rear wheel alignment, measuring (setting figures)	48	Universal joint shaft (steering), identification	112
<b>Servo, removing and installing</b>	71, 72, 101	<b>Vacuum pump for servo, repairing</b>	103
Servo, service installation	104, 106	Vane pump, removing and installing	126
Servo, checking	101	<b>Wheels, removing and installing</b>	43
Splash shield front, removing and installing	51, 56, 61	Wheels, balancing	43
Steering column bearing lower, removing and installing	111, 113, 114	Wheel cylinder rear, removing and installing	76, 77, 80
Steering box, removing and installing	116	Wheel cylinder, repairing	96
Steering box, adjusting	116	Wheel bearings rear, removing and installing	40
Steering box, renewing	116	Wheel bearings front, removing and installing	6
Steering box support, renewing	119	Wheel bearing housing front, removing and installing	6
Steering wheel, removing and installing	111, 113, 114	Wheel bearings rear, adjusting	41
Steering column, removing and installing	111, 113, 114	Wheel hub front, removing and installing	6
Steering lock, removing and installing	111, 113, 114	Wheel bolts	13
Steering column switch, repairing	111, 113, 114	Wishbone bonded rubber bushes, removing and installing	6
Steering column tube with bracket for pedals, renewing	111, 113, 114	Wishbone front, removing and installing	6
Shock absorber front, removing and installing	6, 17	Wishbones front, renewing	6
Suspension strut rear, removing and installing	33	Wishbones front, checking (installed)	11
Suspension strut front, removing and installing	6	Wishbones front, renewing welded nuts	14
Suspension strut front, dismantling and assembling	17		
Suspension strut bearing, removing and installing	6		
Shock absorbers rear, removing and installing	33		
Shock absorbers front, removing and installing	6, 17		
Stub axle rear, removing and installing	33		
Stub axle rear, checking (removed)	41		
<b>Tyre inflation pressures</b>	43		
Tie rods, removing and installing	116		
Tie rod ends, removing and installing	116		
<b>Technical data</b>			
● Brakes	1		
● Wheels, tyres	2		
● Running gear, steering	3		
Tyre pressure	43		

