Workshop Manual Golf, Jetta, Scirocco.

Electrical System.

February 1986 Edition.

Supersedes the August 1980 Edition.

The manual is divided into separate booklets which can be ordered individually and allocated on the shop floor as required.

This booklet is valid from the start of production of the

Scirocco - March 1974 to April 1981

Golf - May 1974

Jetta - August 1979

Caddy — October 1982

It describes all the operations which require special instructions to ensure satisfactory work.

Layout of booklets

Each booklet has the contents listed according to repair operations and items to make it easy to find the information required.

The technical data is followed by a description of the repair operations. Where practical, each operation is preceded by an exploded view which also contains all the main repair instructions. This is supplemented, where

necessary, by photographs — which are referred to in the exploded view — giving details of the fitting positions of parts or showing special tools in use. If a definite sequence has to be followed when dismantling and assembling a component, the exploded view is followed by a description of the main steps of the work sequence. Any adjustments required are also explained.

Workshop Bulletins

Workshop bulletins will be allocated to the individual booklets and should be filed at the back of the booklet concerned. To remind you that bulletins have been published, the manual pages should be marked by hand with the bulletin number as explained in the bulletin heading.

Fault finding

General fault finding instructions are given in the appropriate manual.

Instructions on the elimination of current defects are given in the "Service Handbook".

Technical information should always be made available to all foremen and mechanics because compliance with the instructions given is essential to ensure vehicle roadworthiness and safety. In addition, the normal safety precautions to be observed when working on motor vehicles are also applicable.

Rep. Group	Title/Contents	Page
27	Starter, Current Supply	1
	Checking battery	1
	Charging batteryBoost charging/Starting	1
	assistance • Battery — Maintenance	2
	tips	2
	 Removing and installing cell plugs 	3
	 Removing and installing battery 	4
	Battery discharges	4
	 Starter does not turn 	5
	 Starter motor turns too slowly to start engine 	6
	Repairing starter	8/10
	Alternator warning lamp	
	does not light up when ignition is switched on	16
	 Alternator warning lamp 	, ,
	does not go out when speed increases	18
	Checking alternator and	10
	voltage regulator with	40
	tester V.A.G 1315 A • Checking resistance for	19
	pre-exciter current switch	
	(from 8.80 ▶)	20
1	 Removing and installing alternator (petrol engines) 	21
	• Removing and installing	
	alternator (4 cylinder	20
	Diesel) • Securing alternator wiring	22 25
	 Repairing 35 A and 55 A 	
	alternator (Bosch)	27
	 Repairing 45 A and 65 A alternator (Bosch) 	28
	Repairing 35 A, 55 A and	
	65 A alternator (Motorola) • Repairing 45 A alternator	33
	(Motorola)	38
90	Instruments, Radio	43
	Repairing dash insert	43
	 Voltage stabilizer and 	1
	printed circuit	48 50
	Checking fuel gaugeFuel or coolant tempera-	อบ
	ture gauges indicating in-	_
	correctly or not at all	51
	 Checking coolant temperature gauge 	52
	 Checking fuel consump- 	
	tion gauge	58
L		

Rep. Group	Title/Contents	Page
	Removing and installing dash insert Dash insert - VDO	59 59
	 Dash insert (Golf/Jetta only from model year 81) Dash insert with optical and acoustic oil pressure 	60
	warning (from model year 83) • Dash insert with multi	64
	function indicator (MFI) from model year 83) Removing and installing	73
	multi function indicator (MFI) Golf Convertible from 9.84) • Checking multi function	76
	indicator (MFI) (Golf Convertible from 9.84) • Removing and installing	77
	fuel gauge sender Removing and installing	83
	speedo cable • Removing and installing	84
	speedo drive gear • Horn system defective	85
	(up to model year 82) • Dual horn system defective (up to 7.77)	86 89
	tive (up to 7.77) • Dual horn system defective (model year 78)	91
92	Windscreen Wiper and Washer System	94
	Repairing wiper system Repairing windscreen	94
	washer Repairing rear wiper and	95
	washer • Removal and installation	96
	of wiper rubbers • Service installation of intermittent facility with	101
	automatic wash-wipe • Wiper motor does not	102
·	work at all (up to model year 79) • Wiper motor does not	102
	work at stage II (up to model year 79) • Wiper motor does not	104
	work on intermittent operation (up to 7.77) • Wiper motor does not	106
	work on intermittent operation (up to model year 79)	107

Rep. Group	Title/Contents	Page
	 Intermittent operation cannot be switched off up to 7.77) Intermittent operation cannot be switched off 	109
	(up to model year 79) • Rear wiper does not	111
	work (up to 7.77) • Rear wiper does not	113
,	work (model year 78) • Rear wiper works conti-	115
	nuously (model year 78) • Repairing headlight	117
	washer system	118
94	Exterior Switches, Lights • Repairing steering co-	122
	lumn switch (up to 7.76) Repairing steering co-	122
	lumn switch (from 8.76) • Repairing steering co-	125
	lumn switch (from 8.77) • Turn signals, left or right,	128
	defective (up to model year 82) • Emergency lights defec-	130
	tive (up to model year 82) • Low beam left and right	132
	(high beam left and right) not working (up to 7.77) • Low beam left (right) not	133
	working (up to model year 82) Side light and tail light	135
	left (side light and tail light right) not working (up to model year 82) • Lighting for ashtray, clock, dash insert, fresh air controls, cigarette	136
	lighter and emergency light switch not working	137
	Headlight flasher not working (up to 7.77)	138
	 Reversing lights not working (up to model year 82) Low beam left and right 	139
	(high beam left and right) not working (from model year 78) • Headlight flasher not	141
	working (from model year 78)	143
	Removing and installing rear lights (Golf)	144

Rep. Group	Title/Contents	Page
	 Renewing headlight bulb, rectangular headlight — Scirocco Removing and installing switches, warning lamp for dual circuit brakes and handbrake Removing and installing emergency light switch, switch for heated rear window, switch for fog 	144
	lights and rear fog light	145
97	Wiring	146
	 Removing and installing front left loom (up to 2.76) Removing and installing 	146
	front right loom (up to 2.76) • Routing of front left and	148
	front right looms (up to 2.76)	150
	 Removing and installing instrument panel loom Routing of wiring behind 	151
	dash (only Golf LHD from 3.78)	155
	Removing and installing rear loom	157
	Loom for heated rear window and wiper — Scirocco only Removing and installing	158
	front wiring looms (from 2.76)	159
	 Removing and installing generator wiring loom 	161
	• Installing supression filter for radiator fan	161
	Fitting sequence for earth connectionsRemoving and installing	162
	relay plate/fuse box (up to 7.77) • Removing and installing	163
	relay plate/fuse box (up to model year 82) • Removing and installing	165
	fuse box/relay plate (Golf/Jetta only from model year 83)	166