

# Index

Rep. Group	Title/Contents	Page
27	<b>Starter, Current Supply</b>	1
	• Checking battery	1
	• Charging battery	1
	• Quick charging/Starting boost	2
	• Battery – handling	2
	• Removing and installing cell plugs	3
	• Removing and installing battery	4
	• Battery discharges	4
	• Starter does not turn	5
	• Starter motor turns too slowly to start engine	6
	• Starter R+I	7
	• Repairing starter	8
	• Alternator warning lamp does not light up when ignition is switched on	14
	• Alternator warning lamp does not go out when speed increases	16
	• Checking alternator and voltage regulator with tester V.A.G 1315 A	17
	• Checking resistance for pre-exciter current circuit	18
	• Removing and installing alternator (1.3 ltr. engine)	19
	• Removing and installing alternator (1.6 ltr. engine)	20
	• Removing and installing alternator (1.5 ltr. engine)	21
	• Removing and installing alternator pulley	21
	• Repairing alternators 45 and 65 A (Bosch)	22
	• Repairing alternator 45 A (Motorola)	26
	• Repairing alternator 65 A (Motorola)	30

Rep. Group	Title/Contents	Page
90	<b>Instruments, Radio</b>	36
	• Repairing dash panel insert → 7.81	36
	• Repairing dash panel insert 8.81 → 7.83	44
	• Checking oil pressure warning device 8.82 →	52
	• Repairing control unit for optical and acoustic oil pressure warning (Model year 83)	55
	• Repairing multi-function indicator (MFI) → 8.84	64
	• Repairing dash panel insert (8.83 →)	66
	• Repairing control unit for optical and acoustic oil pressure warning (8.83 →)	74
	• Repairing multi-function indicator (9.84 →)	83
	• Checking consumption indicator	90
	• Checking gear change indicator	91
	• Consumption indicator – fault finding	94
	• Consumption indicator – fault finding for vehicles with automatic gearbox	95
	• Removing and installing dash panel insert	96
	• Removing and installing speedometer cable	97
	• Removing and installing fuel gauge sender	98
	• Checking fuel and temperature gauges – fault finding	99
	• Removing and installing aerial	100

Rep. Group	Title/Contents	Page
90	<b>Windscreen wiper and washer system</b>	<b>101</b>
	• Repairing wiper system	101
	• Removing and installing wiper rubbers	102
	• Repairing rear wiper and washer system	103
	• Repairing headlight washer system	105
94	<b>Exterior lights and switches</b>	<b>107</b>
	• Repairing steering column switch	107
	• Removing and installing rectangular headlights	111
	• Removing and installing dual headlights	112
	• Removing and installing fog lights	113
	• Removing and installing tail lights	116
97	<b>Wiring</b>	<b>118</b>
	• Removing and installing dash panel loom	118
	• Removing and installing front left loom	119
	• Removing and installing front right loom	120
	• Removing and installing rear loom	121
	• Routing of starter wiring	122
	• Removing and installing relay plate/fuse box (Model year 82)	123
	• Removing and installing relay plate/fuse box (8.82 →)	125