



Contents

1	Engine overview	1
2	Maintenance services	2
2.1	Information on fixed service	2
2.2	Service table	6
2.3	Service tables for Argentinian and Mexican export markets MY 2021	14
2.4	Service tables for Argentinian, Mexican and Chilean export markets MY 2022►	21
2.5	Service tables for LAM export markets MY 2022►	29
3	General comments	37
3.1	Lifting of the vehicle with a workshop lift or trolley jack	37
3.2	Maintenance plan records	38
3.3	Adverse operating conditions	39
3.4	Vehicle diagnostic tester - connect	39
3.5	Vehicle identification number	40
3.6	Hot-weather countries	41
3.7	Countries in which petrol does not meet the EN 228 standard's specifications	41
3.8	Engine identification letters and engine number	42
3.9	Countries with high dust rates	44
3.10	Identification plate	45
3.11	Reduced replacement intervals for spark plugs	46
4	Descriptions of works	51
4.1	Ball joints of the suspension arms, anti-roll bars and bearings: visually check for damages	52
4.2	Automatic headlight and fixed cornering light control: check operation	53
4.3	Battery: check firm seating of the terminals and for damages and leaks	55
4.4	Battery: check with battery tester (Always consult the Workshop Manual)	56
4.5	Battery charge level: read - send online diagnostics protocol	57
4.6	Passenger airbag: key operated switch and "On/Off function" control	57
4.7	Tyres: check the state of the tread and its depth; register tread depth	59
4.8	Brake system and clutch fluid: renew	62
4.9	Brake system and shock absorbers: visually check for damages and leaks	69
4.10	Brake fluid level: check	70
4.11	Brake pad thickness and front and rear brake discs condition: check	72
4.12	Window closing: check for proper operation	76
4.13	Vehicle self-diagnosis system: read events memory	77
4.14	Power transmission, axles: check constant velocity joints (internal and external), fastenings, play and also check for damaged or leaking boots	77
4.15	Internal and external body: perform a visual check for corrosion	77
4.16	Poly-V belt: replace	78
4.17	Poly-V belt: check conditions	78
4.18	Cooling system: Check the antifreeze and coolant level	80
4.19	Air filter: Clean the case and replace the filtering element	83
4.20	Multipurpose additive for petrol: add	91
4.21	Engine and engine compartment components (upper and lower areas): visually inspect for leaks and damages	92
4.22	Engine oil level: check	92
4.23	Drain the engine oil and renew the oil filter	93
4.24	Engine oil: feeding amounts and specifications (►MY20)	98
4.25	Engine oil: feeding amounts and specifications (MY21►)	98
4.26	Sunroof	98
4.27	Perform a road test	100
4.28	Wheel fastening screws: retighten based on specified torque	100
4.29	Tyre pressure indicator system: adjust after correction of the tyre pressures	102
4.30	Window wiper and washer system: verify for proper operation, check nozzles for damages, adjust if necessary	104
4.31	Halogen headlight adjustment: check and adjust if necessary	107



4.32	LED headlight adjustment: check and adjust if necessary	109
4.33	Fog light adjustment: check and adjust if necessary	112
4.34	Sunroof drains and drain valves: check and clean, if necessary	114
4.35	Service interval display: reset	115
4.36	Service interval indicator: recode	120
4.37	Steering rod: check play, fastening and sealing bellows	121
4.38	Dust and pollen filter: clean the body and replace the air filter element	121
4.39	Shipping mode: deactivate	122
4.40	Transport securing devices (if existing): remove the fastening rings	122
4.41	Date and time: adjust	124
4.42	Floor: visually inspect for damages to the floor protection, floor covering, piping system arrangement and placement of caps	127
4.43	Camshaft toothed belt: check conditions	127
4.44	Camshafts' toothed belt and tensioning roller: replace	130
4.45	Coolant pump toothed belt: check conditions	130
4.46	Coolant pump toothed belt: replace	137
4.47	Fuel filter: replace	137
4.48	Spark plugs: replace	137
5	Glossary	149
6	--- Change history ---	151