



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1</b> <b>— Change history —</b>	<b>1</b>
<b>2</b> <b>Safety indications</b>	<b>2</b>
2.1    Safety measures when working on vehicles with Start-Stop system	2
2.2    Safety measures for work in the auxiliary frame	2
<b>3</b> <b>Assessment of crashed vehicles</b>	<b>3</b>
3.1    Crashed vehicles - running gear assessment checklist	3
<b>4</b> <b>Disposal of gas struts</b>	<b>5</b>
4.1    Disposal of front gas struts	5
4.2    Disposal of rear gas struts	6
<b>5</b> <b>Repair instructions</b>	<b>9</b>
5.1    Shock absorbers - leaks	9
5.2    Shock absorbers - noises	9
5.3    Shock absorbers - test	10
5.4    Steering box	10
5.5    Seals, seal rings	11
5.6    Screws, nuts	11
5.7    Electric components	11
5.8    Raise the axle of the unloaded vehicle with coil spring	12
<b>40 - Front suspension</b>	<b>18</b>
<b>1</b> <b>Front axle</b>	<b>18</b>
1.1    Front axle - general assembly overview	18
<b>2</b> <b>Auxiliary frame</b>	<b>21</b>
2.1    Auxiliary frame - general assembly overview	21
2.2    Auxiliary frame without steering rack - remove and install	21
2.3    Auxiliary frame with steering rack - remove and install	24
2.4    Auxiliary frame - position	30
2.5    Auxiliary frame - Lower	34
<b>3</b> <b>Anti-roll bar</b>	<b>39</b>
3.1    Anti-roll bar - general assembly overview	39
3.2    Anti-roll bar - remove and install	40
3.3    Coupling rod - remove and install	42
<b>4</b> <b>Lower wishbone, swivel joint</b>	<b>44</b>
4.1    Lower wishbone, swivel joint - Assembly overview	44
4.2    Lower wishbone - remove and install	45
4.3    Check the drive shaft	49
4.4    Swivel guide - remove and install	49
4.5    Lower front metal/rubber bearings of the wishbone - replace	53
<b>5</b> <b>Suspension strut, upper wishbone</b>	<b>61</b>
5.1    Suspension strut, upper wishbone - Assembly overview	61
5.2    Suspension strut - remove and install	63
5.3    Suspension strut - repair	73
<b>6</b> <b>Wheel roller bearing</b>	<b>76</b>
6.1    Wheel bearing - general overview of assembly	76
6.2    Wheel bearing case - remove and install	78
6.3    Hub and wheel bearing - remove and install	85
<b>7</b> <b>Drive shaft</b>	<b>94</b>
7.1    Drive shaft - assembly overview	94
7.2    Drive shaft - remove and install	100
7.3    Joint - remove and install	126



7.4	Drive shaft heat shield - remove and install	130
7.5	Drive shaft - assemble and disassemble	131
7.6	External constant velocity joint - check	151
7.7	Internal constant velocity joint - check (Only for model 1.6 MSI Manual)	152
<b>42</b>	<b>Rear suspension</b>	<b>155</b>
<b>1</b>	<b>Axle beam</b>	<b>155</b>
1.1	Axle beam - assembly overview	155
1.2	Axle beam - replace the bonded rubber bush	155
<b>2</b>	<b>Suspension strut/shock absorber, spring</b>	<b>165</b>
2.1	Suspension strut/shock absorber, spring - assembly overview	165
2.2	Shock absorber - remove and install	166
2.3	Shock absorber - repair	168
2.4	Spring - remove and install	170
<b>3</b>	<b>Rear axle</b>	<b>173</b>
3.1	Rear axle - overview	173
3.2	Rear axle - remove and install	174
<b>4</b>	<b>Wheel roller bearing</b>	<b>180</b>
4.1	Wheel bearing - general overview of assembly	180
4.2	Wheel hub/wheel bearing unit - remove and install	181
<b>43</b>	<b>Self-levelling suspension</b>	<b>189</b>
<b>1</b>	<b>Vehicle level sender</b>	<b>189</b>
1.1	Rear vehicle level sender - assembly overview	189
1.2	Rear vehicle level sender G76 – remove and install	189
<b>44</b>	<b>Wheels, tyres, vehicle geometry</b>	<b>192</b>
<b>1</b>	<b>Tyre monitoring system</b>	<b>192</b>
1.1	Tyre Pressure Monitoring System - system description	192
<b>2</b>	<b>Axle geometry check</b>	<b>194</b>
2.1	Axle geometry check instructions	194
2.2	Preliminary testing conditions	195
2.3	Preparation for alignment	195
2.4	Nominal vehicle geometry alignment values	197
2.5	Place the vehicle in initial position to check geometry	198
2.6	Axle alignment work procedure	199
2.7	Axle geometry measurement requirement	200
2.8	Vehicle data tag	201
2.9	Adjust front axle camber angle	201
2.10	Adjust the rear axle camber angle	203
2.11	Adjust the rear axle toe-out	203
2.12	Adjust front axle toe-out angle	203
2.13	Check the maximum steering angle	204
<b>3</b>	<b>Tightening torques of wheel bolts</b>	<b>206</b>
<b>48</b>	<b>Steering</b>	<b>207</b>
<b>1</b>	<b>Steering wheel</b>	<b>207</b>
1.1	Steering wheel - assembly overview	207
1.2	Steering wheel - remove and install	207
<b>2</b>	<b>Steering column</b>	<b>210</b>
2.1	Steering column - assembly overview	210
2.2	Steering column - remove and install	212
2.3	Handling and transporting the steering column	221
2.4	Intermediate steering column axle - remove and install	224
2.5	Steering column - repair	225



---

2.6	Power steering control unit J500 - remove and install .....	227
<b>3</b>	<b>Sensors</b> .....	<b>233</b>
3.1	Steering angle sensor G85 - remove and install .....	233
<b>4</b>	<b>Steering rack</b> .....	<b>234</b>
4.1	Steering rack - general overview of assembly .....	234
4.2	Steering rack - remove and install .....	237
4.3	Track rod - remove and install .....	243
4.4	Track rod ball joint - remove and install .....	247