



Contents

00 - Technical data	1
1 — Change history —	1
2 Safety instructions	2
2.1 Safety measures for work on vehicles with Start-Stop system	2
2.2 Safety precautions during a test drive with measuring and testing equipment	2
3 Repair instructions	3
3.1 Cleanliness rules	3
3.2 General Notes	3
3.3 Contact corrosion	3
3.4 Cable routing	3
4 Battery	5
4.1 Battery - general guidelines	5
4.2 Battery Types	5
27 - Starter, current supply, CCS	6
1 Battery	6
1.1 Battery A - installation overview	6
1.2 Battery A - remove and install	7
1.3 Battery A - disconnect and connect	10
1.4 Battery Console A - remove and install	13
1.5 Battery - check	15
1.6 Battery - charging	15
1.7 Earth cable with Battery control unit J367 - remove and install	15
1.8 Battery control unit J367 - adjust	16
2 Alternator	17
2.1 Generator (Alternator c) - assembly overview	17
2.2 Generator (Alternator c) - remove and install	18
2.3 Alternator - check	23
2.4 Poly-V belt pulley - remove and install	24
2.5 Voltage regulator - remove and install	33
3 Starter	37
3.1 Starter - assembly overview	37
3.2 Starter - remove and install	38
4 Cruise control system (GRA)	44
90 - Gauges, instruments	45
1 Instrument cluster	45
1.1 Digital Cockpit - assembly overview	45
1.2 Dash panel KX2 - remove and install.	45
2 Horn	51
2.1 Horn - assembly overview	51
2.2 Treble tone horn H2 and Bass tone horn H7 - remove and install	51
92 - Windscreen wash/wipe system	53
1 Windscreen wiper system	53
1.1 Windscreen wiper system - assembly overview	53
1.2 Wiper arms - adjust resting position	55
1.3 Window wiper blade - remove and install	55
1.4 Wiper arm - remove and install	56
1.5 Windscreen wiper arms - adjust	58
1.6 Wiper motor V - remove and install	60
1.7 Rain and light sensor G397 - remove and install	61



2	Windscreen washer system	66
2.1	Windscreen washer system - assembly overview	66
2.2	Washer water reservoir - remove and install	67
2.3	Windscreen washer fluid level sender - remove and install	69
2.4	Windscreen washer pump - remove and install	70
2.5	Spray jets - remove and install	71
2.6	Spray nozzles - adjust	72
3	Rear window wiper system	73
3.1	Rear window wiper system - assembly overview	73
3.2	Rear wiper blade - remove and install	74
3.3	Rear window wiper arm - remove and install	74
3.4	Rear window wiper arm - adjust	76
3.5	Rear window wiper motor V12- remove and install	76
4	Rear window washer system	79
4.1	Rear window washer system - assembly overview	79
4.2	Washer water reservoir - remove and install	80
4.3	Rear window washer pump - remove and install	80
4.4	Washer jet - remove and install	80
4.5	Washer jet - adjust	80
5	Washer fluid lines	82
5.1	Washer fluid lines - repair	82
94	Lights, bulbs, switches - exterior	83
1	Headlights	83
1.1	Headlights - assembly overview	83
1.2	Headlight - remove and install	87
1.3	Halogen headlight (twin) - adjust	91
1.4	Headlight - correct alignment position	91
1.5	Front turn signal bulb M5/M7 - replace	93
1.6	Headlight housing repair kit	94
1.7	Convert right-hand traffic headlight to left-hand traffic headlight	97
1.8	Convert left-hand traffic headlight to right-hand traffic headlight	97
1.9	Headlight beam range control motor V48 / V49 - remove and install	98
1.10	Dipped beam headlight bulb - remove and install	103
1.11	Main beam headlight bulb M30/M32 - remove and install	106
1.12	Daytime vehicle operation light - Remove and Install	108
1.13	Daytime running light LED module L176/L177 - remove and install	109
1.14	LED headlight output module 1 A27/A31 - remove and install	110
2	Fog lights	112
2.1	Fog lights - Assembly overview	112
2.2	Fog lights - remove and install	112
2.3	Fog light bulb L22 / L23 - remove and install	112
2.4	Fog lights - adjust	113
3	Turn signal in the exterior mirror - remove and install	114
4	Tail lights	115
4.1	Tail lights - assembly overview	115
4.2	Tail light lamp support - remove and install	116
4.3	Tail light - remove and install	117
4.4	Tail light installation position - adjust	118
4.5	Tail light bulb M2/M4 - remove and install	119
4.6	Brake light bulb and tail light bulb M21 / M22 - remove and install	119
4.7	Reverse gear light bulb M16/M17 - remove and install	120
4.8	Turn signal bulb - remove and install	121
5	License plate bulb	122



5.1	License plate bulb X4/X5 - remove and install	122
5.2	Number plate light X4 / X5 - remove and install	123
6	Auxiliary brake light	124
6.1	Auxiliary brake light - assembly overview	124
6.2	Auxiliary brake light - remove and install	124
7	Access and departure authorization	126
7.1	Access and departure authorization system - overview of fitting locations	126
7.2	Keyless access authorization system (Kessy) - overview of fitting locations	127
7.3	Interface for entry and start system J518 - remove and install	128
7.4	Front door handle contact sensor G605 / G606 - remove and install	130
7.5	Interior aerial 1 for entry and start system R138 - remove and install	130
7.6	Interior aerial 2 for entry and start system R139 - remove and install	131
7.7	Aerial for authorization for access and starting switch, left hand side R200- remove and install	132
7.8	Aerial for authorization for access and starting switch, right hand side R201- remove and install	132
7.9	Rear bumper aerial for entry and start system R136 - remove and install	132
8	Steering column switch module	134
8.1	Steering column switch module - assembly overview	134
8.2	Lock cylinder - remove and install	136
8.3	Ignition key withdrawal lock solenoid N376 - remove and install	139
8.4	Ignition/starter switch - remove and install	139
8.5	Steering column switch module J527 - remove and install	140
8.6	Steering column electronics control unit J527 - remove and install	143
8.7	Flashing/turn light switch E2 - remove and install	145
8.8	Cruise control system switch E45 - remove and install	147
8.9	Window wiper timer switch E22 - remove and install	147
8.10	Base support of the steering column combined switch - remove and install	147
8.11	Steering lock set - remove and install	148
9	Automatic headlight range control	151
9.1	Automatic headlight range control - assembly overview	151
9.2	Main beam headlight range control unit - remove and install	152
96	Lights, bulbs, switches - interior	153
1	Lights	153
1.1	Dash panel lights - assembly overview	153
1.2	Front door lights - assembly overview	154
1.3	Centre console lights - assembly overview	155
1.4	Luggage compartment lights - overview of fitting locations	156
1.5	Headliner lights - overview of fitting locations	157
1.6	Glove compartment light W6 - remove and install	159
1.7	Glove compartment light W6 bulb - replace	160
1.8	Front footwell light K268/K269 - remove and install	161
1.9	Front footwell light bulb L151 / L152 - remove and install	162
1.10	“SAFE” central locking system indicator lamp K133 - remove and install	162
1.11	Storage compartment light bulb L120 - remove and install	163
1.12	Interior door handle light bulb L146/L147 - remove and install	164
1.13	Left dash panel background light bulb L229 - remove and install	165
1.14	Right dash panel background light bulb L230 - remove and install	165
1.15	Centre dash panel background light bulb L231 - remove and install	166
1.16	Selector lever position display Y26 - remove and install	166
1.17	Luggage compartment light W3 - remove and install	167
1.18	Luggage compartment light bulb W3 - replace	167
1.19	Front interior light W1/W13/W19 - remove and install	168
1.20	Rear interior light W43 - replace	172
1.21	Rear reading light W11/W12 - remove and install	173



2	Control elements	174
2.1	Dash panel control elements - assembly overview	174
2.2	Front door control elements - assembly overview	175
2.3	Rear door control elements - assembly overview	176
2.4	Centre console control elements - assembly overview	177
2.5	Luggage compartment control elements - assembly overview	178
2.6	Headliner control elements - assembly overview	179
2.7	Rotary light switch EX1 - remove and install	181
2.8	Headlight beam range adjustment control E102 - remove and install	182
2.9	Parking aid button E266 - remove and install	183
2.10	Parking aid switch E581 - remove and install	183
2.11	Start/Stop function switch E693 - remove and install	183
2.12	Driving mode selection button E735 - remove and install	184
2.13	Front passenger airbag activation/deactivation button K145 - remove and install	184
2.14	Module 1 of the centre console EX23- remove and install	184
2.15	Hazard light switch EX3 - remove and install	185
2.16	Glove compartment light switch E26 - remove and install	185
2.17	Exterior mirror adjustment EX11 - remove and install	186
2.18	Driver door window control unit EX36 - remove and install	187
2.19	Front passenger window control switch EX27 - remove and install	188
2.20	Driver side interior locking button for central locking system E308 - remove and install	188
2.21	Contact switch F2/F3 - remove and install	189
2.22	Rear door window control unit EX28/EX29 - remove and install	189
2.23	Contact switch F10/F11 - remove and install	190
2.24	Starter button E378 - remove and install	190
2.25	Rear lid contact switch - remove and install	191
2.26	Front reading/background light - remove and install	191
2.27	Reading lighting switch - remove and install	194
3	Anti-theft alarm system	197
3.1	Interior monitoring - assembly overview	197
3.2	Anti-theft alarm sensor G578 - remove and install	197
4	Immobilizer	199
4.1	Immobilizer control unit - remove and install	199
4.2	Immobilizer reading coil - remove and install	199
5	12-volt socket, cigarette lighter	201
5.1	Cigarette lighter U1 - remove and install	201
5.2	Socket box light bulb L42 - remove and install	201
5.3	Rear cigarette lighter light bulb L32 - remove and install	201
5.4	U- Socket - remove and install	201
97 - Wiring		202
1	Relay carrier, fuse holder, electronic boxes	202
1.1	Relay carrier, fuse holder, E-Box - assembly overview	202
1.2	Fuse holder A SA - assembly overview	204
1.3	E-Box in engine compartment - remove and install	205
1.4	Relay carrier and Fuse holder B - remove and install	208
1.5	Relay carrier and fuse box carrier behind the dash board, driver side - remove and install	209
1.6	Fuse carrier A SA - remove and install	212
2	Control units	215
2.1	Control units - assembly overview	215
2.2	Control unit for the on-board electrical system J519 - remove and install	215
2.3	Support of the On-board supply control unit J519 - remove and install	217
2.4	Support of the Parking aid control unit J446 - remove and install	217
3	Connector connections	219
3.1	Wiring harnesses and connections - repair	219



4	Connector housings - unlock and disassemble	220
5	Aerial cables - repair	221
6	Fibre optic cables	222
7	Vehicle diagnostic, testing and information system	223