



Contents

00 - Technical data	1
1 — Change history —	1
2 Safety indications	3
2.1 Safety measures for work in vehicles with Start-Stop system	3
2.2 Safety measures for activities with pyrotechnical components	4
2.3 Storage, transport and disposal of airbags, belt tensioners and battery separation units (pyrotechnical components)	5
2.4 Additional safety instructions for the side airbag	6
2.5 Additional safety instructions for the curtain airbag	6
2.6 Safety instructions for collision sensors (pressure sensors) of the front side airbag	7
2.7 Additional safety instructions for works in the seat-occupied recognition system to deactivate the front passenger's airbag - country-specific version	7
2.8 Replacing pyrotechnical, electrical, and mechanical components of the restraint system after accidents	8
2.9 Airbag fastening parts after an accident - check	10
2.10 Accident without airbag triggering	10
2.11 Seat belts - check	11
2.12 Seat belt webbing - check	11
2.13 Automatic belt retractor (blocking effect) - check	12
2.14 Visual inspection of the belt latch	13
2.15 Check belt latch operation	13
2.16 Belt guides and tabs - check	13
2.17 Fastening parts and fastening points after an accident - check	13
2.18 Child seat restraint system for additional child seats (not for the driver seat belt), country- specific version - check	14
2.19 Child seat anchor after an accident - check	14
2.20 Internal rearview mirror with automatic anti-glare - safety instructions	15
3 Repair instructions	16
3.1 Contact corrosion	16
3.2 Cable routing and fastening	16
68 - Interior equipment	17
1 Storage compartment/covers	17
1.1 Storage compartment/covers - assembly overview	17
1.2 Dash panel cover on the driver side - Assembly overview	19
1.3 Steering column lining - assembly overview	20
1.4 Glove box - assembly overview	21
1.5 Handbrake lever lining - assembly overview	22
1.6 Storage compartment and reading light on the passenger side and/or reading light on the driver side - assembly overview	23
1.7 Upper steering column lining - remove and install	23
1.8 Lower steering column lower lining - remove and install	24
1.9 Glove box - remove and install	25
1.10 Glove box lid - remove and install	26
1.11 Glove compartment cover in service position	27
1.12 Glove box cover restraining element - remove and install	28
1.13 Dash panel cover on the driver side - remove and install	28
1.14 Headliner storage compartment - remove and install	30
2 Equipment	31
2.1 Sun visor - assembly overview	31
2.2 Sun visor - remove and install	32
2.3 Sun visor centre mount bearing - remove and install	33
3 Centre console	35



3.1	Centre console - assembly overview	35
3.2	Rear centre console lining - remove and install	38
3.3	Centre console – upper cover – remove and install	41
3.4	Front centre console lining in the footwell area - remove and install	42
3.5	Centre console - remove and install	43
3.6	Console cover – remove and install	46
3.7	Centre console bracket - remove and install	47
3.8	Control unit equipment – remove and install	47
4	Front centre armrest	49
4.1	Front centre armrest - assembly overview	49
5	Interior mirror	50
5.1	Interior mirror - assembly overview	50
5.2	Interior mirror - remove and install	52
69	Passenger protection	56
1	Seat belts	56
1.1	Seat belt and fastening points - assembly overview and locations	56
1.2	Front three-point seat belt - assembly overview	58
1.3	Rear exterior three-point seat belt - assembly overview	59
1.4	Rear centre three-point seat belt - assembly overview	60
1.5	Front belt latch - assembly overview	61
1.6	Rear belt latch - assembly overview	62
1.7	Front three-point seat belt - remove and install	62
1.8	Belt height adjuster - remove and install	66
1.9	Front seat belt guide - remove and install	67
1.10	Rear three-point seat belt - remove and install	67
1.11	Rear seat belt guide - remove and install	69
1.12	Front belt fitting - remove and install	70
1.13	Rear exterior seat belt fitting - remove and install	70
1.14	Front belt latch - remove and install	71
1.15	Rear seat belt latch - remove and install	72
2	Child seat fittings	74
2.1	Rear child seat fastening points — assembly overview	74
2.2	Rear child seat anchors - remove and install	74
3	Airbag system	77
3.1	Airbag system - assembly overview	77
4	Airbag control unit	79
4.1	Airbag control unit - assembly overview	79
4.2	Airbag control unit J234	79
5	Driver-side airbag	83
5.1	Driver-side airbag - assembly overview	83
5.2	Airbag unit with igniter - remove and install	84
5.3	Airbag connector - replace	87
6	Passenger-side airbag	89
6.1	Passenger-side airbag - assembly overview	89
6.2	Passenger-side airbag unit with igniter - remove and install	89
6.3	Passenger airbag deactivation key switch - remove and install	93
7	Side airbags	94
7.1	Front side airbag - assembly overview	94
7.2	Front side airbag unit with igniter - remove and install	94
8	Curtain airbags	97
8.1	Curtain airbag – Assembly overview	97
8.2	Curtain airbag with igniter – remove and install	98
9	Airbag collision sensors	101



9.1	Airbag collision sensors - assembly overview	101
9.2	Front airbag collision sensor G190 - remove and install	102
9.3	Front side airbag collision sensor G179 / G180 - remove and install	105
9.4	Rear side airbag collision sensor G256 / G257 - remove and install	107
10	Seat belt use recognition sensor	110
10.1	Passenger seat-occupied sensor G128 - remove and install	110
70	Trim, insulation	111
1	Front door lining	111
1.1	Front door lining - assembly overview	111
1.2	Front door lining - remove and install	112
1.3	Mirror cover lining - remove and install	118
1.4	Interior door handle - remove and install	119
2	Rear door trims	121
2.1	Rear door lining - assembly overview	121
2.2	Rear door lining - remove and install	121
3	Dash panel	126
3.1	dash panel - assembly overview	126
3.2	Dashboard side cover - remove and install	127
3.3	Dash panel cover - remove and install	128
3.4	Dash panel unit gap cover - remove and install	129
3.5	Dash panel - remove and install	129
3.6	Outer dash panel vents - remove and install	133
3.7	Centre vent - remove and install	135
3.8	Heating side vent - remove and install	135
4	Dash panel cross member	137
4.1	Dash panel cross member - assembly overview	137
4.2	Dash panel cross member - remove and install	137
4.3	Impact bar - remove and install	142
5	Internal lining	144
5.1	Internal lining – assembly overview	144
5.2	Sill panel trim lining - assembly overview	146
5.3	A-pillar lining - assembly overview	147
5.4	B Pillar covering - assembly overview	148
5.5	Pillar C covering - assembly overview	150
5.6	Steering housing lining - assembly overview	151
5.7	Footwell and foot rest lining - assembly overview	152
5.8	Sill panel trim lining - remove and install	152
5.9	A-pillar lining - remove and install	155
5.10	A-pillar gap lining - remove and install	159
5.11	B-pillar lining - remove and install	160
5.12	Pillar C covering - remove and install	163
5.13	Wheel housing trim - remove and install	164
5.14	Foot rest - remove and install	165
5.15	Floor lining - remove and install	166
6	Luggage compartment lining	168
6.1	Luggage compartment cover - assembly overview	168
6.2	Luggage compartment trim – temporary spare wheel – assembly overview	170
6.3	Lower rear door trim – assembly overview	170
6.4	Rear lid lower lining - remove and install	171
6.5	Luggage compartment cover support – remove and install	172
6.6	Luggage compartment side lining - remove and install	174
6.7	Rear panel lining - remove and install	176
6.8	Luggage compartment trim support – remove and install	177
7	Moulded headliner	179



7.1	Moulded headliner - assembly overview	179
7.2	Moulded headliner – remove and install	179
7.3	Body roof reinforcement - remove and install	182
72	- Seat frames	185
1	Front seat - assembly overview	185
1.1	Seat versions - assembly overview	185
2	Front seat	186
2.1	Electrical and electronic components - assembly overview	186
2.2	Front seat - assembly overview	188
2.3	Front backrest - assembly overview	188
2.4	Head restraint - assembly overview	190
2.5	Seat frame - assembly overview	191
2.6	Seat height adjustment - assembly overview	193
2.7	Front seat - remove and install	193
2.8	Airbag adapter - connect and disconnect	196
2.9	Seat height adjustment lever - remove and install	197
2.10	Seat height adjuster - remove and install	198
2.11	Lumbar support adjuster - remove and install	200
2.12	Backrest adjuster - remove and install	202
2.13	Front backrest - remove and install	203
2.14	Head restraint - remove and install	205
2.15	Head restraint guide - remove and install	205
2.16	Seat frame - remove and install	205
2.17	Seat lining - remove and install	207
2.18	Install the front seat in the seat repair bracket	210
3	Rear seats	211
3.1	Individual seats — assembly overview	211
3.2	Backrest lock - remove and install	212
3.3	Head restraint and head restraint guide - assembly overview	213
3.4	Rear backrest - assembly overview	214
3.5	Back seat seating - remove and install	215
3.6	Head restraint - remove and install	217
3.7	Head restraint guide - remove and install	218
3.8	Back seat backrest - remove and install	219
3.9	Locking mechanism lining - remove and install	221
3.10	Rear backrest catch - remove and install	222
3.11	Internal support pin - remove and install	223
74	- Seat - padding, covers	225
1	Front seat padding and lining	225
1.1	Seat frame padding and lining - assembly overview	225
1.2	Backrest padding and lining - assembly overview	226
1.3	Seat frame lining and padding - remove and install	226
1.4	Backrest lining and padding - remove and install	228
1.5	Seat frame lining and padding - separate	231
1.6	Backrest lining and padding - separate	232
2	Rear seat lining and padding	235
2.1	Seat lining and padding - assembly overview	235
2.2	Rear seat lining and padding - remove and install	237
2.3	Seat lining and padding - separate	239