



## Contents

<b>00 - Technical data</b>	<b>1</b>
1    — Change history —	1
<b>50 - Body - front</b>	<b>2</b>
1 <b>Front end</b>	<b>2</b>
1.1 Front end with complementary parts - assembly overview	2
1.2 Front end with complementary parts - remove and install	4
1.3 Front end with complementary parts - service position	6
2 <b>Mudguard</b>	<b>11</b>
2.1 Front wing - assembly overview	11
2.2 Front wing - remove and install	12
3 <b>Bulkhead</b>	<b>17</b>
3.1 Upper bulkhead panel - assembly overview	17
3.2 Plenum chamber cover - remove and install	17
<b>55 - Bonnet, rear lid</b>	<b>20</b>
1 <b>Bonnet</b>	<b>20</b>
1.1 Bonnet - assembly overview	20
1.2 Operating cable - assembly overview	22
1.3 Bonnet - remove and install	22
1.4 Bonnet - adjust	25
1.5 Bonnet latch - remove and install	28
1.6 Bonnet lock - adjust	30
1.7 Bonnet latch actuating lever - remove and install	32
1.8 Bonnet striker - remove and install	34
1.9 Bonnet striker - adjust	35
1.10 Bonnet hinge - remove and install	37
1.11 Bonnet trim - remove and install	38
1.12 Bonnet stay - remove and install	40
1.13 Bowden cable - remove and install	41
2 <b>Rear lid</b>	<b>43</b>
2.1 Rear lid - assembly overview	43
2.2 Rear lid - remove and install	45
2.3 Rear lid - adjust	49
2.4 Adjustment striker - remove and install	51
2.5 Adjustment striker - adjust	52
2.6 Rear lid lock - remove and install	54
2.7 Rear lid lock activation - remove and install	56
2.8 Rear lid hinge - remove and install	58
2.9 Rear lid stop - remove and install	61
2.10 Rear lid striker - adjust	62
2.11 Rear lid trim - remove and install	64
2.12 Rear lid struts - remove and install	65
2.13 Rear lid shock absorber - depressurize	67
3 <b>Fuel reservoir nozzle compartment and lid set</b>	<b>69</b>
3.1 Tank flap cup - assembly overview	69
3.2 Fuel tank nozzle compartment and lid set - remove and install	69
3.3 Fuel tank cap - remove and install	73
3.4 Fuel tank cap locking motor V155 - remove and install	73
<b>57 - Front doors, door components, central locking</b>	<b>75</b>
1 <b>Front door</b>	<b>75</b>



1.1	Front door - assembly overview	75
1.2	Front door - remove and install	78
1.3	Front door - adjusting	82
1.4	Front door striker - adjust	84
1.5	Door arrester - remove and install	86
<b>2</b>	<b>Assembly parts</b>	<b>88</b>
2.1	Assembly parts - assembly overview	88
2.2	Front door external handle and lock - assembly overview	90
2.3	Internal front door cover - remove and install	92
2.4	Front door striker - remove and install	94
2.5	Lock cylinder cap - remove and install	96
2.6	Cap without lock cylinder - remove and install	98
2.7	Lock cylinder - remove and install	102
2.8	External door handle - remove and install	105
2.9	External handle support - remove and install	110
2.10	Front door lock - remove and install	112
2.11	Internal front door trim - remove and install	117
<b>3</b>	<b>Central locking system</b>	<b>120</b>
3.1	Central locking - general assembly overview	120
3.2	Ignition key battery - remove and install	123
3.3	Ignition key cover - remove and install	125
<b>58</b>	<b>Rear doors, door components</b>	<b>127</b>
<b>1</b>	<b>Rear door</b>	<b>127</b>
1.1	Rear door - assembly overview	127
1.2	Rear passenger door - remove and install	130
1.3	Rear passenger door - adjust	134
1.4	Rear door striker - adjust	136
1.5	Door arrester - remove and install	138
<b>2</b>	<b>Assembly parts</b>	<b>141</b>
2.1	Assembly parts - assembly overview	141
2.2	Rear door external handle and lock - assembly overview	143
2.3	Rear door inner cover - remove and install	145
2.4	Rear door striker - remove and install	147
2.5	Cap without lock cylinder - remove and install	149
2.6	External door handle - remove and install	153
2.7	External handle support - remove and install	155
2.8	Rear door lock - remove and install	158
2.9	External rear door trim - remove and install	162
2.10	Rear door internal trim - remove and install	163
<b>60</b>	<b>Sunroof</b>	<b>166</b>
<b>1</b>	<b>Sunroof</b>	<b>166</b>
1.1	Sunroof - assembly overview	166
1.2	Sunroof seals - assembly overview	168
1.3	Front glass panel - remove and install	168
1.4	Rear glass panel - remove and install	171
1.5	Sunroof panel - adjust	176
1.6	Rear panel seal - remove and install	179
1.7	Windbreak - remove and install	184
1.8	Sliding sunroof activation motor V1 - remove and install	188
1.9	Sun blind motor V260 - remove and install	190
1.10	Sun blind movement control unit J394 - remove and install	192
1.11	Sliding sunroof movement control unit J245 - remove and install	193
1.12	Sun blind - remove and install	194



1.13	Assembly frame - remove and install	198
1.14	Manual activation	202
<b>2</b>	<b>Sunroof drain hoses</b>	<b>204</b>
2.1	Sunroof drain hoses - assembly overview	204
2.2	Water drain hoses - clean	204
2.3	Sunroof drainage hoses - remove and install	206
<b>63</b>	<b>- Bumpers</b>	<b>209</b>
<b>1</b>	<b>Front bumper</b>	<b>209</b>
1.1	Front bumper cover - assembly overview	209
1.2	Front protector support - assembly overview	211
1.3	Front bumper protector - remove and install	213
1.4	Front cover support - remove and install	217
1.5	Support of the parking aid device sensor - install	220
<b>2</b>	<b>Rear bumper</b>	<b>229</b>
2.1	Rear bumper protector - assembly overview	229
2.2	Rear protector support - assembly overview	230
2.3	Rear bumper protector - remove and install	231
2.4	Rear protector support - remove and install	234
2.5	Support of the parking aid device sensor - install	235
<b>64</b>	<b>- Glazing</b>	<b>245</b>
<b>1</b>	<b>Repair instructions</b>	<b>245</b>
1.1	Minimum adhesive curing time	245
1.2	Damaged windows - repair	245
1.3	Assembly instructions and material for bonded windows	246
1.4	Stickers for engraving the VIS number on the windows (only for Brazil) - supply	247
1.5	Undamaged windows - prepare for install	248
1.6	New glass - prepare for install	248
1.7	Body flange - prepare to install the window	250
1.8	Adhesive residue cleaning	251
<b>2</b>	<b>Windscreen</b>	<b>252</b>
2.1	Windscreen - assembly overview	252
2.2	Windscreen - remove and install	253
<b>3</b>	<b>Rear window</b>	<b>258</b>
3.1	Rear window - assembly overview	258
3.2	Rear window - remove and install	258
<b>4</b>	<b>Door window glass</b>	<b>263</b>
4.1	Front door window glass - assembly overview	263
4.2	Rear door window glass - assembly overview	263
4.3	Rear door fixed window - assembly overview	264
4.4	Front door window glass - remove and install	265
4.5	Rear door window glass - remove and install	269
4.6	Rear door fixed window - remove and install	273
<b>5</b>	<b>Window drive mechanism</b>	<b>277</b>
5.1	Front door latch operation mechanism - assembly overview	277
5.2	Rear door latch operation mechanism - assembly overview	277
5.3	Front door window mechanism motor - remove and install	278
5.4	Front door window drive mechanism - remove and install	281
5.5	Rear door window mechanism motor - remove and install	284
5.6	Rear door window drive mechanism - remove and install	286
<b>6</b>	<b>Window channels and trim strips</b>	<b>290</b>
6.1	Front door window channel - remove and install	290
6.2	Front door window external trim - remove and install	292
6.3	Front door window internal trim - remove and install	294



6.4	Rear door window channel - remove and install	295
6.5	Rear door window exterior trim - remove and install	298
6.6	Rear door window internal trim - remove and install	299
<b>66</b>	<b>Exterior equipment</b>	<b>301</b>
<b>1</b>	<b>Front grid</b>	<b>301</b>
1.1	Radiator grille - assembly overview	301
1.2	Front bonnet - remove and install	301
<b>2</b>	<b>Roof spoiler</b>	<b>304</b>
2.1	Roof spoiler - assembly overview	304
2.2	Roof spoiler - remove and install	304
<b>3</b>	<b>Trims and linings</b>	<b>310</b>
3.1	Windscreen lower trim - assembly overview	310
3.2	Wheel housing trims - assembly overview	311
3.3	Rear lid outer trim - assembly overview	311
3.4	Side member trim - assembly overview	312
3.5	Windscreen lower trim - remove and install	313
3.6	Wheel housing trim - remove and install	316
3.7	Rear lid outer trim - remove and install	322
3.8	Side member trim - remove and install	324
3.9	Rear door outer trim - remove and install	326
3.10	A-pillar exterior trim - remove and install	333
3.11	B-pillar exterior trim - remove and install	334
3.12	Exterior side member trim - remove and install	338
<b>4</b>	<b>Underbody trim</b>	<b>341</b>
4.1	Engine lower lining - assembly overview	341
4.2	Floor lower lining - assembly overview	342
4.3	Underbody cross piece - assembly overview	342
4.4	Underbody trim - remove and install	343
4.5	Central tunnel underbody trim - remove and install	344
4.6	Underfloor covering extension - dismantling and assembling	345
4.7	Removing and installing the underfloor covering	346
4.8	Underbody cross piece - remove and install	348
<b>5</b>	<b>Roof rack</b>	<b>350</b>
5.1	Roof rack - assembly overview	350
5.2	Roof rack - remove and install	350
<b>6</b>	<b>External rear-view mirror</b>	<b>352</b>
6.1	External rear-view mirror - assembly overview	352
6.2	Exterior rear-view mirror - remove and install	354
6.3	Exterior mirror glass - remove and install	356
6.4	Exterior mirror adjustment unit - remove and install	358
6.5	Exterior mirror glass cover - remove and install	360
6.6	Exterior mirror trim - remove and install	362
6.7	Turn signal - remove and install	364
<b>7</b>	<b>Wheel housing liner</b>	<b>366</b>
7.1	Front wheel housing liner - assembly overview	366
7.2	Rear wheel housing liner - assembly overview	367
7.3	Front wheel housing liner - remove and install	367
7.4	Rear wheel housing liner - remove and install	369
<b>8</b>	<b>Lettering and badges</b>	<b>371</b>
8.1	Adhesive lettering - remove and install	371
8.2	Rear lid lettering	372
8.3	Side letterings	375
8.4	Front badge - remove and install	377
8.5	Rear badge - replace	379



---

<b>9</b>	<b>Heat shield</b> .....	<b>382</b>
9.1	Heat shield - assembly overview .....	382
9.2	Heat shield for the centre tunnel - remove and install .....	383
9.3	Heat shield for the fuel tank region - remove and install .....	384
9.4	Heat shield for the rear silencer - remove and install .....	385