



Contents

00 - Technical data	1
1 Basic instructions	1
1.1 Original joint	1
1.2 Joining techniques	1
2 Vehicle identification data	3
2.1 Vehicle identification number (VIN) - localization	3
2.2 Identification plate	3
2.3 Vehicle data – PR number	4
3 Safety indications	5
4 Moulded foam inserts	6
5 Galvanized body parts, high and very high strength and hot pre shaped body panels	8
6 Laser welding	11
7 Clearance measurements	12
7.1 Front body section	12
7.2 Central body section	13
7.3 Rear body section	15
8 Body dimensions	18
8.1 Front body section	18
8.2 Central body section	20
8.3 Rear body section	24
8.4 Body measurements of the floor panel	25
50 - Body - front	29
1 Overview of parts	29
2 Console (right-hand side) - replace	30
2.1 Tools	31
2.2 Remove	31
2.3 Install	32
3 Repair the assembly mountings fastening thread	36
3.1 M12x1.5 Heli-coil thread repair set VAS 6058	37
3.2 Thread - repair	38
4 Front bumper support - replace	42
4.1 Tools	43
4.2 Remove	43
4.3 Install	44
5 Bonnet hinge support - replace	47
5.1 Tools	48
5.2 Remove	48
5.3 Install	49
6 Studs - replace	52
51 - Body - centre	54
1 Overview of parts	54
2 Roof - replace	55
2.1 Tools	56
2.2 Remove	56
2.3 Install	60
3 Front roof cross member - replace	71
3.1 Tools	72
3.2 Remove	72



3.3	Install	73
4	Rear roof cross member - replace	76
4.1	Tools	77
4.2	Remove	77
4.3	Install	78
5	Roof cross member - replace	82
5.1	Tools	83
5.2	Remove	84
5.3	Install	85
6	Pillar A - replace	90
6.1	Tools	91
6.2	Moulded foam inserts	92
6.3	Remove	92
6.4	Install	93
7	Replace the upper A-pillar reinforcement (partial part)	98
7.1	Tools	99
7.2	Moulded foam inserts	99
7.3	Remove	99
7.4	Install	102
8	A-pillar reinforcement - replace	112
8.1	Tools	113
8.2	Moulded foam inserts	113
8.3	Remove	113
8.4	Install	114
9	B-pillar - replace	119
9.1	Tools	121
9.2	Identification plate	121
9.3	Moulded foam inserts	122
9.4	Remove	122
9.5	Install	123
10	B-pillar reinforcement - replace	128
10.1	Tools	129
10.2	Identification plate	129
10.3	Moulded foam inserts	130
10.4	Remove	130
10.5	Install	132
11	B-pillar reinforcement (section) - replace	136
11.1	Tools	137
11.2	Identification plate	137
11.3	Moulded foam inserts	138
11.4	Remove	138
11.5	Install	140
12	External lower longitudinal member - replace	150
12.1	Tools	151
12.2	Identification plate	151
12.3	Moulded foam inserts	153
12.4	Remove	153
12.5	Install	154
13	Lower longitudinal member reinforcement - replace	159
13.1	Tools	160
13.2	Moulded foam inserts	160
13.3	Remove	160
13.4	Install	162
14	Inner seat cross member housing - replace	167



14.1	Tools	168
14.2	Remove	168
14.3	Install	169
15	Outer seat cross member housing - replace	172
15.1	Tools	173
15.2	Remove	173
15.3	Install	174
53 - Body - rear		180
1	Overview of parts	180
2	Rear cover - replace	181
2.1	Tools	182
2.2	Remove	182
2.3	Install	184
3	Final cross member - replace	190
3.1	Tools	191
3.2	Remove	191
3.3	Install	192
4	Tail light cluster housing - replace	197
4.1	Tools	198
4.2	Remove	198
4.3	Install	199
5	Luggage compartment - replace	204
5.1	Tools	205
5.2	Moulded foam inserts	205
5.3	Remove	205
5.4	Install	207
6	Floor plate - replace	211
6.1	Tools	212
6.2	Remove	212
6.3	Install	213
7	Rear side member end plate - replace	217
7.1	Tools	218
7.2	Remove	218
7.3	Install	219
8	Front longitudinal member (partial part) - replace	222
8.1	Tools	223
8.2	Remove	223
8.3	Install	224
9	Rear side member (partial part - second separating cut) - replace	228
9.1	Tools	229
9.2	Moulded foam inserts	229
9.3	Remove	229
9.4	Install	231
10	Permitted separating cuts in the side panel	241
11	Side panel (partial part) - replace	242
11.1	Tools	243
11.2	Moulded foam inserts	244
11.3	Remove	244
11.4	Install	246
12	External wheel housing liner - replace	251
12.1	Tools	252
12.2	Moulded foam inserts	252
12.3	Remove	252



12.4	Install	253
13	Lock reinforcement - replace	258
13.1	Tools	259
13.2	Remove	259
13.3	Install	260