



## Contents

<b>80 - Heating</b>	<b>1</b>
1 <b>— Change history —</b>	1
<b>2    Heating - assembly overview</b>	2
2.1 External passenger compartment components - assembly location overview	2
2.2 Front passenger compartment components – assembly overview	3
<b>3    Control motors</b>	4
3.1 Front control motors	4
3.2 Regulation unit of the temperature regulation caps - remove and install	5
3.3 Regulation unit of the air distribution registry - remove and install	5
3.4 Air distribution flexible shaft - remove and install	5
3.5 Temperature registry flexible shaft - remove and install	5
<b>4    Heating</b>	6
4.1 Heating unit - assembly overview	6
4.2 Fresh air fan V2 - remove and install	8
4.3 Fresh air blower pre-resistance with overheating cut-out N24 - remove and install	8
4.4 Heat exchanger - remove and install	8
4.5 Plenum chamber (air conditioning) - remove and install	8
<b>5    Air duct system</b>	9
<b>6    Command unit and display</b>	10
6.1 Air conditioning command unit and display, manual electrical adjustment - overview	10
6.2 Control unit and display - remove and install	10
<b>7    Other command and adjustment components</b>	12
<b>87 - Air conditioning system</b>	<b>13</b>
1 <b>— Change history —</b>	13
<b>2    Air-conditioning system - assembly location overview</b>	14
2.1 External passenger compartment components - assembly location overview	14
2.2 Passenger compartment components - assembly overview	15
<b>3    Coolant gas loop</b>	17
3.1 Refrigerant circuit - assembly overview	17
3.2 Condenser - assembly overview	19
3.3 Pressure sensor for coolant circulation G805 - remove and install	20
3.4 Expansion valve - remove and install	21
3.5 Condenser - remove and install	24
3.6 Dryer filter - remove and install	27
3.7 Evacuating and charging valve, low and high pressure side - remove and install	34
3.8 Operate the air conditioning after filling the refrigerant circuit	36
3.9 Condenser compressor hose - remove and install	37
3.10 Air conditioning system high pressure hose - remove and install	39
3.11 Air conditioning system low pressure hose - remove and install	42
<b>4    Air conditioner compressor</b>	45
4.1 Air conditioner compressor - assembly overview	45
4.2 Capacitor pulley - assembly overview	47
4.3 Air conditioning compressor - remove and install from the bracket	49
4.4 Air conditioning compressor - remove and install	51
4.5 Check the pressure relief valve in the air conditioning compressor	56
4.6 Belt pulley - remove and install	56
<b>5    Control motors</b>	62
5.1 Front control motors - overview of fitting locations	62
5.2 Valve control motor for defrosting V107 - remove and install	64
5.3 Control motor on the air distributor cover, front V426 - Remove and install	65



5.4	Control motor for fresh air valve and recirculation valve V154 - remove and install	66
5.5	Temperature adjustment valve control motor, left V158 - Remove and install	67
5.6	Temperature adjustment valve control motor, right V159 - Remove and install	68
5.7	Control motor for pressure non-return valve for natural air and air circulation V425 - remove and install	69
5.8	Control motor on the air distributor cover - remove and install	70
5.9	Control motor on the air distributor cover - remove and install	71
<b>6</b>	<b>Plenum chamber (air conditioning)</b>	<b>73</b>
6.1	Plenum chamber (air conditioning) components - assembly overview	73
6.2	Evaporator housing - assembly overview	75
6.3	Evaporator - remove and install	75
6.4	Plenum chamber (air conditioning) - remove and install	76
6.5	Evaporator housing - remove and install	79
6.6	Dust and pollen filter - remove and install	80
6.7	Fresh air fan V2 - remove and install	81
6.8	Natural air fan control unit J126 - remove and install	82
6.9	Heat exchanger - remove and install	83
6.10	Coolant pipes in the heat exchanger - remove and install	87
6.11	Evaporator temperature sensor G308 - remove and install	89
6.12	Plenum chamber drain - remove and install	90
6.13	Air box bleeder connection - check	92
6.14	Fresh air blower pre-resistance with overheating cut-out N24 - remove and install	92
<b>7</b>	<b>Air duct system</b>	<b>94</b>
7.1	Air distribution and duct in the passenger compartment - assembly overview	94
7.2	Footwell flap (front right) - remove and install	95
7.3	Footwell flap (front left) - remove and install	95
7.4	Rear centre console vent air duct - remove and install	96
7.5	Exhaust valve - remove and install	96
7.6	Exhaust valve - check	97
7.7	Fresh air intake nozzle grille - remove and install	97
7.8	Fresh air intake nozzle - remove and install	98
7.9	Fresh air intake duct - remove and install	98
7.10	Defogger air duct - remove and install	99
7.11	Central vent air duct - remove and install	99
<b>8</b>	<b>Air conditioning display and control unit</b>	<b>100</b>
8.1	Air conditioning display and control unit - assembly overview	100
8.2	Air conditioning display and control unit - remove and install	103
<b>9</b>	<b>Other command and adjustment components</b>	<b>104</b>
9.1	Sun irradiation photosensor G107 - remove and install	104
9.2	External temperature sensor G17 - remove and install	105
9.3	Air conditioning humidity sensor G260 - remove and install	105
9.4	Air outlet temperature sensor for the left vent G150 - Remove and install	105
9.5	Air outlet temperature sensor for the right vent G151 - Remove and install	106
9.6	Feet area air outlet temperature sensor G192 - remove and install	106
<b>10</b>	<b>R134a refrigerant filling capacity</b>	<b>108</b>