



Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical data	3
2.1 Correspondence (gearbox / engine)	3
2.2 Supply capacity (gearbox oil)	3
2.3 Gear ratio calculation "i"	3
3 Transmission assembly scheme	4
4 Electric components	6
4.1 Electrical components - assembly overview	6
5 General repair instructions	8
30 - Clutch	13
1 Clutch control	13
1.1 Clutch drive system - assembly locations overview	13
1.2 Clutch drive pedal - assembly overview	14
1.3 Hydraulic clutch system - assembly overview	16
1.4 Clutch release mechanism - assembly overview	18
1.5 Support shell - remove and install	19
1.6 Clutch position sender G476 - remove and install	20
1.7 Pedal return spring - remove and install	22
1.8 Clutch drive pedal - remove and install	24
1.9 Clutch drive pedal support - remove and install	25
1.10 Clutch transmitter cylinder - remove and install	28
1.11 Clutch slave cylinder - remove and install	29
1.12 Clutch drive system line - remove and install	32
1.13 Hydraulic clutch mechanism - bleed	34
1.14 Clutch release mechanism - repair	36
2 Clutch	38
2.1 Clutch - assembly overview	38
2.2 Clutch - remove and install	39
34 - Controls, housing	44
1 Gearshift mechanism	44
1.1 Gearshift mechanism - installation position	44
1.2 Gear lever - assembly overview	45
1.3 Handle and boot on the gear lever - assembly overview	47
1.4 Gear knob - remove and install	48
1.5 Gearshift mechanism - remove and install	50
1.6 Gearshift mechanism - repair	54
1.7 Gearshift mechanism - adjust	58
1.8 Gearshift mechanism - check operation	61
1.9 Gearshift lever and mechanism - remove and install	62
1.10 Selector cables - remove and install	67
1.11 Selector rod - replace seal	69
1.12 Selector rod and the selector mechanism cover - assembly overview	71
1.13 Selector rod and selector mechanism cover - remove and install with the gearbox installed	72
2 Gearbox - remove and install	78
2.1 Gearbox - remove	78
2.2 Gearbox - installation	89
2.3 Gearbox torques	94



3	Auxiliary frame	95
3.1	Assembly mountings - assembly overview	95
4	Gearbox - transport	98
4.1	Gearbox - transport	98
5	Gearbox oil	100
5.1	Gearbox oil - check level	100
6	Transmission - fasten to support	102
6.1	Transmission - fasten to support	102
7	Gearbox - disassemble and assemble	104
7.1	Gearbox - schematic overview	104
7.2	gearbox - assembly overview	104
7.3	Transmission housing cover and 5th gear - assembly overview	105
7.4	Gearbox housing Cover and 5th gear - remove and install (gearbox installed)	107
7.5	Clutch housing - assembly overview	109
7.6	Input shaft, output shaft, differential, selection mechanism and selector forks	109
7.7	Input shaft, output shaft, differential, selection mechanism and selector forks - remove and install	111
8	Gearbox and clutch housings	124
8.1	Transmission housing and transmission housing - assembly overview	124
8.2	Gearbox housing - repair	126
8.3	Clutch housing - repair	127
9	Selector forks	131
9.1	Selector forks - assembly overview	131
9.2	Selector forks - repair	131
35 - Gears, shafts	136	
1	Input shaft	136
1.1	Input shaft - general overview of assembly	136
1.2	Input shaft - remove and install	138
1.3	Input shaft - replace seal	151
2	Output shaft	154
2.1	Output shaft - general overview of assembly	154
2.2	Output shaft- remove and install	157
39 - Final drive - differential	165	
1	Retainer seals	165
1.1	Seals - assembly overview	165
1.2	Seal (left-hand side) - replace	165
1.3	Seal (right-hand side) - replace	168
2	Differential	171
2.1	Differential - general overview of assembly	171
2.2	Differential - remove and install	173
2.3	Adjust the differential	181