



Contents

00 - Technical data	1
1 Identification	1
1.1 Identification on the gearbox	1
1.2 Prefix, correspondence, gear ratio, filling volumes	2
2 Gearbox - overview	3
3 Gear ratio calculation "i"	5
4 Safety indications	6
5 General repair instructions	7
5.1 Components	7
6 Electric components	12
6.1 Electric components - assembly overview	12
30 - Clutch	14
1 Clutch control	14
1.1 Clutch drive system - assembly locations overview	14
1.2 Clutch drive pedal - assembly overview	15
1.3 Hydraulic clutch system - assembly overview	17
1.4 Clutch release mechanism - assembly overview	19
1.5 Support shell - remove and install	20
1.6 Clutch position sender G476 - remove and install	21
1.7 Pedal return spring - remove and install	23
1.8 Clutch drive pedal - remove and install	25
1.9 Clutch drive pedal support - remove and install	26
1.10 Clutch transmitter cylinder - remove and install	29
1.11 Clutch slave cylinder - remove and install	30
1.12 Clutch drive system line - remove and install	33
1.13 Hydraulic clutch mechanism - bleed	35
1.14 Clutch release mechanism - repair	37
2 Clutch	39
2.1 Clutch - assembly overview	39
2.2 Clutch - remove and install	39
34 - Controls, housing	45
1 Selector mechanism - adjust	45
1.1 Selector mechanism - assembly position	45
1.2 Selector mechanism - component overview	46
1.3 Gear knob and selector cover - assembly overview	46
1.4 Gear knob - remove and install	47
1.5 Gear selection mechanism - assembly overview	49
1.6 Gear selection mechanism - remove and install	51
1.7 Selector mechanism - adjust	59
1.8 Selector rod seal - replace	62
1.9 Gear selection - check	63
2 Gearbox - remove and install	64
2.1 Gearbox - remove	64
2.2 Gearbox - installation	75
2.3 Specified gearbox torque	82
3 Assembly mountings	83
3.1 Assembly mountings - assembly overview	83
4 Gearbox - transport	86
5 Fastening on the engine/gearbox bracket	87



6	Gearbox - disassemble and assemble	88
6.1	Gearbox - assembly overview	88
6.2	Gearbox - overview	89
6.3	Gearbox and 5th/6th housing cover - assembly overview	89
6.4	Clutch housing - assembly overview	91
6.5	Axles, differential, selector mechanism - assembly overview	92
6.6	Selector rod - assembly overview	94
6.7	Selector forks - assembly overview	95
6.8	Selector forks - repair	96
6.9	Selector rod - repair	101
6.10	Selector rod seal - replace	104
6.11	Gearbox - disassemble and assemble	105
7	Gearbox and clutch housings	126
7.1	Transmission housing and transmission housing - assembly overview	126
7.2	Transmission housing cover - assembly overview	128
7.3	Transmission housing cover - repair	129
8	Gearbox oil	131
8.1	Check gearbox oil level	131
35 - Gears, shafts		133
1	Input shaft	133
1.1	Input shaft - general overview of assembly	133
1.2	Input shaft - disassemble and assemble	136
1.3	Input shaft seal - replace	147
2	Output shaft	149
2.1	Output shaft - general overview of assembly	149
2.2	Output shaft - disassemble and assemble	152
39 - Final drive - differential		160
1	Seals	160
1.1	Seals - assembly overview	160
1.2	Left drive flange seal - replace	160
1.3	Right drive flange seal - replace	163
2	Differential	167
2.1	Differential - general overview of assembly	167
2.2	Differential - disassemble and assemble	169
2.3	Differential - adjust	175