

001 - Basic equipment	1-20
1. Basic equipment	1
2. Onboard supply control unit, Right tail light bulb, Left tail light cluster, Left tail light bulb, Right tail light cluster, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	2
3. Onboard supply control unit, Front right turn signal bulb, Left headlight dipped beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	3
4. Rotary light switch, Light switch, Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit	4
5. Tank flap release, Reversing light switch, Fuel tank filler flap central locking actuator, Onboard supply control unit	5
6. Turn signal switch, Headlight dipper and flasher switch, Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Onboard supply control unit, Steering column electronics control unit	6
7. Rear lid release switch, Onboard supply control unit, Left number plate light, Right number plate light	7
8. Luggage compartment light switch, Rear lid contact switch, Central locking rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear lid lock unit, Rear lid central locking motor	8
9. Rear interior light button, Front left reading light button, Front right reading light button, Onboard supply control unit, Storage compartment illumination bulb, Front interior light, Front left reading light, Front right reading light, Rear window	9
10. Onboard supply control unit, Rear left fog light bulb	10
11. Onboard supply control unit, Driver side interior door handle illumination bulb, Front passenger side interior door handle illumination bulb, Light for left dash panel background lighting, Light for right dash panel background lighting, Light for centre dash panel background lighting	11
12. Rear left vanity mirror contact switch, Rear right vanity mirror contact switch, Onboard supply control unit, Luggage compartment light, Rear left illuminated vanity mirror, Rear right illuminated vanity mirror	12
13. Hazard warning light switch, Switch module 1 in centre console, Glove compartment light switch, Rear left reading light button, Rear right reading light button, Onboard supply control unit, Indicator lamp for hazard warning light, Glove compartment light, Rear left reading light, Rear right reading light	13
14. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Left daytime running light bulb, Right daytime running light bulb, Left static cornering light, Right static cornering light	14
15. Onboard supply control unit, Windscreen wiper motor	15
16. Onboard supply control unit, 12 V socket 2, 12 V socket 3	16
17. Heater and air conditioning controls, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fuse holder C, Fresh air blower	17
18.	18
19. Immobiliser reader coil, Main beam warning lamp, Alternator warning lamp, Dash panel insert, Oil pressure warning lamp, Reserve fuel warning lamp, Oil level warning lamp, Airbag warning lamp	19
20. Headlight range control regulator, Brake light switch, Engine/motor control unit, Fuse holder B	20
002 - Convenience system	21-36
1. Convenience system	21
2. Fuse holder C	22
3. Operating unit for window regulator in driver door, Operating unit for window regulator in driver door, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side window regulator motor, Driver side mirror adjustment motor	23
4. Driver side interior locking button for central locking system, Onboard supply control unit, Doors closed warning lamp, Central locking SAFELOCK function warning lamp, Button illumination bulb	24
5. Driver door contact switch, Front left central locking actuator, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Onboard supply control unit, Driver door lock unit, Driver door central locking motor	25
6. Rear left door contact switch, Rear left central locking actuator, Rear left central locking lock unit, Onboard supply control unit, Rear left door lock unit, Rear left door central locking motor, lock	26
7. Operating unit for window regulator in rear left door, Rear left window regulator switch, in door, Rear left door control unit, Onboard supply control unit, Button illumination bulb, Rear left window regulator motor	27
8. Front passenger door contact switch, Front right central locking actuator, Front passenger side central locking lock unit, Onboard supply control unit, Front passenger door lock unit, Front passenger door central locking motor	28
9. Window regulator switch in front passenger door, Window regulator switch in front passenger door, Front passenger door control unit. Onboard supply control unit. Button illumination bulb. Front	29

passenger side interior door handle illumination bulb, Front passenger side window regulator motor	
10. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Onboard supply control unit, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	30
11. Rear right door contact switch, Rear right central locking actuator, Rear right central locking lock unit, Onboard supply control unit, Rear right door lock unit, Rear right door central locking motor, lock	31
12. Operating unit for window regulator in rear right door, Rear right window regulator switch, in door, Sunlight penetration photosensor, Onboard supply control unit, Button illumination bulb, Rear right window regulator motor	32
13. Exterior mirror adjuster, Mirror adjustment switch, Mirror adjustment changeover switch, Onboard supply control unit, Mirror adjustment switch illumination bulb, Driver side interior door handle illumination bulb	33
14. Interior mirror, Rain and light sensor, Onboard supply control unit, Automatic anti-dazzle interior mirror	34
15. Onboard supply control unit, Front left footwell light, Front right footwell light	35
16. Luggage compartment light switch, Rear lid contact switch, Central locking rear lid lock unit, Onboard supply control unit, Rear lid lock unit, Rear lid central locking motor	36
003 - Fuse assignment	37-59
1. Fuse assignment	37
2. Battery, Starter, Alternator with voltage regulator	38
3. ABS control unit, Automatic gearbox control unit, Fuse holder B	39
4. Starter relay 1, Starter relay 2, Fuse holder B	40
5. Main relay, Fuse holder B	41
6. Fuse holder B, Charge air cooling pump	42
7. Fuse holder B	43
8. Lambda probe 1 before catalytic converter, Fuse holder B	44
9. Radiator fan 2nd speed relay, Fuse holder B, Radiator fan	45
10. Fuel pump relay, Radiator fan relay, Fuse holder B	46
11. Magnetic clutch relay, Fuse holder B, Air conditioner compressor	47
12. Onboard supply control unit	48
13. Onboard supply control unit, Fuse holder C	49
14. Fuse holder C	50
15. Ignition/starter switch, Headlight dipper and flasher switch, Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Fuse holder C	51
16. Fuse holder C, Diagnostic connection	52
17. Fuse holder C	53
18. Fuse holder C	54
19. Reversing camera, Fuse holder C, USB connection 2	55
20. Airbag control unit, Terminal 15 voltage supply relay, Fuse holder C	56
21. Terminal 75x voltage supply relay, Fuse holder C	57
22. Fuse holder C	58
23. Fuse holder C, USB charging socket 1, USB charging socket 2	59
004 - Earthing concept	60-71
1. Earthing concept	60
2. Earth point, on gearbox, Earth point, lower part of right A-pillar, Earth point 1, on front of left longitudinal member	61
3. Earth point, on right A-pillar	62
4. Earth point, on left A-pillar	63
5. Steering column electronics control unit, Fuse holder C	64
6. Earth point 3, on front of left longitudinal member	65
7. Earth point, on cylinder head, Earth point 2, on front of left longitudinal member	66
8. Earth point, centre on rear lid, Earth point, on left D-pillar	67
9. Earth point on central tube for dash panel, centre left	68
10. Earth point, on left rear wheel housing	69
11. Earth point 1, on front of right longitudinal member, Earth point 1, on right rear wheel housing	70
12. Earth point, on right headlight	71
005 - Data bus network	72-82
1. Data bus network	72
2. Fuse holder C, Diagnostic connection	73
3. Automatic gearbox control unit, Airbag control unit, Onboard supply control unit, Engine/motor control unit	74
4. Onboard supply control unit	75
5. Headlight range control unit, Onboard supply control unit, Front left headlight, Front right headlight	76

6. Heater and air conditioning controls, Sliding sunroof adjustment control unit, Onboard supply control unit	77
7. Control unit in dash panel insert, Control unit 1 for information electronics, Interface for entry and start system, Dash panel insert, Malfunction warning lamp, Electronic power control fault lamp	78
8. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Amplifier	79
9. Steering column electronics control unit, Data bus diagnostic interface	80
10. Adaptive cruise control unit, Data bus diagnostic interface	81
11. ABS control unit, Parking aid control unit, Power steering control unit, Data bus diagnostic interface	82
006 - Air conditioning system , (9AB)	83-87
1. Air conditioning system , (9AB)	83
2. Heater and air conditioning controls, Fuse holder B, Fuse holder C	84
3. Heater and air conditioning controls, Fresh air blower series resistor with overheating fuse, Fresh air blower	85
4. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Onboard supply control unit, Data bus diagnostic interface	86
5. Heater and air conditioning controls, Evaporator temperature sensor, Magnetic clutch for supercharger, Air recirculation flap, Air conditioner compressor	87
007 - Climatronic , (KC0)	88-94
1. Climatronic , (KC0)	88
2. Heater and air conditioning controls, Fuse holder B, Fuse holder C	89
3. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface	90
4. Heater and air conditioning controls, Air distribution flap, Air recirculation flap	91
5. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor, Fresh air blower control unit, Front left temperature flap	92
6. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender	93
7. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Magnetic clutch for supercharger, Air conditioner compressor	94
008 - 6-speed automatic gearbox , CWLA,CWSA,DHSB,DHSC,(0ER),(0ID)	95-101
1. 6-speed automatic gearbox , CWLA,CWSA,DHSB,DHSC,(0ER),(0ID)	95
2. Multifunction switch, Automatic gearbox control unit, Gearbox	96
3. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Gearbox, Solenoid valve 1, Solenoid valve 2	97
4. Selector lever, Automatic gearbox control unit, Gearbox, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve	98
4. Auxiliary hydraulic pump 1 for gearbox oil	
5. Selector lever, Selector lever locked in position P switch, Automatic gearbox control unit, Selector lever lock solenoid, Ignition key withdrawal lock solenoid, Fuse holder C, Selector lever position display	99
6. Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	100
7. Automatic gearbox control unit, Onboard supply control unit, Fuse holder B	101
009 - Airbag systems , (4UF),(4X3)	102-110
1. Airbag systems , (4UF),(4X3)	102
2. Switch module 1 in centre console, Rear side airbag crash sensor on passenger side, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Front passenger airbag warning lamp, Fuse holder C	103
3. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor on front passenger side, Crash sensor for front airbag, Rear side airbag crash sensor on driver side, Airbag control unit	104
4. Key-operated switch to deactivate airbag on front passenger side, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side	105
5. Airbag coil connector and return ring with slip ring, Airbag control unit, Multifunction steering wheel control unit, Steering column electronics control unit	106
6. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	107
7. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Diagnostic connection	108
8. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	109
9. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Seat belt warning system warning lamp. Airbag warning lamp	110

010 - Electromechanical steering , (1N1)	111-113
1. Electromechanical steering , (1N1)	111
2. Power steering control unit, Onboard supply control unit, Fuse holder A, Electromechanical power steering motor	112
3. Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Dash panel insert, Electromechanical power steering warning lamp	113
011 - Multifunction steering wheel , (1XX),(2FD),(2FE),(2ZA),(2ZH)	114-117
1. Multifunction steering wheel , (1XX),(2FD),(2FE),(2ZA),(2ZH)	114
2. Cruise control system switch, Cruise control system (CCS) SET button, Tiptronic switch in steering wheel to shift up, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	115
3. Tiptronic switch in steering wheel to shift down, Multifunction steering wheel control unit	116
4. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side, Fuse holder C	117
012 - Parking aid (PDC) , (7X1),(7X2),(7X5)	118-126
1. Parking aid (PDC) , (7X1),(7X2),(7X5)	118
2. Adaptive cruise control unit, Parking aid control unit, Data bus diagnostic interface, Fuse holder C	119
3. Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit, Control unit 1 for information electronics	120
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	121
5. Rear left park assist steering sender, Rear right park assist steering sender, Parking aid control unit	122
6. Parking aid control unit	123
7. Switch module 1 in centre console, Parking aid button, Park assist steering button, Parking aid control unit, Onboard supply control unit, Parking aid warning lamp, Warning lamp for park assist steering, Button illumination bulb	124
8. Front right parking aid sender, Front centre right parking aid sender, Front left parking aid sender, Parking aid control unit	125
9. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Parking aid control unit	126
013 - Reversing camera (Rear Assist) , (KA1)	127-128
1. Reversing camera (Rear Assist) , (KA1)	127
2. Rear lid release switch, Control unit 1 for information electronics, Reversing camera, Fuse holder C	128
014 - 1.6l engine , CWSA,(DP7),(T4I)	129-146
1. 1.6l engine , CWSA,(DP7),(T4I)	129
2. Battery, Starter, Alternator with voltage regulator	130
3. Ignition/starter switch, Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Fuse holder C	131
4. Starter relay 1, Starter relay 2, Fuse holder B	132
5. Fuse holder B	133
6. Fuel pump relay, Main relay, Fuse holder B	134
7. Fuse holder B	135
8. Radiator fan relay, Radiator fan 2nd speed relay, Fuse holder B, Radiator fan	136
9. Onboard supply control unit	137
10. Fuel gauge sender, Fuel delivery unit, Rev counter, Fuel system pressurisation pump, Speedometer, Dash panel insert, Cruise control system warning lamp, Coolant temperature warning lamp (too cold)	138
11. Engine/motor control unit	139
12. Engine/motor control unit, Radiator fan	140
13. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	141
14. Brake light switch, Engine/motor control unit	142
15. Engine speed sender, Knock sensor 1, Clutch position sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	143
16. Oil pressure switch, Intake manifold sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	144
17. Throttle valve module, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	145
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3. Spark plug 4	146

015 - 1.0l engine , DHSB,(M5B),(T26)	147-164
1. 1.0l engine , DHSB,(M5B),(T26)	147
2. Battery, Starter, Alternator with voltage regulator	148
3. Ignition/starter switch, Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Fuse holder C	149
4. Starter relay 1, Starter relay 2, Fuse holder B	150
5. Main relay, Fuse holder B	151
6. Fuse holder B	152
7. Switch module 1 in centre console, Driving mode selection button, Onboard supply control unit, Driving mode selection warning lamp, Button illumination bulb	153
8. Fuel gauge sender, Fuel delivery unit, Rev counter, Fuel system pressurisation pump, Speedometer, Dash panel insert, Cruise control system warning lamp, Coolant temperature warning lamp (too cold)	154
9. Brake servo pressure sensor, Engine/motor control unit, Vacuum pump for brakes	155
10. Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit, Radiator fan	156
11. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	157
12. Brake light switch, Clutch position sender, Engine/motor control unit	158
13. Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Fuel pressure sender, Fuel pump control unit, Engine/motor control unit	159
14. Intake manifold sender, Hall sender, Knock sensor 1, Intake manifold pressure sender, Intake air temperature sender 2, Hall sender 3, Engine/motor control unit	160
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Charge pressure positioner	161
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	162
17. Oil pressure switch for reduced oil pressure, Throttle valve module, Coolant temperature sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit, Fuel pressure regulating valve	163
18. Ethanol concentration sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Charge air cooling pump	164
016 - 1.4l engine , CWLA,(DG6),(TL8)	165-182
1. 1.4l engine , CWLA,(DG6),(TL8)	165
2. Battery, Starter, Alternator with voltage regulator	166
3. Ignition/starter switch, Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Fuse holder C	167
4. Starter relay 1, Starter relay 2, Fuse holder B	168
5. Main relay, Fuse holder B	169
6. Fuse holder B	170
7. Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Onboard supply control unit, Control unit 1 for information electronics, Driving mode selection warning lamp, Button illumination bulb	171
8. Fuel gauge sender, Fuel delivery unit, Rev counter, Fuel system pressurisation pump, Speedometer, Dash panel insert, Cruise control system warning lamp, Coolant temperature warning lamp (too cold)	172
9. Engine/motor control unit, Vacuum pump for brakes	173
10. Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator fan	174
11. Accelerator pedal module, Lambda probe 1 after catalytic converter, Accelerator position sender, Radiator outlet coolant temperature sender, Accelerator position sender 2, Engine/motor control unit	175
12. Brake light switch, Oil pressure switch, Engine/motor control unit	176
13. Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Fuel pressure sender, Fuel pump control unit, Engine/motor control unit	177
14. Intake manifold sender, Hall sender, Knock sensor 1, Intake manifold pressure sender, Intake air temperature sender 2, Hall sender 3, Engine/motor control unit	178
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure positioner	179
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	180
17. Oil pressure switch for reduced oil pressure, Throttle valve module, Coolant temperature sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit, Fuel pressure regulating valve	181
18. Ethanol concentration sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1. Camshaft control valve 1. Exhaust camshaft control valve 1. Valve for oil pressure control.	182

Charge air cooling pump	
017 - Anti-theft alarm system , (9V6)	183-184
1. Anti-theft alarm system , (9V6)	183
2. Bonnet contact switch, Anti-theft alarm sensor, Control unit in dash panel insert, Onboard supply control unit, Engine/motor control unit, Dash panel insert, Doors closed warning lamp, Fuse holder C	184
018 - Radio , (I7Q),(I7R)	185-190
1. Radio , (I7Q),(I7R)	185
2. Control unit 1 for information electronics, Fuse holder C	186
3. Control unit 1 for information electronics, Front left loudspeaker, Front left treble loudspeaker	187
4. Control unit 1 for information electronics, Front right loudspeaker, Front right treble loudspeaker, Reversing camera	188
5. Control unit 1 for information electronics, Roof aerial, USB charging socket 1, USB charging socket 2	189
6. Onboard supply control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Storage compartment illumination bulb	190
019 - Radio , (I8F)	191-199
1. Radio , (I8F)	191
2. Control unit 1 for information electronics, Fuse holder C	192
3. Control unit 1 for information electronics, Front left loudspeaker, Front left treble loudspeaker	193
4. Control unit 1 for information electronics, Front right loudspeaker, Roof aerial, Front right treble loudspeaker	194
5. Control unit 1 for information electronics, Reversing camera, USB charging socket 1, USB charging socket 2	195
6. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	196
7. Control unit 1 for information electronics, Telephone microphone, USB connection 1	197
8. Control unit 1 for information electronics, Dash panel insert, Rear window aerial 1	198
9. Onboard supply control unit, Data bus diagnostic interface, Control unit 1 for information electronics	199
020 - Sound system , (9VG)	200-202
1. Sound system , (9VG)	200
2. Control unit 1 for information electronics, Amplifier, Front left treble loudspeaker, Front right treble loudspeaker, Subwoofer, Dual subwoofer loudspeaker 1, Dual subwoofer loudspeaker 2, Fuse holder C	201
3. Onboard supply control unit, Data bus diagnostic interface, Rear left loudspeaker, Rear right loudspeaker, Amplifier, Front left bass loudspeaker, Front right bass loudspeaker	202
021 - Entry and start authorisation , (4I3)	203-207
1. Entry and start authorisation , (4I3)	203
2. Driver exterior door handle, Interface for entry and start system, Central locking SAFELOCK function warning lamp, Fuse holder C	204
3. Front passenger exterior door handle, Interface for entry and start system	205
4. Onboard supply control unit, Interface for entry and start system, Telephone bracket	206
5. Starter button, Engine/motor control unit, Interface for entry and start system, Rear bumper aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	207
022 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (1AS),(1AT)	208-212
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (1AS),(1AT)	208
2. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, Lateral acceleration sender, ABS control unit, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve	209
3. ABS control unit, Onboard supply control unit, Steering column electronics control unit, Rear right ABS outlet valve, Rear left ABS outlet valve, Vehicle stabilization program switch valve 1, Vehicle stabilization program switch valve 2, Vehicle stabilization program high-pressure valve 2	210
4. Brake pressure sender 1, Yaw rate sender, Sensor unit for electronic stabilisation program, Vacuum sender, ABS control unit, Data bus diagnostic interface, Engine/motor control unit, Rear right ABS inlet valve, Rear left ABS inlet valve, ABS hydraulic pump	211
5. Longitudinal acceleration sender, ABS control unit, Control unit in dash panel insert, Dash panel insert, Brake system warning lamp, Fuse holder B	212
023 - Sliding/tilting sunroof , (3FU)	213-216
1. Sliding/tilting sunroof , (3FU)	213
2. Sunroof switch, Sliding sunroof adjustment control unit, Onboard supply control unit	214
3. Sliding sunroof adjustment control unit, Sliding sunroof motor	215
4. Button 1 for roof roller blind, Sliding sunroof adjustment control unit, Sunroof roller blind motor	216
024 - Window wash/wipe system , (8M1),(8N6),(8N8)	217-219
1. Window wash/wipe system . (8M1).(8N6).(8N8)	217

2. Steering column electronics control unit, Fuse holder C, Rear window wiper motor, Windscreen and rear window washer pump	218
3. Rain and light sensor, Wiper motor control unit, Onboard supply control unit	219
025 - LED headlights , (8IY)	220-222
1. LED headlights , (8IY)	220
2. Rear left vehicle level sender, Headlight range control unit, Onboard supply control unit, Fuse holder C	221
3. Output module 1 for right LED headlight, Output module 1 for left LED headlight, Data bus diagnostic interface, Front left headlight, Front right headlight, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Left headlight range control motor, Right headlight range control motor	222
026 - Radio , (8UK)	223-231
1. Radio , (8UK)	223
2. Control unit 1 for information electronics, Fuse holder C	224
3. Rear lid release switch, Control unit 1 for information electronics, Front left loudspeaker, Front left treble loudspeaker	225
4. Control unit 1 for information electronics, Front right loudspeaker, Roof aerial, Front right treble loudspeaker	226
5. Onboard supply control unit, Data bus diagnostic interface, Control unit 1 for information electronics	227
6. Control unit 1 for information electronics, Dash panel insert, Telephone microphone, USB charging socket 1	228
7. Control unit 1 for information electronics, USB connection 1	229
8. Control unit 1 for information electronics, USB connection 2	230
9. Parking aid control unit, Control unit 1 for information electronics, Telephone bracket, USB connection 2	231
027 - 1.0l engine , DHSC,(DS8),(T26)	232-252
1. 1.0l engine , DHSC,(DS8),(T26)	232
2. Starter relay 1, Starter relay 2, Fuse holder B	233
3. Main relay, Fuse holder B	234
4. Engine/motor control unit	235
5. Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system, Fuse holder C	236
6. Accelerator pedal module, Engine/motor control unit, Vacuum pump for brakes	237
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	238
8. Engine/motor control unit, Radiator fan	239
9. Brake light switch, Onboard supply control unit, Engine/motor control unit	240
10. Knock sensor 1, Engine/motor control unit	241
11. Charge pressure sender, Engine/motor control unit, Charge pressure positioner	242
12. Throttle valve module, Intake manifold sender, Engine/motor control unit	243
13. Coolant temperature sender, Engine/motor control unit, Fuel pressure regulating valve, Charge air cooling pump	244
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	245
15. Radiator outlet coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1	246
16. Engine speed sender, Hall sender, Hall sender 3, Engine/motor control unit	247
17. Oil pressure switch for reduced oil pressure, Fuel pressure sender, Engine/motor control unit, Gearbox	248
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	249
19. Fuel pump control unit, Engine/motor control unit	250
20. Fuel gauge sender, Fuel delivery unit, Rev counter, Fuel system pressurisation pump, Speedometer, Dash panel insert, Cruise control system warning lamp, Coolant temperature warning lamp (too cold)	251
21. Battery, Starter, Alternator with voltage regulator	252
028 - 1.0l engine , DRPB,(DI6),(T26)	253-273
1. 1.0l engine , DRPB,(DI6),(T26)	253
2. Starter relay 1, Starter relay 2, Fuse holder B	254
3. Main relay, Fuse holder B	255
4. Engine/motor control unit	256
5. Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system, Fuse holder C	257
6. Accelerator pedal module, Engine/motor control unit, Vacuum pump for brakes	258
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	259

8. Engine/motor control unit, Radiator fan	260
9. Brake light switch, Onboard supply control unit, Engine/motor control unit	261
10. Knock sensor 1, Engine/motor control unit	262
11. Charge pressure sender, Engine/motor control unit, Charge pressure positioner	263
12. Throttle valve module, Intake manifold sender, Engine/motor control unit	264
13. Coolant temperature sender, Engine/motor control unit, Fuel pressure regulating valve, Charge air cooling pump	265
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	266
15. Radiator outlet coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	267
16. Engine speed sender, Hall sender, Engine/motor control unit	268
17. Oil pressure switch for reduced oil pressure, Fuel pressure sender, Clutch position sender, Engine/motor control unit	269
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	270
19. Gearbox neutral position sender, Fuel pump control unit, Engine/motor control unit	271
20. Fuel gauge sender, Fuel delivery unit, Rev counter, Fuel system pressurisation pump, Speedometer, Dash panel insert, Cruise control system warning lamp, Coolant temperature warning lamp (too cold)	272
21. Battery, Starter, Alternator with voltage regulator	273
029 - Mobile telephone systems , (9II)	274-275
1. Mobile telephone systems , (9II)	274
2. Onboard supply control unit, Control unit 1 for information electronics, Interface for entry and start system, Telephone bracket, Fuse holder C	275
030 - Adaptive cruise control , (6K4),(8T7)	276-278
1. Adaptive cruise control , (6K4),(8T7)	276
2. Adaptive cruise control unit, Parking aid control unit, Fuse holder C	277
3. Adaptive cruise control unit, Headlight range control unit, Data bus diagnostic interface	278
031 - 1.0l engine , DHSB,(M5B),(T26),(7GX)	279-299
1. 1.0l engine , DHSB,(M5B),(T26),(7GX)	279
2. Battery, Starter, Alternator with voltage regulator	280
3. Starter relay 1, Starter relay 2, Fuse holder B	281
4. Main relay, Fuse holder B	282
5. Steering column electronics control unit, Fuse holder C	283
6. Data bus diagnostic interface, Engine/motor control unit	284
7. Engine/motor control unit, Interface for entry and start system	285
8. Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit, Vacuum pump for brakes	286
9. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	287
10. Clutch position sender, Engine/motor control unit, Gearbox, Radiator fan	288
11. Brake light switch, Fuel pump control unit, Engine/motor control unit	289
12. Engine/motor control unit	290
13. Charge pressure sender, Engine/motor control unit, Charge pressure positioner	291
14. Throttle valve module, Intake manifold sender, Engine/motor control unit	292
15. Engine speed sender, Coolant temperature sender, Engine/motor control unit, Charge air cooling pump	293
16. Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	294
17. Ethanol concentration sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1	295
18. Hall sender, Hall sender 3, Engine/motor control unit, Fuel pressure regulating valve	296
19. Oil pressure switch for reduced oil pressure, Radiator outlet coolant temperature sender, Fuel pressure sender, Engine/motor control unit	297
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	298
21. Onboard supply control unit	299
032 - 1.4l engine , CWLA,(DG6),(TL8),(7GX)	300-318
1. 1.4l engine , CWLA,(DG6),(TL8),(7GX)	300
2. Battery, Starter, Alternator with voltage regulator	301
3. Steering column electronics control unit, Fuse holder C	302
4. Starter relay 1, Starter relay 2, Fuse holder B	303
5. Main relay, Fuse holder B	304
6. Fuse holder B	305
7. Switch module 1 in centre console, Start/stop operation button, Driving mode selection button, Onboard supply control unit, Control unit 1 for information electronics, Driving mode selection warning lamp. Button illumination bulb	306

8. Fuel gauge sender, Fuel delivery unit, Rev counter, Fuel system pressurisation pump, Speedometer, Dash panel insert, Cruise control system warning lamp, Coolant temperature warning lamp (too cold)	307
9. Engine/motor control unit, Vacuum pump for brakes	308
10. Lambda probe 1 before catalytic converter, Data bus diagnostic interface, Engine/motor control unit, Radiator fan	309
11. Accelerator pedal module, Lambda probe 1 after catalytic converter, Accelerator position sender, Radiator outlet coolant temperature sender, Accelerator position sender 2, Engine/motor control unit	310
12. Brake light switch, Oil pressure switch, Engine/motor control unit	311
13. Charge pressure sender, Engine speed sender, Fuel pressure sender, Fuel pump control unit, Engine/motor control unit	312
14. Intake manifold sender, Hall sender, Knock sensor 1, Hall sender 3, Engine/motor control unit	313
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure positioner	314
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	315
17. Oil pressure switch for reduced oil pressure, Throttle valve module, Coolant temperature sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit, Fuel pressure regulating valve	316
18. Ethanol concentration sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Charge air cooling pump	317
19. Engine/motor control unit	318
801 - -Fitting locations: earth connections - 3	319-331
1. Earth connections	319-331
1.1 Earth connections in the vehicle front area	319-326
1.1.1 Left front area	319-320
1.1.2 Right front area	321
1.1.3 1.0 l, DHSB engine	322
1.1.4 1.4 l, CWLA engine	323
1.1.5 1.6 l, CWSA engine	324
1.1.6 Manual gearbox, 0AF, 0AJ	325
1.1.7 Automatic gearbox 09G	326
1.2 Earth connections in the vehicle centre area	327-328
1.2.1 Vehicle interior front left	327
1.2.2 Vehicle interior front right	328
1.2.3 Vehicle interior front centre	329
1.3 Earth connections in the vehicle rear area	329-331
1.3.1 Luggage compartment, left	330
1.3.2 Luggage compartment, right, rear lid	331
802 - -Fitting locations: fuses - 3	332-345
1. Fuses	332-345
1.1 Fuse holder A -SA-, as of January, 2019	332-335
1.1.1 Fitting locationFuse holder A -SA-, as of January, 2019	332
1.1.2 Fuse assignmentFuse holder A -SA-, as of January, 2019	333-335
1.2 Fuse holder B -SB-, as of January, 2019	336-339
1.2.1 Fitting locationFuse holder B -SB-, as of January, 2019	337
1.2.2 Fuse assignmentFuse holder B -SB-, as of January, 2019	338-339
1.3 Fuse holder C -SC-, as of January, 2019	340-345
1.3.1 Fitting locationFuse holder C -SC-, as of January, 2019	340-341
1.3.2 Fuse assignmentFuse holder C -SC-, as of January, 2019	342-345
803 - -Fitting locations: relays - 3	346-348
1. Relays	346-348
1.1 Relays in Fuse holder B -SB-, as of January, 2019	346
1.1.1 Relays in Fuse holder B -SB-, as of January, 2019	346
1.2 Relays in Fuse holder C -SC-, as of January, 2019	347-348
1.2.1 Relays in Fuse holder C -SC-, as of January, 2019	348
804 - -Fitting locations: Vehicle front area - 3	349-366
1. Fitting locations: Vehicle front area	349-366
1.1 Front, front view	353
1.2 Front, left view	354
1.3 Front, right view	355
1.4 1.0 l, DHSB engine	355-357
1.4.1 1.0 l, DHSB engine, front view	356
1.4.2 1.0 l. DHSB engine. top view	357

1.4.3 1.0 l, DHSB engine, rear view	358
1.5 1.4 l, CWLA engine	358-360
1.5.1 1.4 l, CWLA engine, front view	359
1.5.2 1.4 l, CWLA engine, top view	360
1.5.3 1.4 l, CWLA engine, rear view	361
1.6 1.6 l, CWSA engine	361-364
1.6.1 1.6 l, CWSA engine, front view	362
1.6.2 1.6 l, CWSA engine, top view	363
1.6.3 1.6 l, CWSA engine, rear view	364
1.7 Automatic gearbox 09G	365
1.8 Manual gearbox, 0AF, 0AJ	366
805 - -Fitting locations: vehicle mid section area - 3	367-396
1. Fitting locations: vehicle mid section area	367-396
1.1 Front vehicle interior	371-379
1.1.1 Vehicle interior front left	371-372
1.1.2 Left footwell	373
1.1.3 Vehicle interior front right	374
1.1.4 Dash panel insert	375
1.1.5 Steering wheel	376
1.1.6 Steering column	377
1.1.7 Front centre console	378
1.1.8 Front left seat	379
1.1.9 Front right seat	380
1.2 Vehicle interior, rear	380-381
1.2.1 Vehicle interior, rear, as seen from the left	381
1.2.2 Rear vehicle interior as seen from the right	382
1.3 Roof	382-385
1.3.1 Roof, part 1	383
1.3.2 Roof, part 2, without 3FA sunroof	384
1.3.3 Roof, part 2, with 3FU sunroof	385
1.4 Doors	386-389
1.4.1 Driver side door	386-387
1.4.2 Front passenger side door	388
1.4.3 Left rear door	389
1.4.4 Right rear door	390
1.5 Heater and air conditioning unit	390-396
1.5.1 Air-conditioning, 9AB, part 1	391-392
1.5.2 Air-conditioning, 9AB, part 2	393
1.5.3 Climatronic, KC0, part 1	394
1.5.4 Climatronic, KC0, part 2	395-396
806 - -Fitting locations: Vehicle rear area - 3	397-401
1. Fitting locations: Vehicle rear area	397-401
1.1 Rear lid	398
1.2 Rear bumper	399
1.3 Rear, left view	400
1.4 Rear, right view	401
807 - -Fitting locations: Vehicle bottom area - 3	402-404
1. Control units on the bottom part of the vehicle	402-404
1.1 Bottom part 1	402-403
1.2 Bottom part 2	404
830 - - Connector views: A to D prefix parts - 3	405-406
1. A to D prefix parts	405-406
1.1 Starter -B-	405
1.2 Alternator with voltage regulator -CX1-	405
1.3 Immobiliser reader coil -D2-	405-406
831 - - Connector views: E prefix parts - 3	407-421
1. Connector views: E prefix parts	407-421
1.1 Sunroof switch -E8-	407
1.2 Driver side belt switch -E24-	408
1.3 Front passenger side belt switch -E25-	408
1.4 Glove compartment light switch -E26-	409
1.5 Rear lid release switch -E165-	409
1.6 Key operated switch to deactivate front passenger side airbag -E224-	410
1.7 Driver-side interior locking button for central locking system -E308-	411
1.8 Selector lever -E313-	412
1.9 Starter button -E378-	413

1.10 Button 1 for roof roller blind -E584-	413
1.11 Rotary light switch -EX1-	414
1.12 Interior mirror -EX5-	414
1.13 Exterior mirror adjuster -EX11-	415
1.14 Tank flap release -EX13-	415
1.15 Heater and air conditioning controls -EX21-	416-417
1.16 Switch module 1 in centre console -EX23-	418
1.17 Window regulator switch in front passenger door -EX27-	419
1.18 Operating unit for window regulator in rear right door -EX28-	420
1.19 Operating unit for window regulator in rear left door -EX29-	420
1.20 Operating unit for window regulator in driver door -EX36-	420-421
832 - - Connector views: F prefix parts - 3	422-426
1. Connector views: F prefix parts	422-426
1.1 Brake light switch -F-	422
1.2 Oil pressure switch -F1-	422
1.3 Reversing light switch -F4-	423
1.4 Brake fluid level warning contact -F34-	423
1.5 Parking brake pressure switch -F234-	424
1.6 Bonnet contact switch -F266-	424
1.7 Rear left vanity mirror contact switch -F298-	425
1.8 Rear right vanity mirror contact switch -F299-	425
1.9 Oil pressure switch for reduced oil pressure -F378-	426
833 - - Connector views: G prefix parts - 3	427-455
1. Connector views: G prefix parts	427-455
1.1 Ambient temperature sensor -G17-	429
1.2 Engine speed sender -G28-	429
1.3 Coolant shortage indicator sender -G32-	429
1.4 Hall Sensor -G40-	430
1.5 Rear right speed sensor -G44-	430
1.6 Front right speed sensor -G45-	431
1.7 Rear left speed sensor -G46-	431
1.8 Front left speed sensor -G47-	432
1.9 Knock sensor 1 -G61-	432
1.10 Coolant temperature sender -G62-	433
1.11 Rear left vehicle level sender -G76-	433
1.12 Radiator outlet coolant temperature sender -G83-	434
1.13 Sunlight penetration photosensor -G107-	434
1.14 Seat occupied sensor, front passenger side -G128-	435
1.15 Left vent temperature sender -G150-	435
1.16 Side airbag crash sensor on driver side -G179-	436
1.17 Side airbag crash sensor on front passenger side -G180-	436
1.18 Crash sensor for front airbag -G190-	437
1.19 Footwell vent temperature sender -G192-	437
1.20 Rear left parking aid sender -G203-	438
1.21 Rear centre left parking aid sender -G204-	438
1.22 Rear centre right parking aid sender -G205-	439
1.23 Rear right parking aid sender -G206-	439
1.24 Fuel pressure sender -G247-	440
1.25 Front right parking aid sender -G252-	440
1.26 Front centre right parking aid sender -G253-	441
1.27 Front centre left parking aid sender -G254-	441
1.28 Front left parking aid sender -G255-	442
1.29 Rear side airbag crash sensor on driver side -G256-	442
1.30 Rear side airbag crash sensor on front passenger side -G257-	443
1.31 Hall sender 3 -G300-	443
1.32 Evaporator temperature sensor -G308-	444
1.33 Rain and light sensor -G397-	445
1.34 Clutch position sender -G476-	445
1.35 Front left sender for park assist steering on left side of vehicle -G568-	446
1.36 Front right sender for park assist steering on right side of vehicle -G569-	446
1.37 Anti-theft alarm sensor -G578-	447
1.38 Contact sensor for front left exterior door handle -G605-	447
1.39 Contact sensor for front right exterior door handle -G606-	448
1.40 Vacuum sender -G608-	448
1.41 Gearbox neutral position sender -G701-	449
1.42 Ethanol concentration sender -G708-	449

1.43	Rear left park assist steering sender -G716-	450
1.44	Rear right park assist steering sender -G717-	450
1.45	Pressure sender for refrigerant circuit -G805-	451
1.46	Fuel delivery unit -GX1-	451
1.47	Accelerator pedal module -GX2-	452
1.48	Throttle valve module -GX3-	452
1.49	Lambda probe 1 after the catalytic converter -GX7-	453
1.50	Intake manifold sender -GX9-	453
1.51	Lambda probe 1 before catalytic converter -GX10-	454
1.52	Charge pressure sender -GX26-	455
834	- - Connector views: H to I prefix parts - 3	456-457
1.	Connector views: H to I prefix parts	456-457
1.1	Treble horn -H2-	456
1.2	Bass horn -H7-	456
1.3	Rear parking aid warning buzzer -H15-	457
1.4	Front parking aid warning buzzer -H22-	457
835	- - Connector views: J prefix parts - 3	458-477
1.	Connector views: J prefix parts	458-477
1.1	ABS control unit -J104-	458
1.2	Fresh air blower control unit -J126-	459
1.3	Automatic gearbox control unit -J217-	459
1.4	Airbag control unit -J234-	460
1.5	Sliding sunroof adjustment control unit -J245-	460
1.6	Battery monitor control unit -J367-	461
1.7	Driver door control unit -J386-	462
1.8	Front passenger door control unit -J387-	462
1.9	Rear left door control unit -J388-	463
1.10	Rear right door control unit -J389-	463
1.11	Headlight range control unit -J431-	464
1.12	Parking aid control unit -J446-	464
1.13	Multifunction steering wheel control unit -J453-	465
1.14	Power steering control unit -J500-	466
1.15	Onboard supply control unit -J519-	466
1.16	Steering column electronics control unit -J527-	467-469
1.17	Fuel pump control unit -J538-	470
1.18	Engine control unit -J623-	470-471
1.19	Display unit for front information display and operating unit control unit -J685-	472
1.20	Control unit 1 for information electronics -J794-	473-476
1.21	Interface for entry and start system -J965-	477