



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when working on subframe	1
<b>2 Repair instructions</b>	<b>2</b>
2.1 Leaks at shock absorbers	2
2.2 Noises from shock absorbers	2
2.3 Checking shock absorbers when removed	3
2.4 Steering rack	3
2.5 Gaskets and seals	4
2.6 Nuts and bolts	4
2.7 Electrical components	4
2.8 Raising suspension to unladen position (vehicles with coil springs)	5
<b>3 Evaluating accident vehicles</b>	<b>9</b>
3.1 Check list for evaluating running gear on accident vehicles	9
<b>4 Disposal</b>	<b>11</b>
4.1 Releasing gas and draining front gas-filled shock absorbers	11
4.2 Releasing gas and draining rear gas-filled shock absorbers	13
<b>40 - Front suspension</b>	<b>15</b>
<b>1 Front axle</b>	<b>15</b>
1.1 Overview of fitting locations - front axle	15
<b>2 Subframe</b>	<b>18</b>
2.1 Assembly overview – subframe	18
2.2 Removing and installing subframe without steering rack	20
2.3 Removing and installing subframe with steering rack	25
2.4 Repairing subframe	33
2.5 Repairing thread in longitudinal member	46
2.6 Fixing subframe in position	46
2.7 Lowering subframe	53
<b>3 Anti-roll bar</b>	<b>58</b>
3.1 Assembly overview - anti-roll bar	58
3.2 Removing and installing anti-roll bar	58
3.3 Removing and installing coupling rod	64
<b>4 Suspension strut, upper suspension link</b>	<b>66</b>
4.1 Assembly overview - suspension strut, upper suspension link	66
4.2 Removing and installing suspension strut	67
4.3 Repairing suspension strut	78
<b>5 Lower suspension link, swivel joint</b>	<b>83</b>
5.1 Assembly overview - lower suspension link, swivel joint	83
5.2 Removing and installing lower suspension link	84
5.3 Checking swivel joint	87
5.4 Removing and installing swivel joint	87
5.5 Renewing bonded rubber bush for lower suspension link	93
<b>6 Wheel bearing</b>	<b>101</b>
6.1 Assembly overview – wheel bearing assembly	101
6.2 Removing and installing wheel bearing housing	101
6.3 Removing and installing wheel bearing unit	108
<b>7 Drive shaft</b>	<b>113</b>
7.1 Overview - drive shaft	113
7.2 Assembly overview – drive shaft	114



7.3	Removing and installing drive shaft	122
7.4	Loosening and tightening threaded connections of drive shaft	143
7.5	Removing and installing drive shaft heat shield	145
7.6	Dismantling and assembling drive shaft	146
7.7	Checking outer constant velocity joint	173
7.8	Checking inner constant velocity joint	175
<b>42</b>	<b>Rear suspension</b>	<b>178</b>
<b>1</b>	<b>Rear axle</b>	<b>178</b>
1.1	Overview – rear axle	178
1.2	Lowering rear axle	181
1.3	Removing and installing rear axle	184
<b>2</b>	<b>Axle beam</b>	<b>194</b>
2.1	Assembly overview – axle beam	194
2.2	Renewing bonded rubber bush for axle beam	194
<b>3</b>	<b>Subframe</b>	<b>204</b>
3.1	Assembly overview – subframe	204
3.2	Fixing subframe in position	204
3.3	Repairing subframe	209
<b>4</b>	<b>Anti-roll bar</b>	<b>224</b>
4.1	Assembly overview - anti-roll bar	224
4.2	Removing and installing anti-roll bar	224
4.3	Removing and installing coupling rod	226
<b>5</b>	<b>Suspension link, track rod</b>	<b>229</b>
5.1	Assembly overview - transverse link	229
5.2	Assembly overview - track rod	231
5.3	Removing and installing upper transverse link	231
5.4	Removing and installing lower transverse link	233
5.5	Removing and installing track rod	235
<b>6</b>	<b>Suspension strut, shock absorber, spring</b>	<b>237</b>
6.1	Assembly overview - suspension strut, shock absorber, spring	237
6.2	Removing and installing shock absorber	239
6.3	Repairing shock absorber	246
6.4	Removing and installing spring	249
<b>7</b>	<b>Wheel bearing assembly, trailing arm</b>	<b>259</b>
7.1	Assembly overview – wheel bearing assembly	259
7.2	Assembly overview - trailing arm	261
7.3	Removing and installing wheel bearing housing	262
7.4	Removing and installing wheel bearing unit	268
7.5	Renewing bonded rubber bush for wheel bearing housing	275
7.6	Removing and installing trailing arm with mounting bracket	280
7.7	Repairing trailing arm	284
<b>8</b>	<b>Drive shaft</b>	<b>290</b>
8.1	Assembly overview – drive shaft	290
8.2	Loosening and tightening threaded connections of drive shaft	292
8.3	Removing and installing drive shaft	293
8.4	Dismantling and assembling drive shaft	301
8.5	Checking outer constant velocity joint	308
8.6	Checking inner constant velocity joint	310
<b>43</b>	<b>Self-levelling suspension</b>	<b>313</b>
<b>1</b>	<b>Electronically controlled damping system</b>	<b>313</b>
1.1	Overview of fitting locations - electronically controlled damping system	313
1.2	Removing and installing electronically controlled damping control unit J250	315
1.3	Removing and installing front body acceleration senders G341/G342	316



1.4	Removing and installing rear left body acceleration sender G699	319
<b>2</b>	<b>Vehicle level sender</b>	<b>321</b>
2.1	Assembly overview - front vehicle level senders	321
2.2	Assembly overview - rear vehicle level senders	322
2.3	Removing and installing front vehicle level senders G78/G289	323
2.4	Removing and installing rear vehicle level senders G76/G77	325
<b>44</b>	<b>Wheels, tyres, vehicle geometry</b>	<b>328</b>
<b>1</b>	<b>Wheel alignment</b>	<b>328</b>
1.1	Notes for wheel alignment	328
1.2	Conditions for testing	329
1.3	Test preparations	329
1.4	Specifications for wheel alignment	331
1.5	Wheel alignment procedure	333
1.6	Necessity of wheel alignment	334
1.7	Vehicle data sticker	335
1.8	Adjusting camber at front wheels	336
1.9	Adjusting camber on rear axle	338
1.10	Adjusting toe at rear axle	339
1.11	Adjusting front axle toe	340
1.12	Wheel runout compensation	342
1.13	Checking maximum wheel lock	342
<b>2</b>	<b>Adaptive cruise control</b>	<b>344</b>
2.1	Calibrating adaptive cruise control	344
<b>3</b>	<b>Front camera for assist systems</b>	<b>350</b>
3.1	Calibrating front camera for assist systems	350
<b>48</b>	<b>Steering</b>	<b>358</b>
<b>1</b>	<b>Steering wheel</b>	<b>358</b>
1.1	Assembly overview – steering wheel	358
1.2	Removing and installing steering wheel	358
<b>2</b>	<b>Steering column</b>	<b>361</b>
2.1	Assembly overview – steering column	361
2.2	Checking steering column for damage	362
2.3	Handling and transporting steering column	362
2.4	Removing and installing steering column	363
2.5	Removing and installing control unit for electronic steering column lock J764	375
<b>3</b>	<b>Steering rack</b>	<b>378</b>
3.1	Assembly overview – steering rack	378
3.2	Removing and installing steering rack	382
3.3	Removing and installing boot	394
3.4	Removing and installing track rod	396
3.5	Removing and installing track rod ball joint	401
3.6	Repairing steering rack	403