



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Repair instructions	2
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 Routing and attachment of lines	2
3 Battery	4
3.1 Battery - general notes	4
3.2 Types of battery	4
27 - Starter, current supply, CCS	5
1 Battery	5
1.1 Assembly overview - battery	5
1.2 Removing and installing battery	6
1.3 Disconnecting and connecting battery	8
1.4 Removing and installing battery tray	9
1.5 Checking battery	10
1.6 Charging battery	10
1.7 Removing and installing earth wire with battery monitor control unit J367	10
1.8 Adapting battery monitor control unit J367	11
2 Alternator	12
2.1 Assembly overview - alternator	12
2.2 Removing and installing alternator	13
2.3 Checking alternator	20
2.4 Removing and installing poly V-belt pulley	21
2.5 Removing and installing voltage regulator	28
3 Starter motor	31
3.1 Assembly overview - starter	31
3.2 Removing and installing starter	33
3.3 Checking starter	38
4 Cruise control system (CCS)	39
5 Start/stop system	40
5.1 General description - start/stop system	40
6 Adaptive cruise control	41
6.1 Overview of fitting locations - adaptive cruise control	41
6.2 Removing and installing automatic distance control unit	41
6.3 Calibrating adaptive cruise control	42
90 - Gauges, instruments	43
1 Dash panel insert	43
1.1 Assembly overview - dash panel insert	43
1.2 Removing and installing dash panel insert KX2	44
2 Horn	48
2.1 Assembly overview - horn	48
2.2 Removing and installing left horn H33 / right horn H34	48
92 - Windscreen wash/wipe system	50
1 Windscreen wiper system	50
1.1 Assembly overview - windscreen wiper system	50



1.2	Moving wipers to service position	51
1.3	Removing and installing wiper blade	51
1.4	Removing and installing wiper arms	52
1.5	Adjusting wiper arms	53
1.6	Removing and installing wiper motor V	54
1.7	Removing and installing rain and light sensor	55
2	Windscreen washer system	59
2.1	Assembly overview - windscreen washer system	59
2.2	Removing and installing washer fluid reservoir	62
2.3	Removing and installing windscreen washer fluid level sender	66
2.4	Removing and installing windscreen washer pump	67
2.5	Removing and installing washer jets	69
2.6	Adjusting spray jets	70
3	Rear window wiper system	71
3.1	Assembly overview - rear window wiper system	71
3.2	Removing and installing wiper blade	72
3.3	Removing and installing wiper arm	72
3.4	Adjusting wiper arm	73
3.5	Removing and installing rear window wiper motor V12	74
4	Rear window washer system	76
4.1	Assembly overview - rear window washer system	76
4.2	Removing and installing washer fluid reservoir	77
4.3	Removing and installing rear window washer pump	77
4.4	Removing and installing spray jet	77
4.5	Adjusting spray jet	77
5	Washer fluid lines	79
5.1	Repairing washer fluid lines	79
94	Lights, bulbs, switches - exterior	80
1	Headlights	80
1.1	Assembly overview - headlight	80
1.2	Assembly overview - daytime running lights	84
1.3	Removing and installing headlight	85
1.4	Adjusting headlights	87
1.5	Adjusting headlight installation position	87
1.6	Removing and installing front turn signal bulb 2 M92 / M93	88
1.7	Converting headlights from driving on right to driving on left	89
1.8	Converting headlights from driving on left to driving on right	90
1.9	Removing and installing headlight range control motor V48 / V49	91
1.10	Removing and installing dipped beam bulb	94
1.11	Removing and installing headlight main beam bulb M30 / M32	97
1.12	Removing and installing daytime running light	100
1.13	Removing and installing LED modules for daytime running light and side light L176 / L177	102
1.14	Removing and installing bulbs for cornering light L148 / L149	104
1.15	Removing and installing output module 1 for LED headlight A31 / A27	104
2	Fog lights	106
2.1	Assembly overview - fog lights	106
2.2	Removing and installing fog light	106
2.3	Removing and installing fog light bulb L22 / L23	107
2.4	Adjusting fog lights	108
3	Lights in exterior mirror	109
3.1	Assembly overview - lights in exterior mirror	109
3.2	Removing and installing turn signal	110
3.3	Removing and installing entry light in exterior mirror	110



4	Tail lights	111
4.1	Assembly overview - tail lights in body	111
4.2	Assembly overview - tail lights in rear lid	112
4.3	Removing and installing tail light in rear lid	112
4.4	Adjusting installation position of tail light	114
4.5	Removing and installing tail light cluster	115
4.6	Removing and installing tail light bulb M2 / M4	115
4.7	Removing and installing rear fog light bulb L46 / L47	116
4.8	Removing and installing brake and tail light bulb M21 / M22	116
4.9	Removing and installing reversing light bulb	116
4.10	Removing and installing turn signal bulb	116
5	High-level brake light	117
5.1	Assembly overview - high-level brake light	117
5.2	Removing and installing high-level brake light	117
6	Number plate light	119
6.1	Removing and installing number plate light X4 / X5	119
6.2	Removing and installing bulb for number plate light X4 / X5	119
7	Entry and start authorisation system	120
7.1	Overview of fitting locations - entry and start authorisation system	120
7.2	Overview of fitting locations - keyless entry system	122
7.3	Removing and installing interface for entry and start system J965	122
7.4	Removing and installing door exterior handle contact sensor G415 / G416	123
7.5	Removing and installing interior aerial 1 for entry and start authorisation R138	123
7.6	Removing and installing interior aerial 2 for entry and start system R139	124
7.7	Removing and installing left entry and start authorisation aerial R200	125
7.8	Removing and installing right entry and start authorisation aerial R201	125
7.9	Removing and installing rear bumper aerial for entry and start system R136	125
7.10	Removing and installing aerial for entry and start system R134 / R135	126
8	Steering column switch module	127
8.1	Assembly overview - steering column switch module	127
8.2	Removing and installing lock cylinder	129
8.3	Removing and installing ignition key withdrawal lock solenoid N376	131
8.4	Removing and installing ignition/starter switch	132
8.5	Removing and installing steering column switch module	133
8.6	Removing and installing steering column electronics control unit J527	135
8.7	Removing and installing turn signal switch E2	139
8.8	Removing and installing cruise control system switch E45	140
8.9	Removing and installing intermittent wiper switch E22	140
8.10	Removing and installing base for steering column combination switch	140
8.11	Removing and installing steering lock housing	141
9	Parking aid	143
9.1	Assembly overview - parking aid	143
9.2	Removing and installing parking aid control unit J446	145
9.3	Removing and installing front parking aid warning buzzer H22	146
9.4	Removing and installing rear parking aid warning buzzer H15	148
9.5	Removing and installing front parking aid senders	148
9.6	Removing and installing rear parking aid senders	149
10	Park assist steering	151
10.1	Assembly overview - park assist steering	151
10.2	Removing and installing control unit	152
10.3	Removing and installing front senders	152
10.4	Removing and installing rear senders	153
11	Automatic headlight range control	154
11.1	Assembly overview - automatic headlight range control	154



11.2	Removing and installing cornering light and headlight range control unit J745	155
12	Blind Spot Monitor	158
12.1	Assembly overview - Blind Spot Monitor	158
12.2	Removing and installing warning lamp for Blind Spot Monitor K303 / K304	158
12.3	Removing and installing blind spot monitor control unit J1086 / J1087	159
96	Lights, bulbs, switches - interior	160
1	Lights	161
1.1	Overview of fitting locations - lights in dash panel	161
1.2	Overview of fitting locations - lights in front doors	163
1.3	Overview of fitting locations - lights in centre console	164
1.4	Overview of fitting locations - lights in luggage compartment	165
1.5	Overview of fitting locations - lights in roof trim	166
1.6	Removing and installing glove compartment light W6	167
1.7	Replacing bulb for glove compartment light W6	168
1.8	Removing and installing front footwell light K268 / K269	169
1.9	Removing and installing front footwell illumination bulb L151 / L152	170
1.10	Removing and installing centre console illumination bulb L150	170
1.11	Removing and installing Central locking SAFELOCK function warning lamp K133	170
1.12	Removing and installing light for interior door handle illumination L219 / L220	171
1.13	Removing and installing light 2 for door background lighting W97 / W98	171
1.14	Removing and installing light for door ambient lighting W86 / W87	172
1.15	Removing and installing door storage compartment illumination bulb L160 / L161	173
1.16	Removing and installing selector lever position display Y26	173
1.17	Removing and installing luggage compartment light W3	174
1.18	Removing and installing bulb for luggage compartment light W3	174
1.19	Removing and installing illuminated vanity mirror W20 / W14	175
1.20	Renewing front interior light bulb W1 / W13 / W19	175
1.21	Renewing bulb for rear interior light W43	176
1.22	Removing and installing bulb for rear reading light W11 / W12	178
1.23	Renewing bulb of rear interior light W47 / W48	178
2	Controls	180
2.1	Overview of fitting locations - controls in dash panel	181
2.2	Overview of fitting locations - controls in front doors	183
2.3	Overview of fitting locations - controls in rear doors	184
2.4	Overview of fitting locations - controls in centre console	185
2.5	Overview of fitting locations - controls in luggage compartment	186
2.6	Overview of fitting locations - controls in roof trim	187
2.7	Removing and installing rotary light switch EX1	189
2.8	Removing and installing TCS and ESP button E256	189
2.9	Removing and installing parking aid button E266	189
2.10	Removing and installing park assist steering button E581	190
2.11	Removing and installing Start/Stop operation button E693	190
2.12	Removing and installing driving mode selection button E735	190
2.13	Removing and installing switch module in centre console EX23 / EX30	190
2.14	Removing and installing front passenger side airbag deactivated warning lamp K145	191
2.15	Removing and installing hazard warning light switch EX3	192
2.16	Removing and installing buttons for seat heating E653 / E654	193
2.17	Removing and installing glove compartment light switch E26	193
2.18	Removing and installing switch for exterior mirror adjuster EX11	194
2.19	Removing and installing operating unit for window regulator in driver door EX36	194
2.20	Removing and installing front passenger side window regulator button E716	195
2.21	Removing and installing driver side interior locking button for central locking system E308	195
2.22	Removing and installing rear lid remote release button E233	196
2.23	Removing and installing door contact switch F2 / F3	196



2.24	Removing and installing rear window regulator button E711 / E713	196
2.25	Removing and installing rear door contact switches F10 / F11	197
2.26	Removing and installing electromechanical parking brake button E538 / auto-hold button E540	197
2.27	Removing and installing the starter button E378	198
2.28	Removing and installing button to close rear lid in luggage compartment E406	198
2.29	Removing and installing rear lid warning buzzer H32	199
2.30	Removing and installing rear lid contact switch	199
2.31	Removing and installing vanity mirror contact switch F147 / F148	199
2.32	Removing and installing sliding sunroof switch E8	200
2.33	Removing and installing front interior light/reading light	200
2.34	Removing and installing rear interior light/reading light	201
2.35	Removing and installing front reading light button E633 / E634	204
2.36	Removing and installing operating unit for driving mode selection E881	204
2.37	Removing and installing button 1 for roof roller blind E584	205
3	Anti-theft alarm	206
3.1	Assembly overview - interior monitor	206
3.2	Removing and installing alarm horn H12	206
3.3	Removing and installing anti-theft alarm sensor G578	207
4	Immobiliser	209
4.1	Removing and installing immobiliser control unit	209
4.2	Removing and installing immobiliser reader coil	209
5	Front camera for assist systems	211
5.1	Assembly overview - front camera for assist systems	211
5.2	Removing and installing front camera for driver assist systems	211
6	Towing bracket	213
6.1	Assembly overview - socket, trailer detector control unit	213
6.2	Trailer socket	213
6.3	Removing and installing trailer detector control unit J345	214
7	Cigarette lighter, socket	215
7.1	Removing and installing cigarette lighter U1	215
7.2	Removing and installing socket illumination bulb L42	215
7.3	Removing and installing rear cigarette lighter illumination bulb L32	215
7.4	Removing and installing electric socket U	215
97 - Wiring		216
1	Relay carriers, fuse holders, electronics boxes	216
1.1	Overview of fitting locations - relay carriers, fuse holders, E-boxes	216
1.2	Removing and installing electronics box (E-box)	218
1.3	Removing and installing relay and fuse holder in electronics box	220
1.4	Removing and installing relay and fuse holder behind dash panel on driver side	222
2	Control units	225
2.1	Overview of fitting locations - control units	225
2.2	Removing and installing onboard supply control unit J519	226
2.3	Removing and installing data bus diagnostic interface J533	230
2.4	Removing and installing bracket for onboard supply control unit J519	232
2.5	Removing and installing parking aid control unit J446 / park assist steering control unit J791	234
3	Connectors	235
3.1	Repairing electrical wiring harnesses and plug-in connections	235
4	Releasing and dismantling connector housings	236
5	Repairing aerial wires	237
6	Fibre optic cables	238
7	Vehicle diagnosis, testing and information systems	239