



Contents

00 - Technical data	1
1 Repair instructions	1
1.1 General repair instructions	1
1.2 Notes on repair of CAN bus wiring	1
1.3 Transmitting power and aerial fitting locations	1
91 - Communication	3
1 Infotainment system	3
1.1 Overview of fitting locations – Infotainment system	3
1.2 Removing and installing infotainment system display	4
1.3 Removing and installing control unit 1 for information electronics J794	6
1.4 Removing and installing chip card reader control unit J676	7
1.5 Renewing rotary knobs of display unit for front information display and operating unit control unit J685	8
2 Sound system	9
2.1 Overview of fitting locations – sound system	9
2.2 Removing and installing digital sound package control unit/amplifier	12
2.3 Removing and installing bracket for digital sound package control unit J525	13
2.4 Removing and installing front treble loudspeakers R20/R22	13
2.5 Removing and installing rear bass loudspeakers R4/R5	14
2.6 Removing and installing front bass loudspeakers R21/R23	15
2.7 Removing and installing subwoofer R211	16
3 Aerial systems	18
3.1 Overview of fitting locations – aerial systems	18
3.2 Removing and installing amplitude modulation (AM) frequency filter R177	20
3.3 Removing and installing frequency modulation (FM) frequency filter R178/R179	21
3.4 Removing and installing aerial module	22
3.5 Removing and installing roof aerial	23
3.6 Removing and installing LTE aerials [R297/R306]	24
4 Telephone system	25
4.1 Overview of fitting locations – telephone system	25
4.2 Removing and installing telephone microphone R38	25
4.3 Removing and installing transmission and reception stabilisation control unit R308	26
4.4 Removing and installing storage compartment with interface for mobile telephone R265	27
5 Reversing camera system	29
5.1 Overview of reversing camera system	29
5.2 Overview of fitting locations – reversing camera system	29
5.3 Removing and installing reversing camera R189	30
6 Multifunction steering wheel	31
6.1 Overview of multifunction steering wheel	31
6.2 Assembly overview – multifunction steering wheel	31
6.3 Removing and installing multifunction buttons in steering wheel E441/E440	32
6.4 Removing and installing Tiptronic switch in steering wheel E439/E438	35
7 Connection for external multimedia devices	37
7.1 Removing and installing connection for external multimedia devices	37
7.2 Removing and installing USB hub R293	38
8 Car-Net	40
8.1 General information	40
8.2 Overview of fitting locations – mobile online services	40
8.3 Removing and installing emergency call module control unit and communication unit J949	43
8.4 Renewing battery of emergency call module control unit and communication unit J949	45
8.5 Removing and installing operating unit for preparation for mobile telephone E508	46



8.6	Removing and installing loudspeaker for emergency call module R335	47
8.7	Renewing control unit for emergency call module and communication unit J949	48