



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
91 - Communication	3
1 Safety information and repair notes	3
1.1 Safety information	3
1.2 Repair instructions	3
2 Fitting locations	4
2.1 Overview of fitting locations – components/control units in middle section of vehicle	4
2.2 Overview of fitting locations – components/control units in rear section of vehicle	6
3 Components/control units	8
3.1 Removing and installing control unit for front display and information control panel [J685]	8
3.2 Removing and installing control unit 1 for information electronics [J794]	9
3.3 Removing and installing front treble loudspeakers -R20-/-R22-	9
3.4 Removing and installing bass loudspeaker	10
3.5 Removing and installing subwoofer [R211], spare wheel well	11
3.6 Removing and installing digital sound package control unit [J525]	11
3.7 Removing and installing aerial module	13
3.8 Removing and installing frequency modulation (FM) frequency filters [R178/R179]	14
3.9 Removing and installing roof aerial [RX5]	15
3.10 Removing and installing LTE aerial	15
3.11 Removing and installing storage compartment with interface for mobile telephone [R265]	16
3.12 Removing and installing transmission and reception stabilisation control unit [R308]	17
3.13 Removing and installing multifunction buttons in steering wheel [E441]/[E440]	17
3.14 Removing and installing Tiptronic switch in steering wheel [E439]/[E438]	19
3.15 Removing and installing emergency call module control unit and communication unit [J949]	20
3.16 Removing and installing loudspeaker for emergency call module [R335]	22
3.17 Removing and installing emergency battery, telematics [A16]	23
3.18 Removing and installing USB connection 1 [U41]	24
3.19 Removing and installing USB charging socket 1 [U37]	25
4 Multifunction steering wheel	26
4.1 Assembly overview – multifunction steering wheel	26