



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with a start/stop system	2
1.2 Safety precautions when using testers and measuring instruments during a road test	3
1.3 Safety measures when working with pyrotechnic components	3
1.4 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	5
1.5 Additional safety regulations for side airbag	5
1.6 Additional safety instructions for curtain airbag	6
1.7 Safety regulations for crash sensors (pressure sensors) for front side airbags	6
1.8 Additional safety instructions for repair work on seat occupied recognition for front passenger airbag deactivation - country-specific	7
1.9 Measures for seat occupied recognition for front passenger airbag deactivation following an accident - country-specific	7
1.10 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	8
1.11 Checking airbag securing parts after an accident	9
1.12 Accident without airbag triggering	9
1.13 Checking seat belts	10
1.14 Check belt webbing	10
1.15 Checking inertia reel (locking mechanism)	11
1.16 Visually checking belt buckle	12
1.17 Check operation of belt buckle	12
1.18 Checking belt relays, and buckle tongues	12
1.19 Checking securing parts and anchorage points after an accident	12
1.20 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	13
1.21 Checking child seat anchors after an accident	13
2 Repair instructions	14
2.1 Contact corrosion	14
2.2 Routing and attachment of lines	14
68 - Interior equipment	15
1 Compartments/covers	15
1.1 Overview of fitting locations – compartments/covers	15
1.2 Assembly overview – dash panel cover on driver side	16
1.3 Assembly overview - steering column trim	17
1.4 Assembly overview – glove compartment	18
1.5 Assembly overview - storage compartment in headliner	19
1.6 Removing and installing dash panel cover on driver side	21
1.7 Removing and installing upper steering column trim	22
1.8 Removing and installing lower steering column trim	25
1.9 Removing and installing footwell cover on front passenger side	26
1.10 Removing and installing glove compartment	26
1.11 Service position for glove compartment cover	28
1.12 Removing and installing restrictor for glove compartment cover	30
1.13 Removing and installing headliner storage compartment	30
2 Equipment	33
2.1 Assembly overview – sun visors	33
2.2 Removing and installing sun visor	34
2.3 Removing and installing sun visor centre mount	36
2.4 Removing and installing roof grab handle	37
2.5 Removing and installing grab handle bracket	39
3 Centre console	41



3.1	Removing and installing rear centre console trim	41
3.2	Removing and installing centre console cover	42
3.3	Removing and installing centre console insert	43
3.4	Removing and installing centre console front storage compartment	44
3.5	Removing and installing centre console	44
3.6	Removing and installing centre console bracket	47
4	Front centre armrest	50
4.1	Removing and installing front centre armrest	50
5	Interior mirror	51
5.1	Assembly overview – interior mirror	51
5.2	Removing and installing interior mirror	54
69	Passenger protection	61
1	Seat belts	61
1.1	Overview of fitting locations – seat belts and anchorage points	61
1.2	Assembly overview – front three-point seat belt	63
1.3	Assembly overview – rear outer three-point seat belt	65
1.4	Assembly overview – rear centre three-point seat belt	65
1.5	Assembly overview – front belt buckle	66
1.6	Assembly overview – rear belt buckle	67
1.7	Removing and installing front three-point seat belt	69
1.8	Removing and installing rear three-point seat belt	74
1.9	Removing and installing front belt guide	77
1.10	Removing and installing rear belt guide	79
1.11	Removing and installing front belt end fitting	80
1.12	Removing and installing rear outer belt end fitting	83
1.13	Removing and installing belt height adjuster	83
1.14	Removing and installing front belt buckle	86
1.15	Removing and installing rear belt buckle	87
2	Child seat anchors	90
2.1	Assembly overview – rear child seat anchors	90
2.2	Removing and installing rear child seat anchors	90
3	Airbag system	93
3.1	Overview of fitting locations – airbag system	93
4	Airbag control unit	96
4.1	Assembly overview – airbag control unit	96
4.2	Removing and installing airbag control unit J234	96
5	Front airbag	99
5.1	Assembly overview – front airbag, driver side	99
5.2	Removing and installing airbag unit with igniter	100
5.3	Renewing connector on airbag	113
6	Front passenger airbag	116
6.1	Assembly overview – front passenger airbag	116
6.2	Removing and installing front passenger airbag unit with igniter	117
6.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	120
7	Side airbags	122
7.1	Assembly overview – front side airbag	122
7.2	Removing and installing front side airbag with igniter	123
7.3	Removing and installing line for side airbag	125
8	Curtain airbags	128
8.1	Assembly overview – curtain airbag	128
8.2	Removing and installing curtain airbag with igniter	128
9	Airbag crash sensors	133
9.1	Overview of fitting locations – airbag crash sensors	133



9.2	Removing and installing crash sensor for front airbag G190	135
9.3	Removing and installing front side airbag crash sensor G179/G180	137
9.4	Removing and installing rear side airbag crash sensor G256/G257	141
10	Seat belt verification	144
10.1	Removing and installing Seat occupied sensor, front passenger side G128	144
70	Trim, insulation	145
1	Front door trims	145
1.1	Assembly overview – front door trim	145
1.2	Removing and installing trim	147
1.3	Removing and installing front door trim	149
1.4	Removing and installing button trim	153
1.5	Removing and installing mirror cover trim	154
2	Rear door trims	156
2.1	Assembly overview – rear door trim	156
2.2	Removing and installing rear door trim	156
2.3	Removing and installing button trim	161
3	Dash panel	162
3.1	Assembly overview - dash panel	162
3.2	Removing and installing dash panel end cover	165
3.3	Removing and installing dash panel trim	166
3.4	Removing and installing dash panel insert trim, 2018 ►	172
3.5	Removing and installing dash panel insert retaining frame	172
3.6	Removing and installing dash panel	175
3.7	Removing and installing radio/navigation system mounting frame, 2022 ►	192
3.8	Removing and installing outer dash panel vents	193
3.9	Removing and installing side defroster vent	196
3.10	Removing and installing centre vent, 2022 ►	197
4	Central tube for dash panel	199
4.1	Assembly overview – central tube for dash panel	199
4.2	Removing and installing dash panel cross member	199
4.3	Removing and installing crash bar	206
5	Interior trims	207
5.1	Overview of fitting locations – interior trims	207
5.2	Assembly overview – sill panel moulding	208
5.3	Assembly overview - A-pillar trim	209
5.4	Assembly overview – B-pillar trim	211
5.5	Assembly overview - C-pillar trim	212
5.6	Assembly overview – wheel housing trim	213
5.7	Assembly overview – foot rest and floor covering	214
5.8	Removing and installing sill panel moulding	216
5.9	Removing and installing A-pillar trim	219
5.10	Removing and installing B-pillar trim	224
5.11	Removing and installing C-pillar trim	228
5.12	Removing and installing wheel housing trims	230
5.13	Removing and installing foot rest	232
5.14	Removing and installing floor covering	234
6	Luggage compartment trims	237
6.1	Overview of fitting locations – luggage compartment trims	237
6.2	Assembly overview - rear shelf support	238
6.3	Assembly overview – luggage compartment side trim	239
6.4	Assembly overview – luggage compartment floor	240
6.5	Assembly overview - lower rear lid trim	241
6.6	Assembly overview – upper rear lid trim	242
6.7	Removing and installing lower rear lid trim	243



6.8	Removing and installing upper rear lid trim	245
6.9	Removing and installing rear shelf support	247
6.10	Removing and installing luggage compartment side trim	249
6.11	Removing and installing lock carrier trim	251
6.12	Removing and installing fastening rings	252
6.13	Removing and installing support for luggage compartment floor covering	252
7	Roof trims	254
7.1	Assembly overview – moulded headliner	254
7.2	Removing and installing moulded headliner	254
7.3	Installing roof reinforcement to body	258
72	Seat frames	262
1	Overview of seat variants	262
1.1	Overview of fitting locations – seat variants	262
2	Front seats	263
2.1	Overview of fitting locations – electrical and electronic components	263
2.2	Assembly overview – front seat	264
2.3	Assembly overview – front backrest	268
2.4	Assembly overview – seat pan	270
2.5	Assembly overview – seat depth adjustment	274
2.6	Assembly overview – seat height adjustment	274
2.7	Removing and installing front seat	275
2.8	Connecting and disconnecting airbag adapter	278
2.9	Removing and installing seat trim	280
2.10	Removing and installing bracket for seat trim	285
2.11	Removing and installing seat height adjustment handle	285
2.12	Removing and installing lumbar support adjuster	286
2.13	Removing and installing backrest adjuster	287
2.14	Removing and installing front backrest	289
2.15	Removing and installing head restraint	292
2.16	Removing and installing head restraint guide	293
2.17	Removing and installing lumbar support	294
2.18	Removing and installing storage compartment	296
2.19	Removing and installing service wallet holder	298
2.20	Removing and installing lumbar support adjustment switch	298
2.21	Removing and installing massage control unit J740	299
2.22	Removing and installing seat adjustment control unit	300
2.23	Removing and installing lower seat pan frame with seat longitudinal adjustment motor V28/ V31	301
2.24	Securing front seat to seat repair stand	302
2.25	Removing and installing seat adjustment operating unit E470/E471	303
2.26	Removing and installing seat depth adjuster	304
3	Rear seats	308
3.1	Assembly overview – bench seat/individual seats	308
3.2	Assembly overview – locking mechanism	309
3.3	Assembly overview – head restraint and head restraint guide	310
3.4	Assembly overview – rear seat backrest	311
3.5	Assembly overview – centre armrest	313
3.6	Removing and installing bench seat/individual seats	315
3.7	Removing and installing head restraint	317
3.8	Removing and installing head restraint guide	318
3.9	Removing and installing rear seat backrest	320
3.10	Removing and installing trim for locking mechanism	322
3.11	Removing and installing locking mechanism for rear seat backrest	323
3.12	Removing and installing trim frame for load-through hatch	324
3.13	Removing and installing flap for load-through hatch	327



3.14	Removing and installing centre armrest	328
74	Seat - padding, covers	330
1	Front seat covers and padding	330
1.1	Assembly overview – seat pan cover and padding	330
1.2	Assembly overview – backrest cover and padding	331
1.3	Assembly overview – seat heating element	332
1.4	Removing and installing cover and padding in area of seat pan	333
1.5	Removing and installing backrest cover and backrest padding	335
1.6	Separating cover and padding in area of seat pan	338
1.7	Separating cover and padding on backrest	340
1.8	Removing and installing seat heating element Z6/Z8	342
1.9	Removing and installing backrest heating element Z7/Z9	343
2	Rear seat covers and padding	345
2.1	Assembly overview - cover and padding for bench seat	345
2.2	Assembly overview - cover and padding, rear seat backrest	346
2.3	Removing and installing covers and padding	347
2.4	Removing and installing intermediate padding, backrest with load-through hatch	352
2.5	Separating cover and padding	353