



Contents

00 - Technical data	1
1 Basic instructions	1
1.1 Original joint	1
1.2 Used joining techniques	1
2 Vehicle identification data	3
2.1 Vehicle identification number	3
2.2 Identification plate	4
2.3 Vehicle data sticker	5
3 Safety information	7
4 Moulded foam inserts	8
5 Galvanized body parts, high- and higher-strength and hot-formed body panels	10
6 Laser welding	13
7 Gaps/shut lines	14
7.1 Front body	14
7.2 Body, centre	16
7.3 Body - rear	19
8 Body dimensions	22
8.1 Front body	22
8.2 Body, centre	24
8.3 Body - rear	27
8.4 Body dimension for floor panel	28
9 Alignment bracket set	32
9.1 Setup overview of complete body	32
10 Portal gauge	34
10.1 Setup overview of complete body	34
50 - Body - front	36
1 Overview of parts	36
2 Renewing right bracket	37
2.1 Tools	38
2.2 Removing	38
2.3 Installing	39
3 Repairing threads for securing subframe	42
3.1 Contents of thread repair kit	43
3.2 Repairing threads	44
4 Renewing mounting bracket for subframe	48
4.1 Tools	49
4.2 Removing	49
4.3 Installing	50
5 Renewing cross panel for front longitudinal member	54
5.1 Tools	55
5.2 Removing	55
5.3 Installing	56
6 Renewing upper wheel housing longitudinal member	59
6.1 Tools	60
6.2 Removing	60
6.3 Installing	62
7 Renewing upper inner wheel housing longitudinal member	66
7.1 Tools	67
7.2 Removing	67



7.3	Installing	68
8	Renewing upper inner wheel housing longitudinal member - right-hand drive vehicles, part section	72
8.1	Tools	73
8.2	Removing	73
8.3	Installing	75
9	Renewing front wheel housing	81
9.1	Tools	82
9.2	Removing	82
9.3	Installing	84
10	Renewing front wheel housing (part section)	90
10.1	Tools	91
10.2	Removing	91
10.3	Installing	92
11	Renewing front left longitudinal member	96
11.1	Tools	97
11.2	Removing	97
11.3	Installing	98
12	Renewing front right longitudinal member	105
12.1	Tools	106
12.2	Removing	106
12.3	Installing	107
13	Renewing front longitudinal member (left part section)	114
13.1	Tools	115
13.2	Removing	115
13.3	Installing	117
14	Renewing front longitudinal member (right part section)	122
14.1	Tools	123
14.2	Removing	123
14.3	Installing	125
15	Renewing studs	130
51 - Body - centre		131
1	Overview of parts	131
2	Renewing roof - vehicles with no panorama tilting sunroof	132
2.1	Tools	133
2.2	Removing	133
2.3	Installing	137
3	Renewing roof - vehicles with panorama tilting sunroof	147
3.1	Tools	149
3.2	Removing	149
3.3	Installing	153
4	Renewing front cross member for roof	163
4.1	Tools	164
4.2	Removing	164
4.3	Installing	165
5	Renewing rear roof cross member	168
5.1	Tools	169
5.2	Removing	169
5.3	Installing	170
6	Renewing roof side member	174
6.1	Tools	175
6.2	Removing	176
6.3	Installing	179



7	Renewing A-pillar	184
7.1	Tools	185
7.2	Moulded foam inserts	186
7.3	Removing	186
7.4	Installing	187
8	Renewing upper A-pillar reinforcement (part section)	193
8.1	Tools	194
8.2	Moulded foam inserts	194
8.3	Removing	194
8.4	Installing	197
9	Renewing A-pillar reinforcement	206
9.1	Tools	207
9.2	Moulded foam inserts	207
9.3	Removing	207
9.4	Installing	208
10	Renewing B-pillar	213
10.1	Tools	215
10.2	Identification plate	215
10.3	Moulded foam inserts	216
10.4	Removing	216
10.5	Installing	218
11	Renewing B-pillar reinforcement	223
11.1	Tools	224
11.2	Identification plate	224
11.3	Moulded foam inserts	225
11.4	Removing	225
11.5	Installing	227
12	Renewing B-pillar reinforcement (part section)	232
12.1	Tools	233
12.2	Identification plate	233
12.3	Moulded foam inserts	234
12.4	Removing	234
12.5	Installing	238
13	Renewing outer side member	246
13.1	Tools	247
13.2	Identification plate	247
13.3	Moulded foam inserts	248
13.4	Removing	248
13.5	Installing	250
14	Renewing side member reinforcement	255
14.1	Tools	256
14.2	Moulded foam inserts	256
14.3	Removing	256
14.4	Installing	258
15	Renewing inner mounting for seat inner cross member	263
15.1	Tools	264
15.2	Removing	264
15.3	Installing	265
16	Renewing seat cross member	268
16.1	Tools	269
16.2	Removing	269
16.3	Installing	270
17	Renewing outer mounting for seat outer cross member	273
17.1	Tools	274



17.2	Removing	274
17.3	Installing	276
53	Body - rear	282
1	Overview of parts	282
2	Renewing rear cross panel	283
2.1	Tools	284
2.2	Removing	284
2.3	Installing	285
3	Renewing rear cross member	291
3.1	Tools	292
3.2	Removing	292
3.3	Installing	293
4	Renewing tail light mounting	298
4.1	Tools	299
4.2	Removing	299
4.3	Installing	300
5	Renewing lower corner part	305
5.1	Tools	306
5.2	Removing	306
5.3	Installing	307
6	Renewing luggage compartment floor (front-wheel drive)	311
6.1	Tools	312
6.2	Moulded foam inserts	312
6.3	Removing	312
6.4	Installing	313
7	Renewing luggage compartment floor (all-wheel drive)	318
7.1	Tools	319
7.2	Moulded foam inserts	319
7.3	Removing	319
7.4	Installing	320
8	Renewing floor panel	326
8.1	Tools	327
8.2	Removing	327
8.3	Installing	328
9	Renewing rear end plate for longitudinal member	331
9.1	Tools	332
9.2	Removing	332
9.3	Installing	333
10	Renewing rear longitudinal member (part section)	336
10.1	Tools	337
10.2	Removing	337
10.3	Installing	339
11	Renewing rear longitudinal member (part section - second part section of torsion beam axle)	342
11.1	Tools	343
11.2	Moulded foam inserts	343
11.3	Removing	343
11.4	Installing	345
12	Renewing rear longitudinal member (part section - second part section of multi-link suspension)	355
12.1	Tools	356
12.2	Moulded foam inserts	356
12.3	Removing	356



12.4	Installing	359
13	Permitted parting cuts on side panel	369
14	Renewing side panel (part section)	370
14.1	Tools	371
14.2	Moulded foam inserts	372
14.3	Removing	372
14.4	Installing	374
15	Renewing outer wheel housing liner	379
15.1	Tools	380
15.2	Moulded foam inserts	380
15.3	Removing	380
15.4	Installing	382
16	Renewing lock reinforcement	387
16.1	Tools	388
16.2	Removing	388
16.3	Installing	390