



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 General information</b>	<b>1</b>
1.1 Starting conditions for auxiliary/supplementary heater	1
1.2 Type plates	1
<b>2 Electrical components</b>	<b>3</b>
2.1 Access to diagnoses	3
<b>82 - Supplementary heating</b>	<b>5</b>
<b>1 Safety and repair instructions</b>	<b>5</b>
1.1 Safety information	5
1.2 Repair instructions	5
<b>2 Overview of fitting locations – auxiliary/supplementary heater</b>	<b>6</b>
2.1 Overview of fitting locations – auxiliary/supplementary heater	6
2.2 Overview of fitting locations – auxiliary/supplementary heater	8
<b>3 Auxiliary/supplementary heater</b>	<b>10</b>
3.1 Assembly overview - auxiliary/supplementary heater attachments	10
3.2 Assembly overview – auxiliary/supplementary heater, interior	11
3.3 Removing and installing auxiliary/supplementary heater	13
3.4 Dismantling and assembling auxiliary/supplementary heater	15
3.5 Removing and installing air intake silencer	16
3.6 Removing and installing circulation pump [V55]	17
3.7 Removing and installing exhaust system	18
3.8 Removing and installing bracket for auxiliary/supplementary heater	18
3.9 Removing and installing cover	20
3.10 Removing and installing glow plug with flame monitoring [Q8]	22
3.11 Removing and installing temperature sensor [G18] and overheating sensor [G189]	22
3.12 Dismantling and assembling combustion chamber insert	23
3.13 Removing and installing auxiliary heater control unit [J364] with combustion air blower [V6]	24
<b>4 Coolant circuit with auxiliary/supplementary heater</b>	<b>25</b>
4.1 Connection diagram - coolant hoses	25
4.2 Removing and installing coolant pipes for auxiliary heater	25
<b>5 Fuel supply system</b>	<b>28</b>
5.1 Overview of fitting locations - fuel supply system	28
5.2 Checking fuel delivery rate	29
5.3 Removing and installing metering pump [V54]	29
5.4 Bleeding fuel line to metering pump [V54] (filling with fuel)	31
<b>6 Other controlling and regulating components</b>	<b>32</b>
6.1 Removing and installing remote control receiver for auxiliary coolant heater [R149]	32
6.2 Adapting remote control for auxiliary/supplementary heater	32