



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety measures when working on vehicles with start/stop system	2
2 Identification	3
2.1 Identification of final drive	3
3 Repair notes	4
3.1 General repair instructions	4
3.2 Gaskets and seals	5
3.3 Nuts and bolts	6
4 Technical data	7
4.1 Allocation gearbox - engine	7
4.2 Capacities	7
5 Electrical components	8
5.1 Overview of fitting locations - electrical components	8
39 - Final drive - rear differential	9
1 Final drive	9
1.1 Assembly overview - final drive	9
1.2 Removing and installing final drive	9
2 Assembly mountings	21
2.1 Assembly overview - assembly mountings	21
2.2 Removing and installing bonded rubber bush	22
3 Gear oil	26
3.1 Overview of fitting locations - oil drain and inspection plugs	26
3.2 Checking gear oil level	26
4 Oil seals	29
4.1 Overview of fitting locations - seals	29
4.2 Renewing right oil seal	30
4.3 Renewing left seal	32
4.4 Renewing seal for propshaft flange on rear final drive	34
5 All-wheel drive coupling	41
5.1 Assembly overview - all-wheel drive coupling	41
5.2 Checking function	43
5.3 Checking fluid level in all-wheel drive coupling	43
5.4 Draining and filling high performance fluid for all-wheel drive coupling	45
5.5 Removing and installing all-wheel drive coupling pump V181	47
5.6 Removing and installing all-wheel drive coupling	49
5.7 Removing and installing four-wheel drive control unit J492	56
6 Propshaft	57
6.1 Assembly overview – propshaft	57
6.2 Removing and installing propshaft	58
6.3 Removing and installing front flexible coupling	64
6.4 Removing and installing rear flexible coupling	66