



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	1
2 Identification	2
2.1 Gearbox identification	2
3 Repair instructions	3
3.1 General repair instructions	3
4 Technical data	6
4.1 Allocation gearbox - engine	6
4.2 Capacities	6
5 Overview - power transmission	7
6 Electrical components	8
6.1 Overview of fitting locations - electrical components	8
30 - Clutch	9
1 Clutch mechanism	9
1.1 Assembly overview - pedal cluster	9
1.2 Assembly overview - clutch hydraulics	11
1.3 Checking clutch master cylinder and clutch slave cylinder	13
1.4 Removing and installing bearing bush	14
1.5 Removing and installing clutch position sender G476	15
1.6 Removing and installing return spring	16
1.7 Removing and installing over-centre spring	20
1.8 Removing and installing clutch pedal	23
1.9 Removing and installing mounting bracket	25
1.10 Removing and installing clutch master cylinder	30
1.11 Removing and installing lines for clutch mechanism	31
1.12 Bleeding clutch mechanism	35
2 Clutch	38
34 - Controls, housing	39
1 Selector mechanism	39
1.1 Installation position - selector mechanism	39
1.2 Assembly overview – gear knob and cover	39
1.3 Assembly overview - selector mechanism	40
1.4 Removing and installing gear knob	44
1.5 Removing and installing selector mechanism	46
1.6 Adjusting selector mechanism	55
1.7 Checking selector mechanism	59
2 Removing and installing gearbox	61
2.1 Specified torques for gearbox	61
2.2 Removing gearbox	63
2.3 Installing gearbox	71
3 Transporting gearbox	74
4 Gear oil	75
4.1 Checking gear oil level	75
4.2 Draining and filling gear oil	75
35 - Gears, shafts	77
1 Input shaft	77
2 Output shaft	78



39 - Final drive - differential	79
1 Oil seals	79
1.1 Overview of fitting locations - oil seals	79
1.2 Renewing left seal	80
1.3 Renewing right seal	84