



Contents

00 - Technical data	1
1 Safety information	1
2 Identification	2
3 Repair instructions	3
3.1 General repair instructions	3
4 Technical data	7
4.1 Allocation gearbox - engine	7
4.2 Capacities	7
5 Overview - power transmission	8
6 Electrical components	10
30 - Clutch	11
1 Clutch mechanism	11
1.1 Assembly overview - clutch release mechanism	11
1.2 Repairing clutch release mechanism	13
2 Clutch	15
2.1 Assembly overview - clutch	15
2.2 Removing and installing clutch	17
34 - Controls, housing	33
1 Selector mechanism	33
2 Removing and installing gearbox	34
3 Transporting gearbox	35
4 Dismantling and assembling gearbox	37
4.1 Schematic overview - gearbox	37
4.2 Dismantling and assembling gearbox; Assembly overview - gearbox	38
4.3 Assembly overview - 5th and 6th gear	39
4.4 Assembly overview - gearbox housing and selector mechanism	42
4.5 Dismantling and assembling gearbox; Assembly overview - input shaft, output shafts, differential, selector rods	44
4.6 Assembly overview - selector forks	46
4.7 Repairing selector forks	49
4.8 Removing 5th and 6th gears	54
4.9 Dismantling and assembling gearbox	60
4.10 Installing 5th/6th gear	80
5 Gearbox housing, clutch housing	90
5.1 Assembly overview - gearbox housing and clutch housing	90
5.2 Gearbox housing, clutch housing; Assembly overview - gearbox housing cover	93
5.3 Repairing gearbox housing	93
5.4 Repairing gearbox housing cover	100
6 Securing to engine and gearbox support	103
7 Gear oil	108
35 - Gears, shafts	109
1 Input shaft	109
1.1 Assembly overview - input shaft	109
1.2 Dismantling and assembling input shaft	111
1.3 Adjusting input shaft	117
1.4 Renewing input shaft seal	122
2 Output shaft	124
2.1 Assembly overview - output shaft	124



2.2	Dismantling and assembling output shaft	127
2.3	Adjusting output shaft	144
3	Reverse shaft	150
3.1	Assembly overview - reverse shaft	150
3.2	Dismantling and assembling reverse shaft	152
39	- Final drive - differential	156
1	Oil seals	156
1.1	Overview of fitting locations - seals	156
2	Differential	157
2.1	Assembly overview - differential	157
2.2	Dismantling and assembling differential	159
2.3	Adjusting differential	167
3	Adjustment overview	172