



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 All-wheel drive - notes on performance test	2
2 Identification	3
2.1 Gearbox identification	3
3 Technical data	6
3.1 Allocation gearbox - engine	6
3.2 Capacities	7
4 Overview - power transmission	8
4.1 Overview - power transmission - front-wheel drive	8
4.2 Overview - power transmission - all-wheel drive	9
5 Electrical components	12
5.1 Overview of fitting locations - electrical components	12
6 Repair instructions	14
6.1 General repair instructions	14
30 - Clutch	17
1 Clutch mechanism	17
1.1 Assembly overview - pedal cluster	17
1.2 Assembly overview - clutch hydraulics	19
1.3 Removing and installing bearing bush	23
1.4 Checking clutch master cylinder and clutch slave cylinder	24
1.5 Removing and installing clutch position sender G476	25
1.6 Removing and installing return spring	26
1.7 Removing and installing over-centre spring	29
1.8 Removing and installing clutch pedal	33
1.9 Removing and installing mounting bracket	34
1.10 Removing and installing clutch master cylinder	40
1.11 Removing and installing bleeder	41
1.12 Removing and installing lines for clutch mechanism	45
1.13 Bleeding clutch mechanism	49
2 Clutch	51
2.1 Determining make of clutch	51
34 - Controls, housing	53
1 Selector mechanism	53
1.1 Installation position - selector mechanism	53
1.2 Assembly overview – gear knob and cover	54
1.3 Assembly overview - selector mechanism	56
1.4 Removing and installing gear knob	58
1.5 Removing and installing selector mechanism	60
1.6 Adjusting selector mechanism	71
1.7 Checking selector mechanism	75
2 Removing and installing gearbox	76
2.1 Removing gearbox	76
2.2 Installing gearbox	97
2.3 Specified torques for gearbox	102
3 Assembly mountings	104
3.1 Assembly overview - assembly mountings	104



4	Bevel box	108
4.1	Assembly overview - bevel box	108
4.2	Distinguishing between different types of bevel boxes	110
4.3	Removing bevel box	110
4.4	Installing bevel box	119
5	Transporting gearbox	125
6	Gear oil	126
6.1	Distinguishing between different manual gearbox types when filling oil	126
6.2	Checking gear oil level	126
7	Dismantling and assembling gearbox	131
7.1	Assembly overview - selector unit	131
7.2	Removing and installing selector unit with gearbox installed	132
7.3	Renewing selector shaft seal	136
8	Gearbox housing, clutch housing	139
35 - Gears, shafts		140
1	Input shaft	140
2	Output shaft	141
39 - Final drive - differential		142
1	Oil seals	142
1.1	Overview of fitting locations - oil seals	142
1.2	Renewing left seal	144
1.3	Renewing right seal	147
2	Differential	158
3	Components of bevel box	159
3.1	Renewing bevel box seals	159
3.2	Renewing output flange and redetermining thickness of shim	159
3.3	Renewing needle bearing (polygon bearing) and oil seal for right flange shaft	159
4	Gear oil	164
4.1	Checking gear oil level	164