



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with start/stop system	2
1.3 Notes on tow-starting/towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
<b>2 Identification</b>	<b>4</b>
2.1 Gearbox identification	4
<b>3 Repair notes</b>	<b>5</b>
3.1 General information	5
3.2 Rules for cleanliness	5
3.3 General repair instructions	5
3.4 Gaskets and seals	6
3.5 Nuts and bolts	7
<b>4 Technical data</b>	<b>8</b>
4.1 Allocation gearbox - engine	8
4.2 Capacities	8
<b>5 Electrical components</b>	<b>9</b>
5.1 Overview of fitting locations - electrical components	9
<b>30 - Clutch</b>	<b>10</b>
<b>1 Clutch</b>	<b>10</b>
1.1 Assembly overview - dual clutch	10
1.2 Removing and installing dual clutch end cover	10
1.3 Removing dual clutch	14
1.4 Installing dual clutch	17
<b>34 - Controls, housing</b>	<b>25</b>
<b>1 Mechatronic unit</b>	<b>25</b>
1.1 Assembly overview - mechatronic unit	25
1.2 Removing and installing sump	26
1.3 Removing and installing mechatronic unit	28
<b>2 Bevel box</b>	<b>32</b>
2.1 Assembly overview - bevel box	32
2.2 Removing bevel box	33
2.3 Installing bevel box	38
<b>3 Selector mechanism</b>	<b>42</b>
3.1 Assembly overview - selector mechanism	42
3.2 Emergency release from position P	43
3.3 Removing and installing selector lever handle	44
3.4 Moving push-button in the handle to installation position	46
3.5 Removing and installing selector mechanism	47
3.6 Checking selector mechanism	49
3.7 Checking and adjusting selector lever cable	50
3.8 Renewing selector shaft seal	51
<b>4 Removing and installing gearbox</b>	<b>54</b>
4.1 Specified torques for gearbox	54
4.2 Removing gearbox	54
4.3 Installing gearbox	64
<b>5 Assembly mountings</b>	<b>68</b>
5.1 Assembly overview - assembly mountings	68



<b>6</b>	<b>Transporting gearbox</b>	<b>70</b>
<b>7</b>	<b>Securing to engine and gearbox support</b>	<b>71</b>
<b>8</b>	<b>Gear oil circuit</b>	<b>72</b>
8.1	Assembly overview - gear oil circuit	72
8.2	Removing and installing gear oil cooler	72
8.3	Removing and installing gear oil filter	74
8.4	Removing and installing motor for auxiliary hydraulic pump 1 for gearbox oil V475	76
<b>9</b>	<b>Gear oil</b>	<b>78</b>
9.1	Overview of oil drain and inspection plugs	78
9.2	Tools for gear oil change	78
9.3	Checking gear oil level	80
9.4	Draining and filling gear oil	83
<b>35 - Gears, shafts</b>		<b>86</b>
1	Currently, no repairs can be made to gears and shafts	86
<b>39 - Final drive - differential</b>		<b>87</b>
<b>1</b>	<b>Gear oil</b>	<b>87</b>
1.1	Checking gear oil level	87
1.2	Draining and filling gear oil	88
<b>2</b>	<b>Oil seals</b>	<b>93</b>
2.1	Overview of fitting locations - seals	93
2.2	Renewing left seal	93
2.3	Renewing right oil seal	96
<b>3</b>	<b>Differential</b>	<b>98</b>
3.1	Removing and installing right flange shaft	98
<b>4</b>	<b>Components of bevel box</b>	<b>100</b>
4.1	Assembly overview - components of bevel box	100
4.2	Renewing bevel box seals	101
4.3	Renewing right oil seal	101
4.4	Renewing left seal	103
4.5	Renewing needle bearing for right flange shaft	104
4.6	Removing and installing output flange	105