



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on ignition system	2
1.5 Safety precautions when working on the cooling system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair notes	5
3.1 Rules for cleanliness	5
3.2 Foreign objects in engine	5
3.3 Contact corrosion	5
3.4 Routing and attachment of lines	5
3.5 Fitting radiator and condensers	6
3.6 Checking vacuum system	6
10 - Removing and installing engine	7
1 Removing and installing engine	7
1.1 Removing engine	7
1.2 Separating engine and gearbox	16
1.3 Securing engine on engine and gearbox support	20
1.4 Installing engine	22
2 Assembly mountings	25
2.1 Assembly overview - assembly mountings	25
2.2 Removing and installing engine mounting	27
2.3 Removing and installing gearbox mounting	28
2.4 Removing and installing pendulum support	30
2.5 Supporting engine in installation position	31
2.6 Adjusting assembly mountings	35
2.7 Checking adjustment of assembly mountings	37
3 Engine cover panel	38
3.1 Removing and installing engine cover	38
13 - Crankshaft group	39
1 Cylinder block (pulley end)	39
1.1 Assembly overview - cylinder block (pulley end)	39
1.2 Removing and installing poly-V belt	42
1.3 Removing and installing tensioner for poly V-belt	42
1.4 Removing and installing vibration damper	43
1.5 Removing and installing bracket for ancillaries	50
1.6 Removing and installing engine support	53
1.7 Renewing crankshaft oil seal - belt pulley end	54
2 Cylinder block, gearbox end	57
2.1 Assembly overview - cylinder block, gearbox end	57
2.2 Removing and installing flywheel	58
2.3 Removing and installing sealing flange on gearbox side	60
3 Crankshaft	65
3.1 Assembly overview - crankshaft	65
3.2 Crankshaft dimensions	68
3.3 Allocation of main bearing shells	68



3.4	Renewing needle bearing in crankshaft	70
3.5	Measuring axial clearance of crankshaft	72
3.6	Measuring radial clearance of crankshaft	73
3.7	Removing and installing sender wheel	74
4	Balancer shaft	76
4.1	Assembly overview - balance shaft	76
4.2	Removing and installing balance shaft	78
4.3	Renewing oil seal for balance shaft (inlet side)	83
5	Pistons and conrods	86
5.1	Assembly overview - pistons and conrods	86
5.2	Removing and installing pistons	90
5.3	Checking pistons and cylinder bores	92
5.4	Separating new conrod	94
5.5	Checking radial clearance of conrods	95
5.6	Removing and installing oil spray jets	95
15	Cylinder head, valve gear	97
1	Cylinder head	97
1.1	Assembly overview - cylinder head	97
1.2	Assembly overview - vacuum pump	100
1.3	Removing and installing cylinder head	101
1.4	Removing and installing vacuum pump	107
1.5	Checking compression	110
2	Cover for timing chain	112
2.1	Assembly overview - cover for timing chain	112
2.2	Removing and installing timing chain cover	115
3	Chain drive	124
3.1	Assembly overview - camshaft timing chains	124
3.2	Assembly overview - drive chain for balance shaft	125
3.3	Removing and installing camshaft timing chain	127
3.4	Removing and installing drive chain for balance shaft	145
3.5	Checking valve timing	145
3.6	Checking timing chain	148
4	Valve gear	150
4.1	Assembly overview - valve gear	150
4.2	Removing and installing camshaft	155
4.3	Removing and installing camshaft control valve 1 N205	173
4.4	Removing and installing exhaust camshaft control valve 1 N318	173
4.5	Removing and installing valve stem seals	174
4.6	Installing ball for sliding piece	184
4.7	Removing and installing actuators for camshaft adjustment	186
5	Inlet and exhaust valves	187
5.1	Checking valve guides	187
5.2	Checking valves	188
5.3	Valve dimensions	188
17	Lubrication	189
1	Sump, oil pump	189
1.1	Assembly overview - sump/oil pump	189
1.2	Engine oil:	192
1.3	Removing and installing lower part of sump	192
1.4	Removing and installing upper part of sump	193
1.5	Removing and installing oil pump	197
1.6	Removing and installing oil level and oil temperature sender G266	200
2	Engine oil cooler	201



2.1	Assembly overview - engine oil cooler	201
2.2	Removing and installing engine oil cooler	201
2.3	Removing and installing mechanical switching valve	203
3	Crankcase ventilation	204
3.1	Assembly overview - crankcase breather system	204
3.2	Removing and installing oil separator	205
4	Oil filter, oil pressure switch	206
4.1	Assembly overview - oil filter	206
4.2	Assembly overview - oil pressure switches/oil pressure control	206
4.3	Removing and installing oil pressure switch	208
4.4	Checking oil pressure	211
4.5	Removing and installing oil pressure regulating valve N428	213
4.6	Removing and installing piston cooling jet control valve N522	214
19	Cooling	216
1	Cooling system/coolant	216
1.1	Connection diagram - coolant hoses	216
1.2	Checking cooling system for leaks	220
1.3	Draining and adding coolant	223
1.4	Flushing cooling system	230
2	Coolant pump, regulation of cooling system	254
2.1	Assembly overview - coolant pump, thermostat	254
2.2	Assembly overview - electric coolant pump	256
2.3	Assembly overview - coolant temperature sender	258
2.4	Removing and installing coolant pump	259
2.5	Removing and installing toothed belt for coolant pump	261
2.6	Removing and installing coolant temperature sender G62	263
2.7	Removing and installing radiator outlet coolant temperature sender G83	265
2.8	Removing and installing coolant valves	266
2.9	Removing and installing actuator for engine temperature regulation N493	269
2.10	Removing and installing auxiliary pump for heating V488	271
3	Coolant pipes	273
3.1	Assembly overview - coolant pipes	273
3.2	Removing and installing upper coolant pipes	273
3.3	Removing and installing front coolant pipe	275
4	Radiator, radiator fan	277
4.1	Assembly overview - radiator	277
4.2	Assembly overview - auxiliary radiator	278
4.3	Assembly overview - radiator cowl and radiator fan	280
4.4	Removing and installing radiator	281
4.5	Removing and installing radiator cowl	283
4.6	Removing and installing radiator fan	284
4.7	Removing and installing auxiliary radiator	285
21	Turbocharging/supercharging	291
1	Turbocharger	291
1.1	Assembly overview - turbocharger	291
1.2	Removing and installing turbocharger	296
1.3	Removing and installing charge pressure positioner V465	303
1.4	Adjusting charge pressure positioner V465	304
2	Charge air system	308
2.1	Assembly overview - charge air system	308
2.2	Removing and installing charge air cooler	309
2.3	Removing and installing charge pressure sender G31	312
2.4	Checking charge air system for leaks	312



2.5	Removing and installing air pipe	315
24	Mixture preparation - injection	319
1	Injection system	319
1.1	Overview of fitting locations - injection system	319
2	Injectors	328
2.1	Assembly overview - fuel rail	328
2.2	Removing and installing fuel rail	329
2.3	Removing and installing injectors	329
2.4	Renewing seals on injectors	332
2.5	Cleaning injectors	336
3	Air filter	339
3.1	Assembly overview - air filter housing	339
3.2	Removing and installing air filter housing	340
3.3	Removing and installing air guide on lock carrier	341
4	Intake manifold	343
4.1	Assembly overview – intake manifold	343
4.2	Removing and installing intake manifold	345
4.3	Removing and installing throttle valve module GX3	351
4.4	Cleaning throttle valve module GX3	352
5	Senders and sensors	354
5.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	354
5.2	Removing and installing fuel pressure sender G247	355
5.3	Checking fuel pressure sender G247	357
5.4	Removing and installing air mass meter G70	359
5.5	Removing and installing intake manifold sender GX9	361
5.6	Removing and installing pressure differential sender for particulate filter G1037	361
5.7	Removing and installing actuator for structure-borne sound R214	362
6	Engine control unit	364
6.1	Removing and installing engine control unit J623	364
6.2	Removing and installing engine (motor) control unit J623 with protective housing	364
7	High-pressure pump	368
7.1	Assembly overview - high-pressure pump	368
7.2	Removing and installing high-pressure pump	368
7.3	Removing and installing high-pressure pipe	371
8	Lambda probe	374
8.1	Assembly overview - Lambda probe	374
8.2	Removing and installing Lambda probe	374
26	Exhaust system	378
1	Exhaust pipes and silencers	378
1.1	Assembly overview – silencers	378
1.2	Separating exhaust pipes from silencers	379
1.3	Removing and installing silencer	381
1.4	Aligning exhaust system free of stress	382
1.5	Checking exhaust system for leaks	383
1.6	Installation position of clamp	383
2	Emission control	385
2.1	Assembly overview – emission control	385
2.2	Assembly overview - pressure differential sender	388
2.3	Removing and installing exhaust pipe with catalytic converter and particulate filter	388
2.4	Removing and installing holder of pressure differential sender for particulate filter G1037	392
2.5	Removing and installing exhaust flap control unit J883/J945	394



3	Exhaust gas temperature regulation	395
3.1	Assembly overview – exhaust gas temperature regulation	395
3.2	Removing and installing parts of exhaust gas temperature regulation	395
28	Ignition system	399
1	Ignition system	399
1.1	Assembly overview - ignition system	399
1.2	Removing and installing ignition coils with output stage	401
1.3	Removing and installing knock sensor 1 G61	403
1.4	Removing and installing Hall sender	404
1.5	Removing and installing engine speed sender G28	406