



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on ignition system	2
1.5 Safety precautions when working on the cooling system	2
1.6 Safety precautions when working on exhaust system	3
<b>2 Identification</b>	<b>4</b>
2.1 Engine number/engine data	4
<b>3 Repair notes</b>	<b>6</b>
3.1 Rules for cleanliness	6
3.2 Foreign objects in engine	6
3.3 Contact corrosion	6
3.4 Routing and attachment of lines	6
3.5 Fitting radiator and condensers	7
3.6 Checking vacuum system	7
<b>10 - Removing and installing engine</b>	<b>8</b>
<b>1 Removing and installing engine</b>	<b>8</b>
1.1 Removing engine	8
1.2 Separating engine and gearbox	24
1.3 Securing engine on engine and gearbox support	34
1.4 Installing engine	37
<b>2 Assembly mountings</b>	<b>41</b>
2.1 Assembly overview - assembly mountings	41
2.2 Removing and installing engine mounting	43
2.3 Removing and installing gearbox mounting	44
2.4 Removing and installing pendulum support	46
2.5 Supporting engine in installation position	48
2.6 Checking adjustment of assembly mountings	69
2.7 Adjusting assembly mountings	69
<b>3 Engine cover panel</b>	<b>72</b>
3.1 Removing and installing engine cover	72
<b>13 - Crankshaft group</b>	<b>73</b>
<b>1 Cylinder block (pulley end)</b>	<b>73</b>
1.1 Assembly overview - cylinder block (pulley end)	73
1.2 Removing and installing poly-V belt	76
1.3 Removing and installing tensioner for poly V-belt	77
1.4 Removing and installing vibration damper	78
1.5 Renewing seal for vibration damper	85
1.6 Removing and installing bracket for ancillaries	88
1.7 Removing and installing engine support	90
<b>2 Cylinder block, gearbox end</b>	<b>93</b>
2.1 Assembly overview - cylinder block, gearbox end	93
2.2 Removing and installing flywheel	94
2.3 Removing and installing sealing flange on gearbox side	96
<b>3 Crankshaft</b>	<b>101</b>
3.1 Assembly overview - crankshaft	101
3.2 Crankshaft dimensions	104
3.3 Allocation of main bearing shells	104



3.4	Renewing needle bearing in crankshaft	106
3.5	Measuring axial clearance of crankshaft	108
3.6	Measuring radial clearance of crankshaft	109
3.7	Removing and installing sender wheel	110
<b>4</b>	<b>Balancer shaft</b>	<b>112</b>
4.1	Assembly overview - balance shaft	112
4.2	Removing and installing balance shaft	114
<b>5</b>	<b>Pistons and conrods</b>	<b>121</b>
5.1	Assembly overview - pistons and conrods	121
5.2	Removing and installing pistons	125
5.3	Checking pistons and cylinder bores	127
5.4	Separating new conrod	129
5.5	Checking radial clearance of conrods	129
5.6	Removing and installing oil spray jets	130
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>132</b>
<b>1</b>	<b>Cylinder head</b>	<b>132</b>
1.1	Assembly overview - cylinder head	132
1.2	Removing and installing cylinder head	135
1.3	Assembly overview - vacuum pump	141
1.4	Removing and installing vacuum pump	142
1.5	Checking compression	144
<b>2</b>	<b>Cover for timing chain</b>	<b>147</b>
2.1	Assembly overview - cover for timing chain	147
2.2	Removing and installing timing chain cover	150
<b>3</b>	<b>Chain drive</b>	<b>157</b>
3.1	Assembly overview - camshaft timing chains	157
3.2	Assembly overview - drive chain for balance shaft	160
3.3	Removing and installing camshaft timing chain	162
3.4	Removing and installing drive chain for balance shaft	175
3.5	Checking timing chain	178
<b>4</b>	<b>Valve gear</b>	<b>180</b>
4.1	Assembly overview - valve gear	180
4.2	Removing and installing camshaft	184
4.3	Removing and installing actuators for camshaft adjustment	195
4.4	Removing and installing camshaft control valve 1 N205	197
4.5	Removing and installing exhaust camshaft control valve 1 N318	197
4.6	Removing and installing valve stem oil seals	198
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>209</b>
5.1	Checking valve guides	209
5.2	Checking valves	210
5.3	Valve dimensions	210
<b>17</b>	<b>Lubrication</b>	<b>211</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>211</b>
1.1	Assembly overview - sump/oil pump	211
1.2	Engine oil:	214
1.3	Removing and installing lower part of sump	214
1.4	Removing and installing upper part of sump	220
1.5	Removing and installing oil pump	226
1.6	Removing and installing oil level and oil temperature sender G266	229
<b>2</b>	<b>Engine oil cooler</b>	<b>231</b>
2.1	Assembly overview - engine oil cooler	231
2.2	Removing and installing engine oil cooler	231



<b>3</b>	<b>Crankcase ventilation</b> .....	<b>234</b>
3.1	Assembly overview - crankcase breather system .....	234
3.2	Removing and installing oil separator .....	235
<b>4</b>	<b>Oil filter, oil pressure switch</b> .....	<b>237</b>
4.1	Assembly overview - oil filter .....	237
4.2	Assembly overview - oil pressure switches/oil pressure control .....	237
4.3	Removing and installing piston cooling jet control valve N522 .....	239
4.4	Removing and installing oil pressure switch .....	240
4.5	Checking oil pressure .....	244
4.6	Removing and installing oil pressure regulating valve N428 .....	248
<b>19</b>	<b>- Cooling</b> .....	<b>250</b>
<b>1</b>	<b>Cooling system/coolant</b> .....	<b>250</b>
1.1	Connection diagram - coolant hoses .....	250
1.2	Checking cooling system for leaks .....	252
1.3	Draining and adding coolant .....	256
1.4	Flushing cooling system .....	264
<b>2</b>	<b>Coolant pump, regulation of cooling system</b> .....	<b>288</b>
2.1	Assembly overview - coolant pump, thermostat .....	288
2.2	Assembly overview - electric coolant pump .....	290
2.3	Assembly overview - coolant temperature sender .....	293
2.4	Removing and installing electric coolant pump .....	294
2.5	Removing and installing coolant pump .....	297
2.6	Removing and installing toothed belt for coolant pump .....	300
2.7	Removing and installing coolant valves .....	301
2.8	Removing and installing actuator for engine temperature regulation N493 .....	306
2.9	Removing and installing coolant temperature sender G62 .....	309
2.10	Removing and installing radiator outlet coolant temperature sender G83 .....	310
<b>3</b>	<b>Coolant pipes</b> .....	<b>312</b>
3.1	Assembly overview - coolant pipes .....	312
3.2	Removing and installing coolant pipes .....	312
3.3	Removing and installing upper coolant pipes .....	314
<b>4</b>	<b>Radiator, radiator fan</b> .....	<b>316</b>
4.1	Assembly overview - radiator .....	316
4.2	Assembly overview - radiator cowl and radiator fan .....	320
4.3	Removing and installing radiator .....	322
4.4	Removing and installing radiator cowl .....	329
4.5	Removing and installing radiator fan .....	335
<b>21</b>	<b>- Turbocharging/supercharging</b> .....	<b>338</b>
<b>1</b>	<b>Turbocharger</b> .....	<b>338</b>
1.1	Assembly overview - turbocharger .....	338
1.2	Removing and installing turbocharger .....	342
<b>2</b>	<b>Charge air system</b> .....	<b>348</b>
2.1	Assembly overview - charge air system .....	348
2.2	Assembly overview - charge-air hose connections .....	351
2.3	Removing and installing charge air cooler .....	351
2.4	Removing and installing charge pressure sender G31 .....	356
2.5	Checking charge air system for leaks .....	357
2.6	Removing and installing air intake pipe between turbocharger and charge air cooler .....	359
<b>24</b>	<b>- Mixture preparation - injection</b> .....	<b>361</b>
<b>1</b>	<b>Injection system</b> .....	<b>361</b>
1.1	Overview of fitting locations - injection system .....	361
<b>2</b>	<b>Injectors</b> .....	<b>373</b>



2.1	Assembly overview - fuel rail with injectors	373
2.2	Removing and installing fuel rail	375
2.3	Removing and installing injectors	376
2.4	Renewing seals on injectors	383
2.5	Cleaning injectors	386
<b>3</b>	<b>Air filter</b>	<b>388</b>
3.1	Assembly overview - air filter housing	388
3.2	Removing and installing air filter housing	391
3.3	Removing and installing air guide on lock carrier	393
<b>4</b>	<b>Intake manifold</b>	<b>396</b>
4.1	Assembly overview – intake manifold	396
4.2	Removing and installing intake manifold	398
4.3	Removing and installing throttle valve module GX3	403
4.4	Cleaning throttle valve module GX3	406
4.5	Checking intake manifold change-over	407
<b>5</b>	<b>Senders and sensors</b>	<b>409</b>
5.1	Removing and installing fuel pressure sender G247	409
5.2	Checking fuel pressure sender G247	412
5.3	Removing and installing fuel pressure sender for low-pressure G410	414
5.4	Removing and installing intake manifold sender GX9	415
5.5	Removing and installing air mass meter G70	416
5.6	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound, Polo	418
5.7	Removing and installing pressure differential sender for particulate filter G1037	420
<b>6</b>	<b>Engine/motor control unit</b>	<b>422</b>
6.1	Removing and installing engine control unit J623	422
6.2	Removing and installing engine (motor) control unit J623 with protective housing	423
<b>7</b>	<b>High-pressure pump</b>	<b>427</b>
7.1	Assembly overview - high-pressure pump	427
7.2	Removing and installing high-pressure pump	429
7.3	Removing and installing high-pressure pipe	432
<b>8</b>	<b>Lambda probe</b>	<b>436</b>
8.1	Assembly overview - Lambda probe	436
8.2	Removing and installing lambda probe	437
<b>26 - Exhaust system</b>		<b>441</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>441</b>
1.1	Assembly overview – silencers	441
1.2	Removing and installing silencer	446
1.3	Separating exhaust pipes from silencers	453
1.4	Aligning exhaust system free of stress	459
1.5	Checking exhaust system for leaks	459
<b>2</b>	<b>Emission control</b>	<b>460</b>
2.1	Assembly overview – emission control	460
2.2	Assembly overview – bracket and pipes for pressure differential sender for particulate filter G1037	470
2.3	Removing and installing catalytic converter	471
2.4	Removing and installing holder of pressure differential sender for particulate filter G1037	491
<b>3</b>	<b>Exhaust gas temperature regulation</b>	<b>492</b>
3.1	Assembly overview – exhaust gas temperature regulation	492
3.2	Removing and installing parts of exhaust gas temperature regulation	493
<b>28 - Ignition system</b>		<b>498</b>
<b>1</b>	<b>Ignition system</b>	<b>498</b>
1.1	Assembly overview - ignition system	498



---

1.2	Removing and installing ignition coils with output stage .....	500
1.3	Removing and installing knock sensor 1 G61 .....	502
1.4	Removing and installing Hall sender .....	503
1.5	Removing and installing engine speed sender G28 .....	504