



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on SCR system	2
2 Identification	4
2.1 Engine number/engine data	4
3 General information	6
3.1 Rules for cleanliness when working on auxiliary heater and fuel system	6
4 Repair notes	7
4.1 Rules for cleanliness	7
4.2 Foreign bodies in engine	7
4.3 Contact corrosion	7
4.4 Routing and attachment of lines	8
4.5 Fitting radiator and condensers	8
20 - Fuel supply system	9
1 Procedure in event of misfuelling	9
1.1 Procedure in event of misfuelling	9
2 Fuel	18
2.1 Assembly overview - fuel tank	18
2.2 Removing and installing fuel tank	31
2.3 Emptying fuel tank	62
2.4 Removing and installing misfuelling prevention device	76
2.5 Deactivating misfuelling prevention device	81
3 Fuel delivery unit, fuel gauge sender	82
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	82
3.2 Removing and installing fuel delivery unit, fuel gauge sender	89
3.3 Removing and installing fuel gauge sender G	100
3.4 Removing and installing fuel gauge sender 2 G169	101
3.5 Removing and installing assembly opening cover	105
4 Plug-in connectors	107
4.1 Separating plug-in connectors	107
5 Fuel filter	114
5.1 Assembly overview – fuel filter	114
5.2 Removing and installing fuel filter	116
6 Accelerator pedal	120
6.1 Assembly overview - accelerator module	120
6.2 Removing and installing accelerator pedal module GX2	120
7 Fuel supply	122
7.1 Checking fuel system pressurisation pump G6	122
7.2 Removing and installing fuel pump control unit J538	142
7.3 Checking suction-jet pump	143
7.4 Removing and installing suction-jet pump	143
8 Fuel lines	152
8.1 Removing and installing fuel line for auxiliary/supplementary heater	152
8.2 Removing and installing fuel lines	154
8.3 Fuel hoses in the engine compartment	160
9 Senders and sensors	162
9.1 Removing and installing water separator sender G63	162