

001 - Basic equipment	1-18
1. Basic equipment	1
2. Horn relay, Fuse holder B, Fuse holder C	2
3. Heated rear window relay, Fuse holder C	3
4. Left horn, Onboard supply control unit	4
5. Reversing light switch, Brake fluid level warning contact, Bonnet contact switch, Bonnet contact switch 2, Ambient temperature sensor, Front right brake pad wear sender, Right horn, Onboard supply control unit	5
6. Coolant shortage indicator sender, Onboard supply control unit, Front left headlight	6
7. Onboard supply control unit, Front right headlight	7
8. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Left light module, Right light module	8
9. Rotary light switch, Hazard warning light switch, Switch module 1 in centre console, Onboard supply control unit	9
10. Onboard supply control unit, Front interior light, Rear interior light	10
11. Glove compartment light switch, Onboard supply control unit, Front right footwell light, Luggage compartment light, Glove compartment light	11
12. Horn plate, Onboard supply control unit, Steering column electronics control unit, Front left footwell light, Airbag igniter on driver side	12
13. Ignition/starter switch, Interior mirror, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	13
14. Onboard supply control unit, Left tail light cluster, Right tail light cluster, Left tail light cluster 2	14
15. Rear lid handle, Onboard supply control unit, Right tail light cluster 2, High-level brake light bulb	15
16. Onboard supply control unit, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear lid lock unit, Left number plate light, Right number plate light, Rear window	16
17. Immobiliser reader coil, Tank flap release, Onboard supply control unit, Dash panel insert	17
18. Dash panel insert	18
002 - Convenience system , (L0L)	19-40
1. Convenience system , (L0L)	19
2. Fuse holder C	20
3. Driver door control unit, Driver side exterior mirror	21
4. Driver door control unit, Driver side exterior mirror	22
5. Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit, Driver door storage compartment illumination bulb, Light for driver side interior door handle illumination, Light for driver door background lighting, Light 2 for driver door background lighting	23
6. Exterior mirror adjuster, Operating unit for window regulator in driver door, Driver door control unit, Central locking SAFELOCK function warning lamp	24
7. Driver door control unit, Driver door lock unit, Driver side window regulator motor	25
8. Driver door control unit	26
9. Front passenger door control unit	27
10. Front passenger side window regulator button, Front passenger door control unit, Front passenger door storage compartment illumination bulb, Light for passenger side interior door handle illumination, Front passenger side window regulator motor, Light for passenger door background lighting, Light 2 for passenger door background lighting	28
11. Front passenger door control unit, Passenger side exterior mirror	29
12. Front passenger door control unit, Passenger side exterior mirror	30
13. Rear driver side window regulator button, Rear left door lock unit, Rear driver side window regulator motor	31
14. Rear passenger side window regulator button, Rear right door lock unit, Rear passenger side window regulator motor	32
15. Interior mirror, Front interior light	33
16. Driver vanity mirror contact switch, Rear interior light, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light	34
17. Front passenger vanity mirror contact switch, Rear lid lock unit, Front passenger side illuminated vanity mirror	35
18. Button to close rear lid in luggage compartment, Rear lid warning buzzer, Rear lid control unit, Centre console illumination bulb, Power latching for rear lid	36
19. Rear lid control unit, Motor 1 for rear lid	37
20. Data bus diagnostic interface	38
21. Onboard supply control unit	39
22. Onboard supply control unit	40
003 - Convenience system . (L0R)	41-62

1. Convenience system , (L0R)	41
2. Fuse holder C	42
3. Driver door control unit, Driver side exterior mirror	43
4. Driver door control unit, Driver side exterior mirror	44
5. Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit, Driver door storage compartment illumination bulb, Light for driver side interior door handle illumination, Light for driver door background lighting, Light 2 for driver door background lighting	45
6. Exterior mirror adjuster, Operating unit for window regulator in driver door, Driver door control unit, Central locking SAFELOCK function warning lamp	46
7. Driver door control unit, Driver door lock unit, Driver side window regulator motor	47
8. Driver door control unit	48
9. Front passenger door control unit, Front passenger door lock unit	49
10. Front passenger side window regulator button, Front passenger door control unit, Front passenger door storage compartment illumination bulb, Light for passenger side interior door handle illumination, Front passenger side window regulator motor, Light for passenger door background lighting, Light 2 for passenger door background lighting	50
11. Front passenger door control unit, Passenger side exterior mirror	51
12. Front passenger door control unit, Passenger side exterior mirror	52
13. Rear passenger side window regulator button, Rear left door lock unit, Rear passenger side window regulator motor	53
14. Rear driver side window regulator button, Rear right door lock unit, Rear driver side window regulator motor	54
15. Interior mirror, Front interior light	55
16. Driver vanity mirror contact switch, Rear interior light, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light	56
17. Rear lid handle, Front passenger vanity mirror contact switch, Rear lid lock unit, Front passenger side illuminated vanity mirror	57
18. Button to close rear lid in luggage compartment, Rear lid warning buzzer, Rear lid control unit, Power latching for rear lid	58
19. Rear lid control unit, Motor 1 for rear lid	59
20. Data bus diagnostic interface	60
21. Onboard supply control unit	61
22. Onboard supply control unit	62
004 - Brake system , (L0L)	63-70
1. Brake system , (L0L)	63
2. ABS control unit, Fuse holder B, Fuse holder C	64
3. ABS control unit, Left parking brake motor	65
4. Switch module 1 in centre console, Rear right speed sensor, Rear left speed sensor, ABS control unit, Right parking brake motor	66
5. Front right speed sensor, Front left speed sensor, Clutch position sender, Vacuum sender, ABS control unit	67
6. Electromechanical parking brake button	68
7. Brake fluid level warning contact, Front right brake pad wear sender, Onboard supply control unit	69
8. Data bus diagnostic interface, Dash panel insert	70
005 - Brake system , (L0R)	71-78
1. Brake system , (L0R)	71
2. ABS control unit, Fuse holder B, Fuse holder C	72
3. ABS control unit, Left parking brake motor, Earth point, on left in engine compartment	73
4. Switch module 1 in centre console, Rear right speed sensor, Rear left speed sensor, ABS control unit, Right parking brake motor	74
5. Front right speed sensor, Front left speed sensor, Clutch position sender, Vacuum sender, ABS control unit	75
6. Electromechanical parking brake button	76
7. Brake fluid level warning contact, Front right brake pad wear sender, Onboard supply control unit	77
8. Data bus diagnostic interface, Dash panel insert	78
006 - Airbag systems , (L0L)	79-87
1. Airbag systems , (L0L)	79
2. Airbag control unit, Airbag warning lamp, Fuse holder C	80
3. Airbag control unit, Front left seat belt, Front right seat belt, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	81
4. Crash sensor for front airbag, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	82
5. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbaa control unit. Steering column electronics control unit. Airbaa igniter on driver side.	83

Diagnostic connection	
6. Key-operated switch to deactivate airbag on front passenger side, Twin belt buckle, Belt switch for seat row 2, passenger side, Airbag control unit, Airbag igniter 1 on front passenger side	84
7. Driver side belt switch, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	85
8. Front passenger side belt switch, Seat occupied sensor on front passenger side, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	86
9. Airbag control unit, Data bus diagnostic interface, Dash panel insert	87
007 - Airbag systems , (LOR)	88-96
1. Airbag systems , (LOR)	88
2. Airbag control unit, Airbag warning lamp, Fuse holder C	89
3. Airbag control unit, Front left seat belt, Front right seat belt, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	90
4. Crash sensor for front airbag, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	91
5. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Diagnostic connection	92
6. Key-operated switch to deactivate airbag on front passenger side, Twin belt buckle, Belt switch for seat row 2, passenger side, Airbag control unit, Airbag igniter 1 on front passenger side	93
7. Driver side belt switch, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	94
8. Front passenger side belt switch, Seat occupied sensor on front passenger side, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	95
9. Airbag control unit, Data bus diagnostic interface, Dash panel insert	96
008 - Fuses in engine compartment	97-123
1. Fuses in engine compartment	97
2. Automatic glow period control unit, Low heat output relay, Relay and fuse carrier 1	98
3. Wiper motor relay 1, Wiper motor relay 2, Wiper motor control unit, Fuse holder C, Relay and fuse carrier 3	99
4. Engine component power supply relay, Fuse holder D, Relay and fuse carrier 3	100
5. Auxiliary heater control unit, Front left headlight, Front right headlight, Fuse holder D, Auxiliary hydraulic pump 1 for gearbox oil	101
6. Battery, Starter, Alternator with voltage regulator, Power steering control unit, Fuse holder B	102
7. ABS control unit, Fuse holder B, Radiator fan	103
8. Alarm horn, Automatic gearbox control unit, Battery monitor control unit, Fuse holder B	104
9. Clutch position sender, Starter relay 1, Starter relay 2, Fuse holder B	105
10. Left horn, Right horn, High heat output relay, Horn relay, Fuse holder B, Auxiliary air heater element	106
11. Main relay, Terminal 30 voltage supply relay, Fuse holder B	107
12. Air mass measurement module, Oil level and oil temperature sender, Charge pressure control solenoid valve, Fuse holder B, Auxiliary pump for heating	108
13. Brake light switch, Valve for oil pressure control, Fuse holder B	109
14. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Control unit 1 for particulate sensor, Coolant valve for gearbox, Fuse holder B, Charge air cooling pump	110
15. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Heater element for crankcase breather, Fuse holder B	111
16. Fuel pump control unit, Fuse holder B	112
17. Mechatronic unit for dual clutch gearbox, Exhaust flap control unit, Exhaust flap control unit 2, Fuse holder B	113
18. Onboard supply control unit, Vacuum pump for brakes	114
19. Engine/motor control unit	115
20. Engine/motor control unit	116
21. Turbocharger air recirculation valve, Fuel pressure regulating valve, Intake manifold flap valve, Piston cooling jet control valve, Glow plug 1, Glow plug 2	117
22. Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Glow plug 3, Coolant circulation pump, Auxiliary pump for heating	118
23. Function unit for active oil separation, Piston cooling jet control valve, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Inlet camshaft control valve 1	119
24. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Glow plug 4	120
25. Coolant shut-off valve, Exhaust gas recirculation cooler changeover valve, Coolant valve for cvlinder head. Actuator for engine temperature reulation. Coolant reulatina valve	121

26. Cam adjustment actuator 1, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Inlet cam actuator A for cylinder 1, Inlet cam actuator B for cylinder 1, Inlet cam actuator A for cylinder 2, Inlet cam actuator B for cylinder 2, Inlet cam actuator A for cylinder 3, Inlet cam actuator B for cylinder 3, Inlet cam actuator A for cylinder 4, Inlet cam actuator B for cylinder 4	122
27. Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8	123
009 - Earthing concept	124-145
1. Earthing concept	124
2. Battery, ABS control unit, Battery monitor control unit, Power steering control unit	125
3. Front right brake pad wear sender, Right horn, Wiper motor control unit, Right fog light bulb, Front right headlight, Vacuum pump for brakes	126
4. Bonnet contact switch, Air quality sensor, Pressure sender for refrigerant circuit, Alarm horn, Auxiliary heater control unit, Control unit for structure-borne sound, Right light module	127
5. Brake light switch, Brake fluid level warning contact, Bonnet contact switch 2, Oil level and oil temperature sender, Left horn, Fuse holder B	128
6. Clutch position sender, Automatic glow period control unit, Low heat output relay, Adaptive cruise control unit, Mechatronic unit for dual clutch gearbox, Control unit for cornering light and headlight range control, Left fog light bulb, Front left headlight, Left light module, Air conditioner compressor regulating valve, Relay and fuse carrier 1, Relay and fuse carrier 3, Auxiliary hydraulic pump 1 for gearbox oil	129
7. Control unit for NOx sender, Control unit 3 for NOx sender, Control unit 1 for particulate sensor, Left washer jet heater element, Right washer jet heater element	130
8. Function unit for active oil separation, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Coolant circulation pump, Charge air cooling pump, Auxiliary pump for heating	131
9. Ignition coil 3 with output stage, Ignition coil 4 with output stage	132
10. Oil pressure switch, Oil pressure switch for reduced oil pressure, Fuel pressure regulating valve	133
11. Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Coolant valve for gearbox, Piston cooling jet control valve	134
12. Engine/motor control unit, Radiator fan	135
13. Rear lid handle, Rear lid handle release button, Operating unit for preparation for mobile telephone, Digital sound package control unit, Chip card reader control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for navigation system, Emergency call module control unit and communication unit, TV tuner, CD ROM drive, Storage compartment with interface for mobile telephone, USB hub, Transmission and reception stabilisation control unit, USB connection 1	136
14. Front passenger exterior door handle, Sliding sunroof adjustment control unit, Front passenger door control unit, Front right footwell light, Front passenger door lock unit, Rear right door lock unit, Rear passenger side window regulator motor, Glove compartment light, Seat heating (front passenger side)	137
15. Parking aid control unit, Steering column electronics control unit, Front left footwell light, Front camera for driver assist systems, Fuse holder C, Diagnostic connection	138
16. Driver exterior door handle, Fresh air blower control unit, Driver door control unit, Onboard supply control unit, Control unit for electronic steering column lock, Driver door lock unit, Rear left door lock unit, Rear driver side window regulator motor	139
17. Hazard warning light switch, Heater and air conditioning controls, Switch module 1 in centre console, Switch module 2 in centre console, Selector lever, 12 V socket 2, 12 V socket 3, Auxiliary air heater element	140
18. Starter button, Electromechanical parking brake button, Operating unit for driving mode selection, Driver seat adjustment control unit, Interface for entry and start system, Centre console illumination bulb, USB charging socket 1, Seat heating (driver side)	141
19. Electronically controlled damping control unit, Trailer detector control unit, All-wheel drive control unit, Rear lid control unit, Exhaust flap control unit, Left tail light cluster	142
20. Button to close rear lid in luggage compartment, Rear left vehicle level sender, Left tail light cluster 2, Right tail light cluster 2, High-level brake light bulb, Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Trailer socket, Rear window wiper motor, Power latching for rear lid, Rear lid lock unit	143
21. Fuel delivery unit, Delivery unit for reducing agent metering system, Fuel pump control unit, Front left seat belt, Front right seat belt, Metering pump, Heater for reducing agent line (heater circuit 2)	144
22. Lane change assist control unit, Lane change assist control unit 2, Rear lid power opening control unit, Exhaust flap control unit 2, Right tail light cluster, Remote control receiver for auxiliary coolant heater, Left number plate light, Right number plate light	145
010 - LED headlights . (8IT)	146-150

1. LED headlights , (8IT)	146
2. Rear left vehicle level sender, Onboard supply control unit	147
3. Onboard supply control unit, Front left headlight, Left light module	148
4. Front right headlight, Right light module	149
5. Data bus diagnostic interface, Control unit for cornering light and headlight range control	150
011 - Electromechanical steering , (1N3),(1N5),(1N7)	151-153
1. Electromechanical steering , (1N3),(1N5),(1N7)	151
2. Power steering control unit	152
3. Data bus diagnostic interface	153
012 - Seat heating , (4A3)	154-157
1. Seat heating , (4A3)	154
2. Onboard supply control unit, Fuse holder C, Seat heating (driver side)	155
3. Onboard supply control unit, Seat heating (front passenger side)	156
4. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface	157
013 - Entry and start authorisation , (4F2),(4I3)	158-163
1. Entry and start authorisation , (4F2),(4I3)	158
2. Data bus diagnostic interface, Interface for entry and start system, Fuse holder C	159
3. Starter button, Onboard supply control unit, Interface for entry and start system	160
4. Engine/motor control unit, Interface for entry and start system, Rear bumper aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	161
5. Driver exterior door handle, Front passenger exterior door handle, Interface for entry and start system	162
6. Interface for entry and start system	163
014 - Window wash/wipe system , (8N6),(8N8),(8M1)	164-168
1. Window wash/wipe system , (8N6),(8N8),(8M1)	164
2. Relay and fuse carrier 3, Fuse holder C	165
3. Wiper motor control unit, Onboard supply control unit, Left washer jet heater element, Right washer jet heater element	166
4. Windscreen washer fluid level sender, Onboard supply control unit, Washer pump	167
5. Onboard supply control unit, Rear window wiper motor	168
015 - Dual clutch gearbox 0GC , (0IJ)	169-173
1. Dual clutch gearbox 0GC , (0IJ)	169
2. Mechatronic unit for dual clutch gearbox, Ignition key withdrawal lock solenoid, Fuse holder B, Fuse holder C, Fuse holder D	170
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil	171
4. Selector lever, Steering column electronics control unit, Mechatronic unit for dual clutch gearbox	172
5. Selector lever, Onboard supply control unit, Data bus diagnostic interface	173
016 - Dual clutch gearbox 0CW , (0EG)	174-177
1. Dual clutch gearbox 0CW , (0EG)	174
2. Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	175
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	176
4. Selector lever, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	177
017 - Multifunction steering wheel , (1XX),(2FJ),(2FU),(2FW),(2PK),(2PU),(2ZD),(2ZH),(2ZW)	178-180
1. Multifunction steering wheel , (1XX),(2FJ),(2FU),(2FW),(2PK),(2PU),(2ZD),(2ZH),(2ZW)	178
2. Tiptronic switch in steering wheel to shift down, Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	179
3. Tiptronic switch in steering wheel to shift up, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	180
018 - Climatronic , (9AK)	181-189
1. Climatronic , (9AK)	181
2. Heater and air conditioning controls, Fuse holder C	182
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Fresh air blower control unit, Fresh air blower	183
4. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Air quality sensor, Onboard supply control unit, Data bus diagnostic interface	184
5. Heater and air conditioning controls	185
6. Heater and air conditioning controls, Air conditioner compressor regulating valve	186
7. Heater and air conditioning controls, Front left temperature flap, Front right temperature flap	187
8. Heater and air conditioning controls, Defroster flap, Fresh air and air recirculation flap	188
9. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor, Air distribution flap	189

019 - Air conditioning system , (KH6)	190-196
1. Air conditioning system , (KH6)	190
2. Heater and air conditioning controls, Fresh air blower control unit, Fuse holder C	191
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit	192
4. Heater and air conditioning controls	193
5. Heater and air conditioning controls, Data bus diagnostic interface, Air recirculation flap control motor	194
6. Heater and air conditioning controls, Air conditioner compressor regulating valve	195
7. Heater and air conditioning controls, Evaporator temperature sensor, Air distribution flap, Front left temperature flap	196
020 - Anti-theft alarm system , (7AL),(7AS)	197-198
1. Anti-theft alarm system , (7AL),(7AS)	197
2. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Fuse holder B, Fuse holder C, Front interior light	198
021 - Parking aid (PDC) , (7X2),(7X5)	199-204
1. Parking aid (PDC) , (7X2),(7X5)	199
2. Switch module 2 in centre console, Parking aid control unit, Onboard supply control unit, Fuse holder C	200
3. Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit, Data bus diagnostic interface	201
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left sender for park assist steering on left side of vehicle, Parking aid control unit	202
5. Rear left parking aid sender, Front left parking aid sender, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Parking aid control unit	203
6. Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Rear right park assist steering sender, Parking aid control unit	204
022 - Adaptive chassis control DCC , (2H4)	205-209
1. Adaptive chassis control DCC , (2H4)	205
2. Front left vehicle level sender, Front left body acceleration sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Fuse holder C	206
3. Rear left vehicle level sender, Front right vehicle level sender, Front right body acceleration sender, Electronically controlled damping control unit, Front right shock absorber damping adjustment valve	207
4. Rear body acceleration sender, Electronically controlled damping control unit, Data bus diagnostic interface, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	208
5. Switch module 1 in centre console, Onboard supply control unit	209
023 - Radio navigation system	210-218
1. Radio navigation system	210
2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	211
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	212
4. Control unit 1 for information electronics, Telephone microphone, USB hub, USB connection 1, USB connection 2	213
5. Control unit 1 for information electronics, Front left loudspeaker, Front right loudspeaker, Front left treble loudspeaker, Front right treble loudspeaker	214
6. Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert, Rear left loudspeaker, Rear right loudspeaker	215
7. Control unit 1 for information electronics, CD ROM drive	216
8. Control unit 1 for information electronics, Left aerial module	217
9. Rear lid handle, Control unit 1 for information electronics, Roof aerial, Right aerial module	218
024 - Reversing camera (Rear Assist) , (KA1)	219-221
1. Reversing camera (Rear Assist) , (KA1)	219
2. Interior mirror, Rear lid handle, Onboard supply control unit, Fuse holder C	220
3. Rear lid handle, Control unit 1 for information electronics	221
025 - Auxiliary heater , (9M9)	222-225
1. Auxiliary heater , (9M9)	222
2. Auxiliary heater control unit, Data bus diagnostic interface, Fuse holder C, Fuse holder D, Metering pump	223
3. Auxiliary heater control unit	224
4. Roof aerial, Remote control receiver for auxiliary coolant heater	225
026 - Radiator fan	226-227
1. Radiator fan	226
2. Engine/motor control unit. Fuse holder B. Radiator fan	227

027 - All-wheel drive , (1X1)	228-229
1. All-wheel drive , (1X1)	228
2. All-wheel drive control unit, Data bus diagnostic interface, Fuse holder C	229
028 - Data bus network	230-245
1. Data bus network	230
2. Fuse holder C, Diagnostic connection	231
3. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	232
4. Pressure sender for refrigerant circuit, Auxiliary heater control unit, Digital sound package control unit, Data bus diagnostic interface	233
5. Electronically controlled damping control unit, Parking aid control unit, All-wheel drive control unit, Power steering control unit, Data bus diagnostic interface	234
6. ABS control unit, Data bus diagnostic interface	235
7. Selector lever, Automatic gearbox control unit, Airbag control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Control unit for structure-borne sound, Front left seat belt, Front right seat belt	236
8. Data bus diagnostic interface, Front left headlight, Front right headlight, Auxiliary hydraulic pump 1 for gearbox oil	237
9. Data bus diagnostic interface, Control unit for cornering light and headlight range control	238
10. Adaptive cruise control unit, Data bus diagnostic interface, Rear lid control unit, Driver seat adjustment control unit, Interface for entry and start system	239
11. Operating unit for driving mode selection, Driver door control unit, Front passenger door control unit, Steering column electronics control unit, Data bus diagnostic interface, Control unit for electronic steering column lock	240
12. Heater and air conditioning controls, Fresh air blower control unit, Sliding sunroof adjustment control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	241
13. Trailer detector control unit, Data bus diagnostic interface	242
14. Interior mirror, Lane change assist control unit, Lane change assist control unit 2, Front camera for driver assist systems	243
15. Anti-theft alarm sensor, Onboard supply control unit, Dash panel insert, Front interior light	244
16. Alternator with voltage regulator, Battery monitor control unit	245
029 - Trailer coupling , (1D2),(1M5)	246-249
1. Trailer coupling , (1D2),(1M5)	246
2. Trailer detector control unit, Fuse holder C	247
3. Trailer detector control unit, Onboard supply control unit, Trailer socket	248
4. Trailer detector control unit, Data bus diagnostic interface, Trailer socket	249
030 - Sound system , (9VG),(I8C),(I8F)	250-253
1. Sound system , (9VG),(I8C),(I8F)	250
2. Digital sound package control unit, Control unit 1 for information electronics, Fuse holder C	251
3. Digital sound package control unit, Data bus diagnostic interface, Front left treble loudspeaker, Front right treble loudspeaker, Subwoofer	252
4. Digital sound package control unit, Rear left bass loudspeaker, Rear right bass loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker	253
031 - Adaptive cruise control , (6K3),(6K4),(8T7),(8T8)	254-255
1. Adaptive cruise control , (6K3),(6K4),(8T7),(8T8)	254
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	255
032 - Sliding/tilting sunroof , (3FU)	256-259
1. Sliding/tilting sunroof , (3FU)	256
2. Sunroof switch, Sliding sunroof adjustment control unit, Data bus diagnostic interface	257
3. Sliding sunroof adjustment control unit, Sliding sunroof motor	258
4. Button 1 for roof roller blind, Sliding sunroof adjustment control unit, Sunroof roller blind motor	259
033 - 12 V sockets , (9JA),(7B6)	260-262
1. 12 V sockets , (9JA),(7B6)	260
2. Fuse holder C, 12 V socket 2	261
3. Onboard supply control unit, 12 V socket 3	262
034 - Front camera for driver assist systems , (QK1)	263-264
1. Front camera for driver assist systems , (QK1)	263
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	264
035 - Steering column electronics for heated steering wheel , (2ZD),(2ZW)	265-267
1. Steering column electronics for heated steering wheel , (2ZD),(2ZW)	265
2. Selector lever, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	266

3. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Heated steering wheel	267
036 - Mobile telephone systems , (9IJ)	268-271
1. Mobile telephone systems , (9IJ)	268
2. Control unit 1 for information electronics, Storage compartment with interface for mobile telephone, Transmission and reception stabilisation control unit, Fuse holder C	269
3. Emergency call module control unit and communication unit, LTE aerial 1, LTE aerial 2, Transmission and reception stabilisation control unit	270
4. Roof aerial, Transmission and reception stabilisation control unit	271
037 - Emergency call module , (EL2),(EL5),(NZ4),(I8F)	272-275
1. Emergency call module , (EL2),(EL5),(NZ4),(I8F)	272
2. Operating unit for preparation for mobile telephone, Loudspeaker for emergency call module, Fuse holder C	273
3. Data bus diagnostic interface	274
4. Control unit 1 for information electronics, Telephone microphone	275
038 - Tail light clusters with LEDs , (8SK),(8SQ),(8VG)	276-279
1. Tail light clusters with LEDs , (8SK),(8SQ),(8VG)	276
2. Onboard supply control unit, Left tail light cluster, Right tail light cluster	277
3. Onboard supply control unit, Left tail light cluster 2, Right tail light cluster 2	278
4. Onboard supply control unit, Left number plate light, Right number plate light	279
039 - 1.0l petrol engine , CHZJ	280-294
1. 1.0l petrol engine , CHZJ	280
2. Battery, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B	281
3. Starter, Fuse holder B	282
4. Switch module 1 in centre console, Onboard supply control unit, Fuse holder B, Fuse holder D	283
5. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, Coupling point in interior, below left	284
6. Brake light switch, Oil level and oil temperature sender, Clutch position sender, ABS control unit, Engine/motor control unit	285
7. Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit, Radiator fan, Vacuum pump for brakes	286
8. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	287
9. Throttle valve module, Oil pressure sender, Engine/motor control unit	288
10. Intake manifold sender, Charge pressure sender, Engine speed sender, Engine/motor control unit	289
11. Hall sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	290
12. Coolant temperature sender, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	291
13. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Charge air cooling pump	292
14. Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	293
15. Fuel delivery unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Interface for entry and start system, Dash panel insert	294
040 - 1.5l petrol engine , DADA,DPCA	295-317
1. 1.5l petrol engine , DADA,DPCA	295
2. Battery, Starter, Fuse holder B	296
3. Fuse holder B	297
4. Vacuum pump relay, Fuse holder C, Fuse holder D	298
5. Switch module 1 in centre console, Battery monitor control unit, Onboard supply control unit, Vacuum pump for brakes	299
6. Engine/motor control unit	300
7. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	301
8. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	302
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator fan	303
10. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	304
11. Engine/motor control unit	305
12. Oil level and oil temperature sender, Power steering control unit, Data bus diagnostic interface, Engine/motor control unit	306



13. Engine/motor control unit	307
14. Oil pressure sender, Charge pressure sender, Engine/motor control unit	308
15. Engine speed sender, Charge pressure control module, Knock sensor 1, Fuel pressure sender, Pressure differential sender for particulate filter, Engine/motor control unit	309
16. Intake manifold sender, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	310
17. Throttle valve module, Engine temperature regulation module, Engine/motor control unit, Fuel metering valve	311
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	312
19. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Inlet camshaft control valve 1	313
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Exhaust cam actuator for cylinder 3, Charge air cooling pump	314
21. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	315
22. Fuel delivery unit, Fuel pump control unit, Dash panel insert	316
23. Fuel delivery unit	317
041 - 2.0l petrol engine , CZPB,DKZA	318-341
1. 2.0l petrol engine , CZPB,DKZA	318
2. Starter relay 1, Starter relay 2, Fuse holder B	319
3. Main relay, Fuse holder B	320
4. Battery, Starter, Switch module 1 in centre console, Onboard supply control unit, Fuse holder C, Relay and fuse carrier 3	321
5. Radiator outlet coolant temperature sender, Engine/motor control unit, Radiator fan	322
6. Brake light switch, Accelerator pedal module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	323
7. Ignition/starter switch, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system	324
8. Lambda probe 1 before catalytic converter, Engine/motor control unit	325
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	326
10. Alternator with voltage regulator, Air mass measurement module, Temperature sender before particulate filter, Temperature sender after particulate filter, Engine/motor control unit	327
11. Charge pressure sender, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Coolant valve for gearbox	328
12. Engine/motor control unit	329
13. Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Coolant shut-off valve, Actuator for engine temperature regulation	330
14. Throttle valve module, Engine speed sender, Hall sender 3, Engine/motor control unit	331
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Intake manifold sender, Engine/motor control unit	332
16. Fuel pressure sender for low pressure, Engine/motor control unit	333
17. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Pressure differential sender for particulate filter, Engine/motor control unit	334
18. Engine/motor control unit, Turbocharger air recirculation valve, Fuel pressure regulating valve, Intake manifold flap valve, Charge pressure positioner	335
19. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve, Auxiliary pump for heating	336
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	337
21. Engine/motor control unit, Inlet cam actuator A for cylinder 1, Inlet cam actuator B for cylinder 1, Inlet cam actuator A for cylinder 2, Inlet cam actuator B for cylinder 2, Inlet cam actuator A for cylinder 3, Inlet cam actuator B for cylinder 3	338
22. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Inlet cam actuator A for cylinder 4, Inlet cam actuator B for cylinder 4	339
23. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	340
24. Fuel delivery unit, Fuel pump control unit, Dash panel insert	341
042 - 2.0l diesel engine , DFFA,DFHA	342-369
1. 2.0l diesel engine , DFFA,DFHA	342
2. Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	343
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	344

4. Fuse holder B	345
5. Battery, Starter, Relay for reducing agent metering system, Fuse holder C	346
6. Automatic glow period control unit, Low heat output relay, Relay and fuse carrier 1	347
7. Switch module 1 in centre console, Onboard supply control unit, Engine/motor control unit	348
8. Engine/motor control unit	349
9. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	350
10. Delivery unit for reducing agent metering system, Engine/motor control unit	351
11. Alternator with voltage regulator, Engine/motor control unit, Charge air cooling pump	352
12. Air mass measurement module, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit, Heater element for crankcase breather, Radiator fan	353
13. Accelerator pedal module, Engine/motor control unit, Exhaust flap control unit	354
14. Lambda probe 1 before catalytic converter, Engine/motor control unit	355
15. Control unit for NOx sender, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	356
16. Water separator sender, Gearbox neutral position sender, Engine/motor control unit	357
17. Brake light switch, Oil level and oil temperature sender, Engine/motor control unit, Injector for reducing agent	358
18. Engine/motor control unit, Auxiliary pump for heating	359
19. Steering column electronics control unit, Engine/motor control unit	360
20. Ignition/starter switch, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system	361
21. Exhaust gas temperature sender 4, Engine/motor control unit, Charge pressure control solenoid valve, Glow plug 1, Glow plug 2	362
22. Position sender for charge pressure positioner, Engine/motor control unit, Glow plug 3, Glow plug 4	363
23. Exhaust gas temperature sender 1, Pressure differential sender, Engine/motor control unit	364
24. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Injector, cylinder 1, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	365
25. Charge pressure sender, Hall sender, Fuel temperature sender, Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	366
26. Throttle valve module, Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	367
27. Engine speed sender, Coolant temperature sender, Fuel pressure sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	368
28. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	369
043 - Fuses in interior	370-386
1. Fuses in interior	370
2. Heater and air conditioning controls, Selector lever, Data bus diagnostic interface, Ignition key withdrawal lock solenoid, Fuse holder B, Fuse holder C	371
3. Rotary light switch, Heater and air conditioning controls, Electromechanical parking brake button, Rain and light sensor, Remote control receiver for auxiliary coolant heater, Fuse holder C, Diagnostic connection	372
4. Ignition/starter switch, Operating unit for driving mode selection, Anti-theft alarm sensor, Adaptive cruise control unit, Steering column electronics control unit, Display unit for front information display and operating unit control unit, Control unit for cornering light and headlight range control, Control unit 1 for information electronics, Control unit for navigation system, CD ROM drive, Fuse holder C	373
5. Fresh air blower control unit, Trailer detector control unit, Front passenger door control unit, Front left seat belt, Fuse holder C, Rear passenger side window regulator motor	374
6. Heated rear window relay, Relay for power sockets, Front right seat belt, Frequency modulation (FM) frequency filter in positive wire, Fuse holder C, Rear window	375
7. Terminal 15 voltage supply relay, Parking aid control unit, Front camera for driver assist systems, Fuse holder C, 12 V socket 2, 12 V socket 3	376
8. Interior mirror, Reversing light switch, Air quality sensor, Pressure sender for refrigerant circuit, Alarm horn, Airbag control unit, Control unit for structure-borne sound, Front left headlight, Front right headlight, Air conditioner compressor regulating valve, Fuse holder C	377
9. Clutch position sender, Control unit for electronic steering column lock, Fuse holder C, USB connection 1, Rear window wiper motor	378
10. Chip card reader control unit, Emergency call module control unit and communication unit, Dash panel insert, TV tuner, Storage compartment with interface for mobile telephone, USB hub, Transmission and reception stabilisation control unit, Fuse holder C	379
11. Delivery unit for reducing agent metering system, Relay for reducing agent metering system, Fuse holder C	380

12. Rear lid handle, Sliding sunroof adjustment control unit, Driver door control unit, Interface for entry and start system, Fuse holder C, Rear driver side window regulator motor	381
13. Digital sound package control unit, Driver seat adjustment control unit, Fuse holder C	382
14. All-wheel drive control unit, Control unit for reducing agent heater, Fuse holder C	383
15. Electronically controlled damping control unit, Rear lid control unit, Fuse holder C, USB charging socket 1	384
16. Fuse holder C, Fuse carrier 5, Fuse carrier 9	385
17. Onboard supply control unit, Engine/motor control unit	386
044 - 1.6l diesel engine , DGTE	387-409
1. 1.6l diesel engine , DGTE	387
2. High heat output relay, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	388
3. Terminal 30 voltage supply relay, Fuse holder B, Auxiliary air heater element	389
4. Battery, Starter, Switch module 1 in centre console, Onboard supply control unit, Fuse holder B	390
5. Automatic glow period control unit, Low heat output relay, Relay and fuse carrier 1, Auxiliary air heating fuse	391
6. Engine/motor control unit, Fuse holder C	392
7. Brake light switch, Engine/motor control unit	393
8. Control unit for NOx sender, Control unit 2 for NOx sender, Clutch position sender, ABS control unit, Engine/motor control unit, Radiator fan	394
9. Lambda probe 1 before catalytic converter, Air mass measurement module, Gearbox neutral position sender, Engine/motor control unit	395
10. Accelerator pedal module, Engine/motor control unit, Exhaust flap control unit	396
11. Oil level and oil temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit, Auxiliary pump for heating	397
12. Exhaust gas temperature sender 4, Engine/motor control unit, Control unit for reducing agent heater, Heater element for crankcase breather, Heater for reducing agent line (heater circuit 2)	398
13. Delivery unit for reducing agent metering system, Engine/motor control unit	399
14. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	400
15. Alternator with voltage regulator, Data bus diagnostic interface, Engine/motor control unit, Charge air cooling pump	401
16. Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	402
17. Engine/motor control unit, Charge pressure control solenoid valve, Injector for reducing agent	403
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	404
19. Throttle valve module, Hall sender, Position sender for charge pressure positioner, Engine/motor control unit	405
20. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine speed sender, Engine/motor control unit	406
21. Charge pressure sender, Coolant temperature sender, Exhaust gas temperature sender 1, Fuel pressure sender, Pressure differential sender, Engine/motor control unit	407
22. Oil pressure switch, Oil pressure switch for reduced oil pressure, Fuel temperature sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit, Fuel pressure regulating valve	408
23. Fuel delivery unit, Fuel pump control unit, Dash panel insert	409
045 - Lane change assist , (7Y8),(7Y9)	410-412
1. Lane change assist , (7Y8),(7Y9)	410
2. Lane change assist control unit, Lane change assist control unit 2, Fuse holder C	411
3. Data bus diagnostic interface, Lane change assist control unit	412
046 - 1.0l petrol engine , DKRA,DKRF	413-430
1. 1.0l petrol engine , DKRA,DKRF	413
2. Battery, Alternator with voltage regulator, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	414
3. Starter, Main relay, Fuse holder B	415
4. Fuse holder B, Fuse holder C, Fuse holder D	416
5. Switch module 1 in centre console, Onboard supply control unit, Engine/motor control unit	417
6. Brake light switch, Gearbox neutral position sender, Engine/motor control unit	418
7. Accelerator pedal module, Radiator outlet coolant temperature sender, Clutch position sender, ABS control unit, Engine/motor control unit	419
8. Oil level and oil temperature sender, Power steering control unit, Data bus diagnostic interface, Engine/motor control unit, Radiator fan, Vacuum pump for brakes	420
9. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit	421
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	422

11. Fuel pressure sender, Engine/motor control unit	423
12. Throttle valve module, Engine speed sender, Pressure differential sender for particulate filter, Engine/motor control unit	424
13. Coolant temperature sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	425
14. Intake manifold sender, Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	426
15. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Charge air cooling pump	427
16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control	428
17. Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	429
18. Fuel delivery unit, Fuel pump control unit, Dash panel insert	430
047 - Basic equipment	431-448
1. Basic equipment	431
2. Horn relay, Fuse holder B, Fuse holder C	432
3. Heated rear window relay, Fuse holder C	433
4. Left horn, Onboard supply control unit	434
5. Reversing light switch, Brake fluid level warning contact, Bonnet contact switch, Bonnet contact switch 2, Ambient temperature sensor, Front right brake pad wear sender, Right horn, Onboard supply control unit	435
6. Coolant shortage indicator sender, Onboard supply control unit, Front left headlight	436
7. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Front right headlight	437
8. Onboard supply control unit, Left light module, Right light module	438
9. Rotary light switch, Switch module 1 in centre console, Onboard supply control unit	439
10. Interior mirror, Onboard supply control unit, Front interior light, Rear interior light	440
11. Ignition/starter switch, Glove compartment light switch, Onboard supply control unit, Luggage compartment light, Glove compartment light	441
12. Horn plate, Onboard supply control unit, Steering column electronics control unit, Front left footwell light, Front right footwell light, Airbag igniter on driver side	442
13. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Ignition key withdrawal lock solenoid	443
14. Onboard supply control unit, Left tail light cluster, Right tail light cluster, Left tail light cluster 2	444
15. Rear lid handle, Onboard supply control unit, Right tail light cluster 2, High-level brake light bulb	445
16. Onboard supply control unit, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear lid lock unit, Left number plate light, Right number plate light, Rear window	446
17. Immobiliser reader coil, Tank flap release, Onboard supply control unit, Dash panel insert	447
18. Dash panel insert	448
048 - Steering column electronics for heated steering wheel , (2ZD),(2ZW)	449-451
1. Steering column electronics for heated steering wheel , (2ZD),(2ZW)	449
2. Airbag control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	450
3. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Heated steering wheel	451
049 - Anti-theft alarm system , (7AL),(7AS)	452-453
1. Anti-theft alarm system , (7AL),(7AS)	452
2. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Fuse holder C, Front interior light	453
050 - 2.0l petrol engine , DNUE	454-479
1. 2.0l petrol engine , DNUE	454
2. Battery, Battery monitor control unit, Fuse holder B	455
3. Starter, Fuse holder B, Auxiliary hydraulic pump 1 for gearbox oil	456
4. Fuse holder B, Fuse holder C, Relay and fuse carrier 3	457
5. Engine/motor control unit	458
6. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Radiator fan	459
7. Oil level and oil temperature sender, Temperature sender before particulate filter, Temperature sender after particulate filter, Engine/motor control unit	460
8. Brake light switch, Accelerator pedal module, Engine/motor control unit	461
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	462
10. Alternator with voltage regulator. Charge pressure sender. Radiator outlet coolant temperature	463

sender, Engine/motor control unit, Coolant valve for gearbox	
11. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	464
12. Fuel pump control unit, Engine/motor control unit	465
13. Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	466
14. Engine/motor control unit	467
15. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	468
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	469
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Fuel pressure regulating valve	470
18. Intake manifold sender, Engine speed sender, Position sender for charge pressure positioner, Engine/motor control unit, Charge pressure positioner	471
19. Throttle valve module, Position sender for engine temperature regulation, Engine/motor control unit, Actuator for engine temperature regulation	472
20. Hall sender 3, Pressure differential sender for particulate filter, Engine/motor control unit, Ignition coil 1 with output stage, Spark plug 1	473
21. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 2, Spark plug 3, Spark plug 4	474
22. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Auxiliary pump for heating	475
23. Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	476
24. Engine/motor control unit, Inlet cam actuator A for cylinder 1, Inlet cam actuator B for cylinder 1, Inlet cam actuator A for cylinder 2, Inlet cam actuator B for cylinder 2	477
25. Engine/motor control unit, Inlet cam actuator A for cylinder 3, Inlet cam actuator B for cylinder 3, Inlet cam actuator A for cylinder 4, Inlet cam actuator B for cylinder 4	478
26. Fuel delivery unit, Dash panel insert	479
051 - Engine sound generator , (A9R)	480-481
1. Engine sound generator , (A9R)	480
2. Data bus diagnostic interface, Control unit for structure-borne sound, Actuator for structure-borne sound, Fuse holder C	481
052 - TV tuner, card reader unit (Japan) , (ER5)	482-486
1. TV tuner, card reader unit (Japan) , (ER5)	482
2. TV tuner, Aerial amplifier 1 for TV, Fuse holder C	483
3. Control unit 1 for information electronics, TV tuner, Aerial amplifier 2 for TV, Aerial amplifier 3 for TV	484
4. Toll collection sender, Chip card reader control unit, Control unit 1 for information electronics, Dash panel insert	485
5. Chip card reader control unit, Traffic data aerial	486
053 - Radio and navigation system (South Korea) , (ER7)	487-492
1. Radio and navigation system (South Korea) , (ER7)	487
2. Display unit for front information display and operating unit control unit, Control unit for navigation system, Fuse holder C	488
3. Display unit for front information display and operating unit control unit, Control unit for navigation system	489
4. Control unit 1 for information electronics, Control unit for navigation system	490
5. Control unit 1 for information electronics, Control unit for navigation system	491
6. Control unit for navigation system, Roof aerial, Telephone microphone, LTE aerial 1, Transmission and reception stabilisation control unit	492
054 - 1.0l petrol engine , DLAA	493-512
1. 1.0l petrol engine , DLAA	493
2. Battery, Alternator with voltage regulator, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	494
3. Starter, Main relay, Fuse holder B	495
4. Fuse holder B, Fuse holder C	496
5. Switch module 1 in centre console, Onboard supply control unit, Engine/motor control unit	497
6. Brake light switch, Engine/motor control unit, Radiator fan	498
7. Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	499
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	500
9. Accelerator pedal module, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	501
10. Ignition/starter switch. Steering column electronics control unit. Engine/motor control unit.	502

Interface for entry and start system	
11. Data bus diagnostic interface, Engine/motor control unit	503
12. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	504
13. Throttle valve module, Engine speed sender, Engine/motor control unit	505
14. Pressure sensor for activated charcoal filter air flushing, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	506
15. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	507
16. Engine temperature regulation module, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	508
17. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve, Inlet camshaft control valve 1	509
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel metering valve, Charge air cooling pump	510
19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	511
20. Fuel delivery unit, Dash panel insert	512
055 - 1.4l petrol engine , DJKA	513-532
1. 1.4l petrol engine , DJKA	513
2. Battery, Alternator with voltage regulator, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	514
3. Starter, Main relay, Fuse holder B	515
4. Fuse holder B, Fuse holder C	516
5. Switch module 1 in centre console, Onboard supply control unit	517
6. Engine/motor control unit	518
7. Brake light switch, Automatic gearbox control unit, Engine/motor control unit, Radiator fan	519
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	520
9. Accelerator pedal module, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	521
10. Ignition/starter switch, Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system	522
11. Steering column electronics control unit, Engine/motor control unit, Vacuum pump for brakes	523
12. Oil pressure switch for reduced oil pressure, Engine/motor control unit	524
13. Oil pressure switch, Charge pressure sender, Engine/motor control unit, Charge pressure positioner	525
14. Throttle valve module, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	526
15. Intake manifold sender, Hall sender, Hall sender 3, Engine/motor control unit	527
16. Engine speed sender, Fuel pressure sender, Engine/motor control unit, Fuel metering valve	528
17. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	529
18. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Spark plug 1, Charge air cooling pump	530
19. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 2, Spark plug 3, Spark plug 4	531
20. Fuel delivery unit, Fuel pump control unit, Dash panel insert	532
056 - 2.0l diesel engine , CRVC	533-553
1. 2.0l diesel engine , CRVC	533
2. Battery, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	534
3. Starter, Fuse holder B	535
4. Fuse holder B	536
5. Automatic glow period control unit, Low heat output relay, Relay and fuse carrier 1	537
6. Switch module 1 in centre console, Onboard supply control unit, Fuse holder C	538
7. Engine/motor control unit	539
8. Exhaust gas temperature sender 3, Engine/motor control unit, Radiator fan	540
9. Brake light switch, Air mass measurement module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	541
10. Alternator with voltage regulator, Accelerator pedal module, Engine/motor control unit, Charge air cooling pump	542
11. Ignition/starter switch, Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system	543
12. Steering column electronics control unit, Engine/motor control unit	544
13. Oil level and oil temperature sender. Power steering control unit. Engine/motor control unit.	545

Auxiliary pump for heating	
14. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	546
15. Fuel temperature sender, Exhaust gas temperature sender 1, Engine/motor control unit, Charge pressure control solenoid valve	547
16. Oil pressure switch, Oil pressure switch for reduced oil pressure, Coolant temperature sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	548
17. Charge pressure sender, Hall sender, Position sender for charge pressure positioner, Engine/motor control unit	549
18. Engine speed sender, Fuel pressure sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	550
19. Exhaust gas recirculation valve 1, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	551
20. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	552
21. Fuel delivery unit, Throttle valve module, Fuel pump control unit, Engine/motor control unit, Dash panel insert	553
057 - 2.0l diesel engine , DTRD,DTTA,DTTC	554-583
1. 2.0l diesel engine , DTRD,DTTA,DTTC	554
2. Battery, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	555
3. Starter, Fuse holder B, Auxiliary air heater element	556
4. Fuse holder B	557
5. Relay for reducing agent metering system, Fuse holder B, Fuse holder C, Auxiliary hydraulic pump 1 for gearbox oil	558
6. Automatic glow period control unit, Low heat output relay, Relay and fuse carrier 1	559
7. Switch module 1 in centre console, Onboard supply control unit	560
8. Engine/motor control unit	561
9. Brake light switch, Engine/motor control unit, Radiator fan	562
10. Air mass measurement module, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	563
11. Water separator sender, Gearbox neutral position sender, Engine/motor control unit	564
12. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 1 for particulate sensor, Engine/motor control unit	565
13. Control unit 3 for NOx sender, Exhaust gas temperature sender 4, Engine/motor control unit	566
14. Alternator with voltage regulator, Accelerator pedal module, Data bus diagnostic interface, Engine/motor control unit	567
15. Engine/motor control unit, Valve for oil pressure control, Charge air cooling pump, Auxiliary pump for heating	568
16. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Injector for reducing agent, Injector 2 for reducing agent	569
17. Engine/motor control unit, Heater element for crankcase breather	570
18. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	571
19. Delivery unit for reducing agent metering system, Engine/motor control unit	572
20. Ignition/starter switch, Engine/motor control unit, Interface for entry and start system	573
21. Steering column electronics control unit, Engine/motor control unit	574
22. Engine/motor control unit, Fuel pressure regulating valve, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	575
23. Inlet camshaft position sender, Engine/motor control unit, Actuator for engine temperature regulation, Coolant regulating valve, Piston cooling jet control valve	576
24. Oil pressure sender, Charge pressure sender, Pressure differential sender, Engine/motor control unit, Fuel metering valve	577
25. Temperature and pressure sender for low-pressure fuel system, Engine speed sender, Fuel pressure sender, Engine/motor control unit	578
26. Coolant temperature sender, Engine outlet coolant temperature sender, Temperature sensor 2 for exhaust recirculation, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Coolant temperature sender for charge air cooler, Engine/motor control unit	579
27. Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit, Charge pressure positioner	580
28. Throttle valve module, Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	581
29. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 4	582
30. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit	583
058 - USB connections for data transfer , (U9B),(U9C)	584-587
1. USB connections for data transfer . (U9B).(U9C)	584

2. Fuse holder C, Fuse carrier 5, Fuse carrier 9	585
3. Onboard supply control unit, Control unit 1 for information electronics, USB connection 1	586
4. USB charging socket 1	587
059 - Emergency call module , (EL2),(EL5),(EL6),(NZ2),(NZ4),(NZ5),(8AR),(I8I)	588-592
1. Emergency call module , (EL2),(EL5),(EL6),(NZ2),(NZ4),(NZ5),(8AR),(I8I)	588
2. Data bus diagnostic interface, Emergency call module control unit and communication unit, Fuse holder C	589
3. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit, Telephone microphone, Loudspeaker for emergency call module	590
4. Airbag control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit	591
5. Emergency call module control unit and communication unit, Roof aerial, LTE aerial 1, LTE aerial 2, Transmission and reception stabilisation control unit	592
060 - Sound system , (8AR),(9VG)	593-596
1. Sound system , (8AR),(9VG)	593
2. Digital sound package control unit, Data bus diagnostic interface, Fuse holder C	594
3. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Subwoofer	595
4. Digital sound package control unit, Rear left bass loudspeaker, Rear right bass loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker	596
061 - Dual clutch gearbox 0D9 , (0ES)	597-600
1. Dual clutch gearbox 0D9 , (0ES)	597
2. Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	598
3. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	599
4. Selector lever, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	600
062 - 8-speed automatic gearbox 09S , (0IH)	601-607
1. 8-speed automatic gearbox 09S , (0IH)	601
2. Automatic gearbox control unit, Fuse holder B, Fuse holder C	602
3. Automatic gearbox control unit, Data bus diagnostic interface, Engine/motor control unit	603
4. Automatic gearbox control unit, Gearbox	604
5. Automatic gearbox control unit, Gearbox	605
6. Automatic gearbox control unit, Gearbox	606
7. Selector lever, Onboard supply control unit, Ignition key withdrawal lock solenoid	607
063 - 2.0l petrol engine , DNFC	608-634
1. 2.0l petrol engine , DNFC	608
2. Battery, Battery monitor control unit, Fuse holder B	609
3. Starter, Fuse holder B	610
4. Fuse holder B, Relay and fuse carrier 3	611
5. Switch module 1 in centre console, Onboard supply control unit, Fuse holder C	612
6. Engine/motor control unit	613
7. Lambda probe 1 after catalytic converter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	614
8. Brake light switch, Dual exhaust gas temperature sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit, Radiator fan	615
9. Accelerator pedal module, Data bus diagnostic interface, Engine/motor control unit	616
10. Engine/motor control unit	617
11. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	618
12. Engine/motor control unit	619
13. Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	620
14. Alternator with voltage regulator, Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Charge pressure sender, Engine/motor control unit	621
15. Intake manifold sender, Hall sender 3, Engine/motor control unit, Fuel metering valve	622
16. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Engine/motor control unit	623
17. Cam adjustment actuator 7, Cam adjustment actuator 8, Engine speed sender, Knock sensor 1, Engine/motor control unit	624
18. Coolant temperature sender, Sender 1 for turbocharger speed, Pressure differential sender for particulate filter, Engine/motor control unit	625
19. Throttle valve module, Lambda probe 1 before catalytic converter, Engine/motor control unit	626
20. Charge pressure control module, Position sender for charge pressure positioner, Engine/motor control unit, Actuator for engine temperature regulation	627
21. Oil level and oil temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve	628
22. Engine/motor control unit. Intake manifold flap valve. Exhaust camshaft control valve 1. Valve	629



for oil pressure control, Piston cooling jet control valve	
23. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	630
24. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	631
25. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Coolant valve for gearbox, Spark plug 1, Spark plug 2, Coolant circulation pump	632
26. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	633
27. Fuel delivery unit, Fuel pump control unit, Dash panel insert	634
064 - 2.0l petrol engine , DNNA	635-659
1. 2.0l petrol engine , DNNA	635
2. Battery, Battery monitor control unit, Fuse holder B	636
3. Starter, Fuse holder B	637
4. Fuse holder B, Relay and fuse carrier 3	638
5. Switch module 1 in centre console, Onboard supply control unit, Fuse holder C	639
6. Engine/motor control unit	640
7. Dual exhaust gas temperature sensor 1, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	641
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator fan	642
9. Brake light switch, Accelerator pedal module, Engine/motor control unit	643
10. Alternator with voltage regulator, Charge pressure sender, Data bus diagnostic interface, Engine/motor control unit	644
11. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	645
12. Fuel pump control unit, Engine/motor control unit	646
13. Radiator outlet coolant temperature sender, Engine/motor control unit	647
14. Knock sensor 1, Coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit	648
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Hall sender 3, Engine/motor control unit, Fuel metering valve	649
16. Throttle valve module, Engine speed sender, Pressure differential sender for particulate filter, Engine/motor control unit	650
17. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	651
18. Cam adjustment actuator 8, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1, Coolant valve for gearbox	652
19. Intake manifold sender, Charge pressure control module, Position sender for charge pressure positioner, Engine/motor control unit	653
20. Engine temperature regulation module, Engine/motor control unit, Ignition coil 1 with output stage, Spark plug 1, Coolant circulation pump	654
21. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 2, Spark plug 3, Spark plug 4	655
22. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	656
23. Engine/motor control unit, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	657
24. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	658
25. Fuel delivery unit, Dash panel insert	659
065 - Door control units, driver side , (L0L)	660-668
1. Door control units, driver side , (L0L)	660
2. Driver door control unit, Fuse holder C	661
3. Driver door control unit, Driver side exterior mirror	662
4. Driver side interior locking button for central locking system, Driver door control unit, Driver side exterior mirror	663
5. Exterior mirror adjuster, Operating unit for window regulator in driver door, Rear lid remote release button, Driver door control unit, Central locking SAFELock function warning lamp	664
6. Exterior mirror adjuster, Driver door control unit, Driver door lock unit, Driver side window regulator motor	665
7. Rear driver side window regulator button, Rear left door lock unit, Rear driver side window regulator motor	666
8. Onboard supply control unit	667
9. Data bus diagnostic interface	668
066 - Door control units. driver side . (L0R)	669-677

1. Door control units, driver side , (L0R)	669
2. Driver door control unit, Fuse holder C	670
3. Driver door control unit, Driver side exterior mirror	671
4. Driver door control unit, Driver side exterior mirror	672
5. Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side window regulator motor	673
6. Exterior mirror adjuster, Operating unit for window regulator in driver door, Driver door control unit	674
7. Driver door control unit, Driver door lock unit	675
8. Rear driver side window regulator button, Rear right door lock unit, Rear driver side window regulator motor	676
9. Onboard supply control unit, Data bus diagnostic interface	677
067 - Door control units, passenger side , (L0L)	678-685
1. Door control units, passenger side , (L0L)	678
2. Data bus diagnostic interface, Fuse holder C	679
3. Front passenger door control unit	680
4. Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	681
5. Front passenger door control unit, Passenger side exterior mirror	682
6. Front passenger door control unit, Passenger side exterior mirror	683
7. Rear passenger side window regulator button, Rear right door lock unit, Rear passenger side window regulator motor	684
8. Onboard supply control unit	685
068 - Door control units, passenger side , (L0R)	686-692
1. Door control units, passenger side , (L0R)	686
2. Front passenger door control unit, Fuse holder C	687
3. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit	688
4. Front passenger door control unit, Passenger side exterior mirror, Front passenger side window regulator motor	689
5. Front passenger door control unit, Passenger side exterior mirror	690
6. Rear passenger side window regulator button, Rear left door lock unit, Rear passenger side window regulator motor	691
7. Onboard supply control unit, Data bus diagnostic interface	692
069 - Rear lid remote release , (4E0)	693-694
1. Rear lid remote release , (4E0)	693
2. Rear lid handle, Onboard supply control unit, Rear lid lock unit	694
070 - Rear lid remote release , (4E7),(5I6)	695-701
1. Rear lid remote release , (4E7),(5I6)	695
2. Fuse holder C	696
3. Rear lid handle, Rear lid lock unit	697
4. Button to close rear lid in luggage compartment, Rear lid control unit, Power latching for rear lid	698
5. Rear lid warning buzzer, Data bus diagnostic interface, Rear lid control unit, Motor 1 for rear lid	699
6. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid control unit, Rear lid power opening control unit, Interface for entry and start system	700
7. Onboard supply control unit	701
071 - Interior lights	702-706
1. Interior lights	702
2. Glove compartment light switch, Onboard supply control unit, Rear lid lock unit, Luggage compartment light, Glove compartment light	703
3. Interior mirror, Front interior light	704
4. Rear interior light, Rear left interior light, Rear right interior light	705
5. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	706
072 - Background lighting , (6T1),(QQ3),(QQ8)	707-710
1. Background lighting , (6T1),(QQ3),(QQ8)	707
2. Driver door control unit, Light for driver side interior door handle illumination, Light for driver door background lighting	708
3. Front passenger door control unit, Driver door storage compartment illumination bulb, Light for passenger side interior door handle illumination, Light 2 for driver door background lighting	709
4. Front passenger door control unit, Onboard supply control unit, Front left footwell light, Front right footwell light, Centre console illumination bulb, Front passenger door storage compartment illumination bulb. Light for passenger door background lighting. Light 2 for passenger door	710

background lighting	
073 - Horn	711-712
1. Horn	711
2. Left horn, Horn relay, Onboard supply control unit, Fuse holder B	712
074 - Dash panel insert	713-715
1. Dash panel insert	713
2. Tank flap release, Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Fuse holder C	714
3. Immobiliser reader coil, Control unit 1 for information electronics, Dash panel insert	715
075 - Light switch	716-717
1. Light switch	716
2. Rotary light switch, Onboard supply control unit, Fuse holder C	717
076 - Centre console switches	718-719
1. Centre console switches	718
2. Switch module 1 in centre console, Electromechanical parking brake button, ABS control unit, Onboard supply control unit, Fuse holder C	719
077 - Interior mirror	720-721
1. Interior mirror	720
2. Interior mirror, Onboard supply control unit, Fuse holder C, Front interior light	721
078 - Heated rear window	722-723
1. Heated rear window	722
2. Heated rear window relay, Onboard supply control unit, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Fuse holder C, Rear window	723
079 - Bonnet contact switch	724-725
1. Bonnet contact switch	724
2. Bonnet contact switch, Bonnet contact switch 2, Onboard supply control unit	725
080 - Steering column electronics , (2FB),(2FD),(2FE),(2PD),(2PE)	726-728
1. Steering column electronics , (2FB),(2FD),(2FE),(2PD),(2PE)	726
2. Steering column electronics control unit, Data bus diagnostic interface, Fuse holder C	727
3. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit	728
081 - Steering column electronics , (1XT),(2FM),(2FT),(2PS),(2PT)	729-731
1. Steering column electronics , (1XT),(2FM),(2FT),(2PS),(2PT)	729
2. Airbag control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	730
3. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	731
082 - Headlights , (8IT)	732-735
1. Headlights , (8IT)	732
2. Onboard supply control unit, Front left headlight	733
3. Onboard supply control unit, Front right headlight	734
4. Rear left vehicle level sender, Onboard supply control unit	735
083 - Headlights , (8IU),(8IV)	736-742
1. Headlights , (8IU),(8IV)	736
2. Light conductor for contour lighting in radiator grille, front left, Front left headlight, Fuse holder C, Fuse holder D	737
3. Front left headlight, Left light module	738
4. Rear left vehicle level sender, Onboard supply control unit, Front left headlight, Left light module	739
5. Onboard supply control unit, Light conductor for contour lighting in radiator grille, front right, Front right headlight, Right light module	740
6. Front right headlight, Right light module	741
7. Data bus diagnostic interface, Control unit for cornering light and headlight range control	742
084 - Tail light clusters with LEDs , (8VP)	743-747
1. Tail light clusters with LEDs , (8VP)	743
2. Reversing light switch, Onboard supply control unit, Left tail light cluster	744
3. Onboard supply control unit, Right tail light cluster, Left tail light cluster 2	745
4. Onboard supply control unit, Left tail light cluster 2, Right tail light cluster 2, High-level brake light bulb	746
5. Onboard supply control unit, Right tail light cluster 2, Left number plate light, Right number plate light	747
086 - Multifunction steering wheel , (1XT),(2PD),(2PE),(2PS),(2PT)	748-751
1. Multifunction steering wheel , (1XT),(2PD),(2PE),(2PS),(2PT)	748
2. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	749
3. Multifunction steering wheel control unit. Steering column electronics control unit. Control unit	750

	for steering wheel contact detection, Heated steering wheel	
	4. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	751
087 -	Multifunction steering wheel , (2FB),(2FD),(2FE),(2FM),(2FT)	752-755
	1. Multifunction steering wheel , (2FB),(2FD),(2FE),(2FM),(2FT)	752
	2. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	753
	3. Multifunction steering wheel control unit, Steering column electronics control unit, Control unit for steering wheel contact detection, Heated steering wheel	754
	4. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	755
088 -	USB connections for data transfer , (U9E),(U9G)	756-758
	1. USB connections for data transfer , (U9E),(U9G)	756
	2. Rotary light switch, Control unit 1 for information electronics, Fuse holder C, USB connection 1	757
	3. USB charging socket 1	758
089 -	Multimedia system	759-766
	1. Multimedia system	759
	2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	760
	3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	761
	4. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Dash panel insert	762
	5. Digital sound package control unit, Control unit 1 for information electronics, Telephone microphone	763
	6. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Storage compartment with interface for mobile telephone	764
	7. Rear lid handle, Control unit 1 for information electronics, Roof aerial, Left aerial module	765
	8. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	766
090 -	Lane change assist , (7Y1)	767-769
	1. Lane change assist , (7Y1)	767
	2. Lane change assist control unit, Lane change assist control unit 2, Fuse holder C	768
	3. Data bus diagnostic interface, Lane change assist control unit	769
091 -	Driver seat , (3PH),(3PJ)	770-777
	1. Driver seat , (3PH),(3PJ)	770
	2. Data bus diagnostic interface, Driver seat adjustment control unit, Fuse holder C	771
	3. Operating unit for front left seat adjustment, Driver seat adjustment control unit	772
	4. Operating unit for front left seat adjustment, Operating unit for front right seat adjustment, Driver seat lumbar support adjustment switch, Driver seat adjustment control unit	773
	5. Operating unit 2 for front left seat adjustment, Operating unit 2 for front right seat adjustment, Driver seat adjustment control unit	774
	6. Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor, Driver seat rake adjustment motor	775
	7. Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	776
	8. Driver seat adjustment control unit, Driver seat backrest adjustment motor	777
092 -	Electrically adjustable lumbar support , (8I2),(8I3),(8I7),(8I8)	778-783
	1. Electrically adjustable lumbar support , (8I2),(8I3),(8I7),(8I8)	778
	2. Driver seat adjustment control unit, Fuse holder C	779
	3. Driver seat lumbar support adjustment switch, Driver seat massage function button, Driver seat adjustment control unit	780
	4. Driver seat adjustment control unit, Driver seat lumbar support height adjustment motor	781
	5. Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor	782
	6. Driver seat adjustment control unit	783
093 -	Battery, starter and alternator	784-786
	1. Battery, starter and alternator	784
	2. Battery, Starter, Battery monitor control unit, Fuse holder B	785
	3. Alternator with voltage regulator, Data bus diagnostic interface, Fuse holder B	786
094 -	Fuel system , CZPB,DJKA,DLAA,DNNA,DPCA,DXDB	787-790
	1. Fuel system , CZPB,DJKA,DLAA,DNNA,DPCA,DXDB	787
	2. Tank flap release, Onboard supply control unit, Engine/motor control unit, Fuse holder B	788
	3. Fuel delivery unit, Fuel pump control unit, Dash panel insert	789
	4. Fuel delivery unit, Dash panel insert	790
095 -	Fuel system , CRVC,DFFA,DTRD,DTTA,DTTC	791-793
	1. Fuel system , CRVC,DFFA,DTRD,DTTA,DTTC	791
	2. Engine/motor control unit. Fuse holder B	792

3. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	793
096 - Fuel system , DNFC	794-796
1. Fuel system , DNFC	794
2. Tank flap release, Onboard supply control unit, Engine/motor control unit, Fuse holder B	795
3. Fuel delivery unit, Fuel pump control unit, Dash panel insert	796
097 - Reducing agent metering system , DFFA,DTRD,DTTA,DTTC	797-801
1. Reducing agent metering system , DFFA,DTRD,DTTA,DTTC	797
2. Relay for reducing agent metering system, Fuse holder B, Fuse holder C	798
3. Engine/motor control unit	799
4. Delivery unit for reducing agent metering system, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	800
5. Delivery unit for reducing agent metering system	801
098 - Auxiliary air heater (PTC) , (7E6)	802-804
1. Auxiliary air heater (PTC) , (7E6)	802
2. Engine/motor control unit, Fuse holder B, Auxiliary air heater element	803
3. Low heat output relay, Onboard supply control unit, Relay and fuse carrier 1	804
099 - 1.5l petrol engine , DPCA	805-825
1. 1.5l petrol engine , DPCA	805
2. Fuse holder B	806
3. Fuse holder B	807
4. Fuse holder C, Vacuum pump for brakes	808
5. Engine/motor control unit	809
6. Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit, Radiator fan	810
7. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	811
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	812
9. Ignition/starter switch, Radiator outlet coolant temperature sender, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	813
10. Onboard supply control unit, Fuel pump control unit, Engine/motor control unit	814
11. Oil level and oil temperature sender, Power steering control unit, Data bus diagnostic interface, Engine/motor control unit	815
12. Engine/motor control unit	816
13. Oil pressure sender, Charge pressure sender, Engine/motor control unit	817
14. Engine speed sender, Charge pressure control module, Fuel pressure sender, Pressure differential sender for particulate filter, Engine/motor control unit	818
15. Intake manifold sender, Engine/motor control unit	819
16. Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Fuel metering valve	820
17. Throttle valve module, Engine temperature regulation module, Engine/motor control unit	821
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	822
19. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Inlet camshaft control valve 1	823
20. Engine/motor control unit, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Charge air cooling pump	824
21. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	825
100 - 2.0l petrol engine , CZPB	826-848
1. 2.0l petrol engine , CZPB	826
2. Starter relay 1, Starter relay 2, Fuse holder B	827
3. Main relay, Fuse holder B	828
4. Engine/motor control unit, Fuse holder C, Relay and fuse carrier 3	829
5. Engine/motor control unit	830
6. Brake light switch, Radiator outlet coolant temperature sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Radiator fan	831
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	832
8. Accelerator pedal module, Data bus diagnostic interface, Engine/motor control unit	833
9. Ignition/starter switch, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Interface for entry and start system	834
10. Charge pressure sender, Air mass measurement module, Engine/motor control unit, Coolant valve for gearbox	835
11. Oil level and oil temperature sender. Power steering control unit. Engine/motor control unit	836

12. Engine/motor control unit, Coolant shut-off valve	837
13. Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Actuator for engine temperature regulation	838
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Throttle valve module, Engine/motor control unit	839
15. Intake manifold sender, Engine speed sender, Hall sender 3, Engine/motor control unit	840
16. Hall sender, Fuel pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit	841
17. Intake manifold flap potentiometer, Engine/motor control unit, Charge pressure positioner	842
18. Engine/motor control unit, Turbocharger air recirculation valve, Fuel pressure regulating valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	843
19. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Auxiliary pump for heating	844
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	845
21. Engine/motor control unit, Inlet cam actuator A for cylinder 1, Inlet cam actuator B for cylinder 1, Inlet cam actuator A for cylinder 2, Inlet cam actuator B for cylinder 2, Inlet cam actuator A for cylinder 3, Inlet cam actuator B for cylinder 3, Inlet cam actuator A for cylinder 4	846
22. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Inlet cam actuator B for cylinder 4	847
23. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	848
101 - 2.0l diesel engine , DFFA	849-873
1. 2.0l diesel engine , DFFA	849
2. Starter relay 1, Starter relay 2, Fuse holder B	850
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B	851
4. Relay for reducing agent metering system, Fuse holder B, Fuse holder C	852
5. Automatic glow period control unit, Low heat output relay, Relay and fuse carrier 1, Auxiliary air heater element	853
6. Engine/motor control unit	854
7. Engine/motor control unit	855
8. Engine/motor control unit	856
9. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater	857
10. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Charge air cooling pump	858
11. Air mass measurement module, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit, Heater element for crankcase breather, Radiator fan	859
12. Lambda probe 1 before catalytic converter, Engine/motor control unit	860
13. Accelerator pedal module, Control unit for NOx sender, Engine/motor control unit	861
14. Brake light switch, Engine/motor control unit, Exhaust flap control unit, Injector for reducing agent	862
15. Oil level and oil temperature sender, Engine/motor control unit, Auxiliary pump for heating	863
16. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Interface for entry and start system	864
17. Exhaust gas temperature sender 4, Engine/motor control unit, Charge pressure control solenoid valve	865
18. Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	866
19. Exhaust gas temperature sender 1, Position sender for charge pressure positioner, Engine/motor control unit	867
20. Charge pressure sender, Hall sender, Pressure differential sender, Engine/motor control unit	868
21. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	869
22. Fuel temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	870
23. Coolant temperature sender, Fuel pressure sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	871
24. Throttle valve module, Engine speed sender, Engine/motor control unit	872
25. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	873
102 - 1.0l petrol engine , DLAA	874-891
1. 1.0l petrol engine , DLAA	874
2. Starter relay 1, Starter relay 2, Fuse holder B	875
3. Main relay, Fuse holder B	876
4. Engine/motor control unit. Fuse holder C	877

5. Brake light switch, Engine/motor control unit, Radiator fan	878
6. Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	879
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	880
8. Accelerator pedal module, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	881
9. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	882
10. Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	883
11. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	884
12. Throttle valve module, Engine speed sender, Engine/motor control unit	885
13. Pressure sensor for activated charcoal filter air flushing, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	886
14. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	887
15. Engine temperature regulation module, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	888
16. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve, Inlet camshaft control valve 1	889
17. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel metering valve, Charge air cooling pump	890
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	891
103 - 1.4l petrol engine , DJKA	892-909
1. 1.4l petrol engine , DJKA	892
2. Starter relay 1, Starter relay 2, Fuse holder B	893
3. Main relay, Fuse holder B	894
4. Fuse holder C	895
5. Engine/motor control unit	896
6. Brake light switch, Automatic gearbox control unit, Engine/motor control unit, Radiator fan	897
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	898
8. Accelerator pedal module, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	899
9. Ignition/starter switch, Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system	900
10. Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Vacuum pump for brakes	901
11. Oil pressure switch for reduced oil pressure, Engine/motor control unit	902
12. Oil pressure switch, Charge pressure sender, Engine/motor control unit, Charge pressure positioner	903
13. Throttle valve module, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	904
14. Intake manifold sender, Hall sender, Hall sender 3, Engine/motor control unit	905
15. Engine speed sender, Fuel pressure sender, Engine/motor control unit, Fuel metering valve	906
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	907
17. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Spark plug 1, Charge air cooling pump	908
18. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 2, Spark plug 3, Spark plug 4	909
104 - 2.0l diesel engine , CRVC	910-928
1. 2.0l diesel engine , CRVC	910
2. Starter relay 1, Starter relay 2, Fuse holder B	911
3. Fuse holder B	912
4. Automatic glow period control unit, Low heat output relay, Relay and fuse carrier 1, Auxiliary air heater element	913
5. Engine/motor control unit, Fuse holder C	914
6. Exhaust gas temperature sender 3, Engine/motor control unit, Radiator fan	915
7. Brake light switch, Air mass measurement module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	916
8. Accelerator pedal module, Engine/motor control unit, Charge air cooling pump	917
9. Ignition/starter switch. Data bus diagnostic interface. Engine/motor control unit. Interface for	918

entry and start system	
10. Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	919
11. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Auxiliary pump for heating	920
12. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	921
13. Fuel temperature sender, Exhaust gas temperature sender 1, Engine/motor control unit, Charge pressure control solenoid valve	922
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Coolant temperature sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	923
15. Charge pressure sender, Hall sender, Position sender for charge pressure positioner, Engine/motor control unit	924
16. Engine speed sender, Fuel pressure sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	925
17. Exhaust gas recirculation valve 1, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	926
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	927
19. Throttle valve module, Engine/motor control unit	928
105 - 2.0l diesel engine , DTRD,DTTA,DTTC	929-955
1. 2.0l diesel engine , DTRD,DTTA,DTTC	929
2. Starter relay 1, Starter relay 2, Fuse holder B	930
3. Fuse holder B	931
4. Fuse holder B, Auxiliary hydraulic pump 1 for gearbox oil	932
5. Relay for reducing agent metering system, Fuse holder C	933
6. Automatic glow period control unit, Low heat output relay, Relay and fuse carrier 1, Auxiliary air heater element	934
7. Engine/motor control unit	935
8. Engine/motor control unit, Heater element for crankcase breather, Radiator fan	936
9. Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	937
10. Brake light switch, Air mass measurement module, Engine/motor control unit	938
11. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 1 for particulate sensor, Engine/motor control unit	939
12. Control unit 3 for NOx sender, Exhaust gas temperature sender 4, Engine/motor control unit	940
13. Accelerator pedal module, Data bus diagnostic interface, Engine/motor control unit	941
14. Engine/motor control unit, Valve for oil pressure control, Charge air cooling pump, Auxiliary pump for heating	942
15. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Injector for reducing agent, Injector 2 for reducing agent	943
16. Engine/motor control unit	944
17. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater	945
18. Ignition/starter switch, Delivery unit for reducing agent metering system, Engine/motor control unit, Interface for entry and start system	946
19. Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	947
20. Engine/motor control unit, Fuel pressure regulating valve, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	948
21. Inlet camshaft position sender, Engine/motor control unit, Actuator for engine temperature regulation, Coolant regulating valve, Piston cooling jet control valve	949
22. Oil pressure sender, Charge pressure sender, Pressure differential sender, Engine/motor control unit, Fuel metering valve	950
23. Temperature and pressure sender for low-pressure fuel system, Engine speed sender, Fuel pressure sender, Engine/motor control unit	951
24. Coolant temperature sender, Engine outlet coolant temperature sender, Temperature sensor 2 for exhaust recirculation, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Coolant temperature sender for charge air cooler, Engine/motor control unit	952
25. Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit, Charge pressure positioner	953
26. Throttle valve module, Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	954
27. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 4	955
106 - 2.0l petrol engine . DNFC	956-980



1. 2.0l petrol engine , DNFC	956
2. Fuse holder B	957
3. Fuse holder B	958
4. Fuse holder C, Relay and fuse carrier 3	959
5. Engine/motor control unit	960
6. Lambda probe 1 after catalytic converter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	961
7. Brake light switch, Dual exhaust gas temperature sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit, Radiator fan	962
8. Accelerator pedal module, Data bus diagnostic interface, Engine/motor control unit	963
9. Engine/motor control unit	964
10. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	965
11. Fuel pump control unit, Engine/motor control unit	966
12. Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	967
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Charge pressure sender, Engine/motor control unit	968
14. Intake manifold sender, Hall sender 3, Engine/motor control unit, Fuel metering valve	969
15. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Engine/motor control unit	970
16. Cam adjustment actuator 7, Cam adjustment actuator 8, Engine speed sender, Knock sensor 1, Engine/motor control unit	971
17. Coolant temperature sender, Sender 1 for turbocharger speed, Pressure differential sender for particulate filter, Engine/motor control unit	972
18. Throttle valve module, Lambda probe 1 before catalytic converter, Engine/motor control unit	973
19. Charge pressure control module, Position sender for charge pressure positioner, Engine/motor control unit, Actuator for engine temperature regulation	974
20. Oil level and oil temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve	975
21. Engine/motor control unit, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	976
22. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	977
23. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	978
24. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Coolant valve for gearbox, Spark plug 1, Spark plug 2, Coolant circulation pump	979
25. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	980
107 - 2.0l petrol engine , DNNA	981-1002
1. 2.0l petrol engine , DNNA	981
2. Fuse holder B	982
3. Fuse holder B	983
4. Fuse holder C, Relay and fuse carrier 3	984
5. Engine/motor control unit	985
6. Dual exhaust gas temperature sensor 1, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	986
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator fan	987
8. Brake light switch, Accelerator pedal module, Engine/motor control unit	988
9. Charge pressure sender, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	989
10. Ignition/starter switch, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Interface for entry and start system	990
11. Radiator outlet coolant temperature sender, Engine/motor control unit	991
12. Knock sensor 1, Coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit	992
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Hall sender 3, Engine/motor control unit, Fuel metering valve	993
14. Throttle valve module, Engine speed sender, Pressure differential sender for particulate filter, Engine/motor control unit	994
15. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	995
16. Cam adjustment actuator 8, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1, Coolant valve for gearbox	996

17. Intake manifold sender, Charge pressure control module, Position sender for charge pressure positioner, Engine/motor control unit	997
18. Engine temperature regulation module, Engine/motor control unit, Ignition coil 1 with output stage, Spark plug 1, Coolant circulation pump	998
19. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 2, Spark plug 3, Spark plug 4	999
20. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	1000
21. Engine/motor control unit, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	1001
22. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1002
108 - Rain and light sensor , (8N6),(8N8)	1003-1004
1. Rain and light sensor , (8N6),(8N8)	1003
2. Rain and light sensor, Onboard supply control unit, Fuse holder C	1004
109 - Sound system , (8RD),(8RL)	1005-1008
1. Sound system , (8RD),(8RL)	1005
2. Control unit 1 for information electronics, Front left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker, Fuse holder C	1006
3. Control unit 1 for information electronics, Rear left loudspeaker, Rear right loudspeaker, Front right treble loudspeaker	1007
4. Control unit 1 for information electronics, Front right loudspeaker, Front right bass loudspeaker	1008
110 - Adaptive cruise control , (6K3),(6K4)	1009-1010
1. Adaptive cruise control , (6K3),(6K4)	1009
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	1010
111 - Front camera for driver assist systems , (QK1)	1011-1012
1. Front camera for driver assist systems , (QK1)	1011
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	1012
112 - 1.5l petrol engine , DXDB	1013-1032
1. 1.5l petrol engine , DXDB	1013
2. Fuse holder B	1014
3. Fuse holder B, Fuse holder C	1015
4. Engine/motor control unit	1016
5. Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit, Radiator fan	1017
6. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1018
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	1019
8. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	1020
9. Ignition/starter switch, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Interface for entry and start system	1021
10. Alternator with voltage regulator, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Charge air cooling pump	1022
11. Dual exhaust gas temperature sensor 1, Pressure sensor for activated charcoal filter air flushing, Pressure differential sender for particulate filter, Engine/motor control unit	1023
12. Function unit for active oil separation, Engine/motor control unit, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2	1024
13. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Inlet camshaft control valve 1	1025
14. Oil pressure sender, Charge pressure sender, Engine/motor control unit	1026
15. Engine speed sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	1027
16. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	1028
17. Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Fuel metering valve	1029
18. Throttle valve module, Engine temperature regulation module, Engine/motor control unit	1030
19. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1031
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 2	1032
801 - - Fitting locations: Earth points - 3	1033-1053
1. Earth points	1033-1053

1.1 Earth points in front part of vehicle	1033-1047
1.1.1 Front from left	1036
1.1.2 Front from right	1036
1.1.3 1.0l petrol engine, CHZJ, DKRA, DKRF, DLAA	1037
1.1.4 1.4l petrol engine, DJKA	1038
1.1.5 1.5l petrol engine, DADA, DPCA	1039
1.1.6 2.0l petrol engine, CZPB, DKZA, DNFC, DNUE	1040
1.1.7 2.0l petrol engine, DNNA	1041
1.1.8 Automatic gearbox, 09S	1042
1.1.9 Dual clutch gearbox, 0CW	1043
1.1.10 Dual clutch gearbox, 0D9, 0GC	1044
1.1.11 Manual gearbox, 0C9	1045
1.1.12 Manual gearbox, 02S	1046
1.1.13 Manual gearbox, 02Q	1047
1.2 Earth points in middle part of vehicle	1048-1050
1.2.1 Front left of interior	1049
1.2.2 Front right of interior	1049
1.2.3 Front middle of interior	1050
1.3 Earth points in rear part of vehicle	1051-1053
1.3.1 Left luggage compartment	1051
1.3.2 On right in luggage compartment, rear lid	1052-1053
802 - -Fitting locations: Fuses - 3	1054-1162
1. Fuses	1054-1162
1.1 Multifuse fuse strip on fuse holder B -SB-, from August 2017	1055-1056
1.1.1 Fitting location of multifuse strip on fuse holder B -SB-, from August 2017	1055-1056
1.1.2 Fuse assignment for multifuse strip on fuse holder B -SB-, from August 2017	1057
1.2 Fuse holder B -SB-, from August 2017	1057-1061
1.2.1 Fitting location of fuse holder B -SB-, from August 2017	1057-1058
1.2.2 Fuse assignment for fuse holder B -SB-, from August 2017	1059-1061
1.3 Fuse holder B -SB- , from November 2017	1062-1065
1.3.1 Fitting location of fuse holder B -SB-, from November 2017	1062
1.3.2 Fuse assignment for fuse holder B -SB-, from November 2017	1063-1065
1.4 Fuse holder B -SB-, from July 2018	1066-1070
1.4.1 Fitting location of fuse holder B -SB-, from July 2018	1066-1067
1.4.2 Fuse assignment for fuse holder B -SB-, from July 2018	1068-1070
1.5 Fuse holder B -SB- , from November 2018	1071-1075
1.5.1 Fitting location of fuse holder B -SB-, from November 2018	1072
1.5.2 Fuse assignment for fuse holder B -SB-, from November 2018	1073-1075
1.6 Fuse holder B -SB-, from September 2019	1076-1081
1.6.1 Fitting location of fuse holder B -SB-, from September 2019	1077
1.6.2 Fuse assignment for fuse holder B -SB-, from September 2019	1078-1081
1.7 Fuse holder B -SB-, from July 2020	1082-1088
1.7.1 Fitting location of fuse holder B -SB-, from July 2020	1082-1083
1.7.2 Fuse assignment for fuse holder B -SB-, from July 2020	1084-1088
1.8 Fuse holder B -SB- , from November 2020	1089-1094
1.8.1 Fitting location of fuse holder B -SB-, from November 2020	1089
1.8.2 Fuse assignment for fuse holder B -SB-, from November 2020	1090-1094
1.9 Fuse holder C -SC-, from August 2017	1095-1101
1.9.1 Fitting location of fuse holder C -SC-, left-hand drive models, from August 2017	1096
1.9.2 Fitting location of fuse holder C -SC-, right-hand drive models, from August 2017	1097-1098
1.9.3 Fuse assignment for fuse holder C -SC-, from August 2017	1099-1101
1.10 Fuse holder C -SC-, from July 2018	1102-1108
1.10.1 Fitting location of fuse holder C -SC- left-hand drive models, from July 2018	1102-1103
1.10.2 Fitting location of fuse holder C -SC- right-hand drive models, from July 2018	1104-1105
1.10.3 Fuse assignment for fuse holder C -SC-, from July 2018	1106-1108
1.11 Fuse holder C -SC-, from November 2018	1109-1116
1.11.1 Fitting location of fuse holder C -SC-, left-hand drive models, from November 2018	1110-1111
1.11.2 Fitting location of fuse holder C -SC-, right-hand drive models, from November 2018	1112-1113
1.11.3 Fuse assignment for fuse holder C -SC-, from November 2018	1114-1116
1.12 Fuse holder C -SC-, from September 2019	1117-1125
1.12.1 Fitting location of fuse holder C -SC-, left-hand drive models, from September 2019	1118-1119
1.12.2 Fitting location of fuse holder C -SC-, right-hand drive models, from September 2019	1120-1121
1.12.3 Fuse assignment for fuse holder C -SC-, from September 2019	1122-1125
1.13 Fuse holder C -SC-, from November 2019	1126-1133
1.13.1 Fitting location of fuse holder C -SC-, left-hand drive models, from November 2019	1126-1127
1.13.2 Fitting location of fuse holder C -SC-. riacht-hand drive models. from November 2019	1128-1129

1.13.3 Fuse assignment for fuse holder C -SC-, from November 2019	1130-1133
1.14 Fuse holder C -SC-, from July 2020	1134-1141
1.14.1 Fitting location of fuse holder C -SC- left-hand drive models, from July 2020	1134-1135
1.14.2 Fitting location of fuse holder C -SC- right-hand drive models, from July 2020	1136-1137
1.14.3 Fuse assignment for fuse holder C -SC-, from July 2020	1138-1141
1.15 Fuse holder C -SC-, from January 2022	1142-1149
1.15.1 Fitting location of fuse holder C -SC-, LHD models, from January 2022	1142-1143
1.15.2 Fitting location of fuse holder C -SC-, RHD models, from January 2022	1144-1145
1.15.3 Fuse assignment for fuse holder C -SC-, from January 2022	1146-1149
1.16 Single fuses, from July 2019	1150-1153
1.16.1 Fitting location of individual fuses, left-hand drive models, from July 2019	1150
1.16.2 Fitting location of individual fuses, right-hand drive models, from July 2019	1151
1.16.3 Fuse assignment for individual fuses, left-hand drive models, from July 2019	1152
1.16.4 Fuse assignment for individual fuses, right-hand drive models, from July 2019	1153
1.17 Fuse holder D -SD-, from August 2017	1154-1155
1.17.1 Fitting location of fuse holder D -SD-, from August 2017	1154-1155
1.17.2 Fuse assignment of fuse holder D -SD-, from August 2017	1156
1.18 Fuse holder D -SD-, from July 2018	1156-1157
1.18.1 Fitting location of fuse holder D -SD-, from July 2018	1156-1157
1.18.2 Fuse assignment for fuse holder D -SD-, from July 2018	1158
1.19 Fuse holder D -SD-, from January 2022	1158-1159
1.19.1 Fitting location of fuse holder D -SD-, from January 2022	1158-1159
1.19.2 Fuse assignment for fuse holder D -SD-, from January 2022	1160
1.20 Relay and fuse carrier 1 -SR1-, from August 2017	1160-1162
1.20.1 Fitting location of relay and fuse carrier 1 -SR1-, from August 2017	1160-1161
1.20.2 Fuse assignment for relay and fuse carrier 1 -SR1-, from August 2017	1162
803 - - Fitting locations: Relays - 3	1163-1175
1. Relays	1163-1175
1.1 Relays on fuse holder B -SB-, from August 2017	1165
1.1.1 Relays on fuse holder B -SB-, from August 2017	1166
1.2 Relays on fuse holder C -SC-, from August 2017	1166-1167
1.2.1 Relays on fuse holder C -SC-, left-hand drive models, from August 2017	1167
1.2.2 Relays on fuse holder C -SC-, right-hand drive models, from August 2017	1167
1.3 Relays on fuse holder C -SC-, from July 2018	1168-1169
1.3.1 Relays on fuse holder C -SC-, left-hand drive models, from July 2018	1169
1.3.2 Relays on fuse holder C -SC-, right-hand drive models, from July 2018	1169
1.4 Relays on fuse holder C -SC-, from July 2019	1170-1172
1.4.1 Relays on fuse holder C -SC-, left-hand drive models, from July 2019	1171
1.4.2 Relays on fuse holder C -SC-, right-hand drive models, from July 2019	1171-1172
1.5 Relay and fuse carrier 1 -SR1-, from August 2017	1173
1.5.1 Relay and fuse carrier 1 -SR1-, from August 2017	1173
1.6 Relay and fuse carrier 3 -SR3-, from August 2017	1174-1175
1.6.1 Relay and fuse carrier 3 -SR3-, from August 2017	1174-1175
804 - - Fitting locations: front part of vehicle - 2	1176-1247
1. Fitting location: front part of vehicle	1176-1247
1.1 Front, view from front	1197
1.2 Front, view from left	1198-1199
1.3 Front, view from right	1200-1201
1.4 1.0l petrol engine, CHZJ, DKRA, DKRF	1202-1204
1.4.1 1.0l petrol engine, CHZJ, DKRA, DKRF, from front	1202
1.4.2 1.0l petrol engine, CHZJ, DKRA, DKRF, from above	1203
1.4.3 1.0l petrol engine, CHZJ, DKRA, DKRF, from rear	1204
1.5 1.0l petrol engine, DLAA	1205-1207
1.5.1 1.0l petrol engine, DLAA, from front	1206
1.5.2 1.0l petrol engine, DLAA, from above	1206
1.5.3 1.0l petrol engine, DLAA, from rear	1207
1.6 1.4l petrol engine, DJKA	1208-1210
1.6.1 1.4l petrol engine, DJKA, from front	1209
1.6.2 1.4l petrol engine, DJKA, from above	1209
1.6.3 1.4l petrol engine, DJKA, from rear	1210
1.7 1.5l petrol engine, DADA, DPCA	1211-1214
1.7.1 1.5l petrol engine, DADA, DPCA, from front	1212
1.7.2 1.5l petrol engine, DADA, DPCA, from above	1212
1.7.3 1.5l petrol engine, DADA, DPCA, from right	1213
1.7.4 1.5l petrol engine, DADA, DPCA, from rear	1214
1.8 2.0l petrol engine. CZPB. DKZA. DNUE	1215-1219

1.8.1 2.0l petrol engine, CZPB, DKZA, DNUE, from front	1216
1.8.2 2.0l petrol engine, CZPB, DKZA, DNUE, from above	1217
1.8.3 2.0l petrol engine, CZPB, DKZA, DNUE, from left	1217
1.8.4 2.0l petrol engine, CZPB, DKZA, DNUE, from right	1218
1.8.5 2.0l petrol engine, CZPB, DKZA, DNUE, from rear	1219
1.9 2.0l petrol engine, DNFC	1220-1226
1.9.1 2.0l petrol engine, DNFC, from front	1221-1222
1.9.2 2.0l petrol engine, DNFC, from above	1223
1.9.3 2.0l petrol engine, DNFC, from left	1224
1.9.4 2.0l petrol engine, DNFC, from right	1225
1.9.5 2.0l petrol engine, DNFC, from rear	1226
1.10 2.0l petrol engine, DNNA	1227-1230
1.10.1 2.0l petrol engine, DNNA, from front	1227
1.10.2 2.0l petrol engine, DNNA, from above	1228
1.10.3 2.0l petrol engine, DNNA, from right	1229
1.10.4 2.0l petrol engine, DNNA, from rear	1230
1.11 1.6l diesel engine, DGTE	1231-1234
1.11.1 1.6l diesel engine, DGTE, from front	1232
1.11.2 1.6l diesel engine, DGTE, from above	1232
1.11.3 1.6l diesel engine, DGTE, from left	1233
1.11.4 1.6l diesel engine, DGTE, from rear	1234
1.12 2.0l diesel engine, CRVC, DFFA, DFHA	1235-1238
1.12.1 2.0l diesel engine, CRVC, DFFA, DFHA, from front	1236
1.12.2 2.0l diesel engine, CRVC, DFFA, DFHA, from above	1236
1.12.3 2.0l diesel engine, CRVC, DFFA, DFHA, from left	1237
1.12.4 2.0l diesel engine, CRVC, DFFA, DFHA, from rear	1238
1.13 2.0l diesel engine, DTTC	1239-1241
1.13.1 2.0l diesel engine, DTTC, from front	1240
1.13.2 2.0l diesel engine, DTTC, from above	1240
1.13.3 2.0l diesel engine, DTTC, from rear	1241
1.14 Manual gearbox	1242-1243
1.14.1 Manual gearbox, 02Q, 0BB	1243
1.14.2 Manual gearbox, 02S, 0AJ	1243
1.15 Dual clutch gearbox	1244-1245
1.15.1 Dual clutch gearbox, 0D9, 0GC	1245
1.15.2 Dual clutch gearbox, 0CW	1245
1.16 Automatic gearbox	1246-1247
1.16.1 Automatic gearbox, 09S	1246-1247
805 - - Fitting locations: middle part of vehicle - 3	1248-1303
1. Fitting locations: middle part of vehicle	1248-1303
1.1 At front of interior	1262-1284
1.1.1 Front left of interior, LHD models	1263-1264
1.1.2 Front left of interior, RHD models	1265-1266
1.1.3 Left footwell, LHD models	1267-1268
1.1.4 Right footwell, RHD models	1269
1.1.5 Front right of interior, LHD models	1270-1271
1.1.6 Front right of interior, RHD models	1272
1.1.7 Dash panel, LHD models	1273
1.1.8 Dash panel, RHD models	1274
1.1.9 Steering wheel	1275
1.1.10 Steering column	1275-1276
1.1.11 Front centre console, LHD models	1277
1.1.12 Front centre console, RHD models	1278
1.1.13 Left front seat - manual	1279
1.1.14 Left front seat - electrical	1280-1281
1.1.15 Right front seat - manual	1282
1.1.16 Right front seat - electrical	1283-1284
1.2 Rear interior	1285-1286
1.2.1 Rear interior, view from left	1285
1.2.2 Rear interior, view from right	1286
1.3 Roof	1287-1290
1.3.1 Roof, part 1	1287-1288
1.3.2 Roof, part 2, with no sliding/tilting sunroof, 3FA	1289
1.3.3 Roof, part 2, with sliding/tilting sunroof, 3FU	1290
1.4 Doors	1291-1296
1.4.1 Driver door. left-hand drive models	1291-1292

1.4.2 Driver door, right-hand drive models	1293
1.4.3 Front passenger door, left-hand drive models	1294
1.4.4 Front passenger door, right-hand drive models	1295
1.4.5 Rear left door	1296
1.4.6 Rear right door	1296
1.5 Heater and air conditioning unit	1297-1301
1.5.1 Air conditioning system, KH6, part 1	1298
1.5.2 Air conditioning system, KH6, part 2	1299
1.5.3 Climatronic, KH0, KH7, part 1	1300
1.5.4 Climatronic, KH0, KH7, part 2	1301
1.6 Connector assignments	1302-1303
1.6.1 Onboard supply control unit -J519-	1302-1303
806 - - Fitting locations: rear part of vehicle - 3	1304-1310
1. Fitting locations: rear part of vehicle	1304-1310
1.1 Rear lid	1306
1.2 Rear bumper	1307-1308
1.3 Rear side, view from left	1309
1.4 Rear side, view from right	1309-1310
807 - -Fitting locations: vehicle underbody - 3	1311-1313
1. Fitting locations: vehicle underbody	1311-1313
1.1 Underbody	1312
1.2 Underbody, for models with diesel engine	1313
830 - -Connector views: parts with prefix A to D - 3	1314-1317
1. Parts with prefix A to D	1314-1317
1.1 Starter -B-	1314
1.1.1 Connector -T1dm-	1314
1.2 Alternator with voltage regulator -CX1-	1314
1.2.1 Connector -T2ak-	1315
1.3 Ignition/starter switch -D-	1315
1.3.1 Connector -T6ba-	1315
1.4 Immobiliser reader coil -D2-	1316-1317
1.4.1 Connector -T2ed-	1316-1317
831 - -Connector views: parts with prefix E - 3	1318-1354
1. Parts with prefix E	1318-1354
1.1 Driver side belt switch -E24-	1319
1.1.1 Connector -T2ax-	1319
1.2 Front passenger side belt switch -E25-	1320
1.2.1 Connector -T2ba-	1320
1.3 Glove compartment light switch -E26-	1320
1.3.1 Connector -T3ax-	1320
1.4 Driver seat lumbar support adjustment switch -E176-	1321
1.4.1 Connector -T6bo-	1321
1.5 Key operated switch to deactivate airbag on front passenger side -E224-	1322
1.5.1 Connector -T6al-	1322
1.6 Rear lid remote release button -E233-	1323
1.6.1 Connector -T4bz-	1323
1.7 Driver side interior locking button for central locking system -E308-	1324
1.7.1 Connector -T4by-	1324
1.8 Selector lever -E313-	1325
1.8.1 Connector -T10af-	1325
1.9 Starter button -E378-	1326
1.9.1 Connector -T4bo-	1326
1.10 Button to close rear lid in luggage compartment -E406-	1327
1.10.1 Connector -T4r-	1327
1.11 Operating unit for preparation for mobile telephone -E508-	1328
1.11.1 Connector -T6an-	1328
1.12 Electromechanical parking brake button -E538-	1329
1.12.1 Connector -T12i-	1329
1.13 Driver seat massage function button -E670-	1330
1.13.1 Connector -T4dp-	1330
1.14 Rear driver side window regulator button -E711-	1331
1.14.1 Connector -T4aa-	1331
1.15 Rear passenger side window regulator button -E713-	1332
1.15.1 Connector -T4ad-	1332
1.16 Front passenger side window regulator button -E716-	1333
1.16.1 Connector -T4v-	1333

1.17 Operating unit for driving mode selection -E881-	1334
1.17.1 Connector -T4bt-	1334
1.18 Rotary light switch -EX1-	1335
1.18.1 Connector -T10ac-	1335
1.19 Hazard warning light switch -EX3-	1336
1.19.1 Connector -T6am-	1336
1.20 Interior mirror -EX5-	1337
1.20.1 Connector -T8v-	1337
1.21 Driver exterior door handle -EX6-	1338
1.21.1 Connector -T4ah-	1338
1.22 Front passenger exterior door handle -EX7-	1339
1.22.1 Connector -T4aj-	1339
1.23 Exterior mirror adjuster -EX11-	1340
1.23.1 Connector -T6aq-	1340
1.24 Tank flap release -EX13-	1341
1.24.1 Connector -T2cx-	1341
1.25 Heater and air conditioning controls -EX21-	1342-1343
1.25.1 Connector -T20d-	1342
1.25.2 Connector -T16g-	1343
1.25.3 Connector -T16h-	1344
1.26 Switch module 1 in centre console -EX23-	1344
1.26.1 Connector -T10ad-	1344
1.27 Switch module 2 in centre console -EX30-	1345
1.27.1 Connector -T10ae-	1345
1.28 Operating unit for front left seat adjustment -EX33-	1346
1.28.1 Connector -T12m-	1346
1.29 Operating unit for front right seat adjustment -EX34-	1347
1.29.1 Connector -T12n-	1347
1.30 Operating unit for window regulator in driver door -EX36-	1348
1.30.1 Connector -T10ak-	1348
1.31 Rear lid handle -EX37-	1349-1351
1.31.1 Connector -T2dy-	1349
1.31.2 Connector -T2ap-	1350
1.31.3 Connector -T4o-	1351
1.31.4 Connector -T4bk-	1351
1.32 Operating unit 2 for front left seat adjustment -EX38-	1352
1.32.1 Connector -T6bp-	1352
1.33 Operating unit 2 for front right seat adjustment -EX39-	1353-1354
1.33.1 Connector -T6bq-	1353-1354
832 - -Connector views: parts with prefix F - 3	1355-1379
1. Parts with prefix F	1355-1379
1.1 Brake light switch -F-	1355
1.1.1 Connector -T4au-	1355
1.2 Oil pressure switch -F1-	1356-1357
1.2.1 Connector -T2fr-	1356
1.2.2 Connector -T1p-	1357
1.3 Reversing light switch -F4-	1358
1.3.1 Connector -T2bd-	1358
1.4 Oil pressure switch -F22-	1358
1.4.1 Connector -T1all-	1359
1.5 Brake fluid level warning contact -F34-	1359
1.5.1 Connector -T2bk-	1359
1.6 Driver vanity mirror contact switch -F147-	1360
1.6.1 Connector -T2am-	1360
1.7 Front passenger vanity mirror contact switch -F148-	1361
1.7.1 Connector -T2ao-	1361
1.8 Bonnet contact switch -F266-	1362
1.8.1 Connector -T2by-	1362
1.9 Bonnet contact switch 2 -F329-	1363
1.9.1 Connector -T2bo-	1363
1.10 Actuator 1 for camshaft adjustment -F366-	1364
1.10.1 Connector -T2kf-	1364
1.11 Actuator 2 for camshaft adjustment -F367-	1365
1.11.1 Connector -T2kg-	1365
1.12 Actuator 3 for camshaft adjustment -F368-	1366
1.12.1 Connector -T2kh-	1366

1.13 Actuator 4 for camshaft adjustment -F369-	1367
1.13.1 Connector -T2ki-	1367
1.14 Actuator 5 for camshaft adjustment -F370-	1368-1369
1.14.1 Connector -T2kj-	1368
1.14.2 Connector -T2ks-	1369
1.15 Actuator 6 for camshaft adjustment -F371-	1370
1.15.1 Connector -T2kk-	1370
1.16 Actuator 7 for camshaft adjustment -F372-	1370
1.16.1 Connector -T2kl-	1371
1.17 Actuator 8 for camshaft adjustment -F373-	1371
1.17.1 Connector -T2km-	1371
1.18 Oil pressure switch for reduced oil pressure -F378-	1372-1373
1.18.1 Connector -T1d-	1372
1.18.2 Connector -T2fp-	1373
1.19 Belt switch for seat row 2, passenger side -F392-	1374
1.19.1 Connector -T2da-	1374
1.19.2 Connector -T2fe-	1374
1.20 Stage 2 oil pressure switch -F446-	1375-1376
1.20.1 Connector -T2dic-	1375
1.20.2 Connector -T2dk-	1376
1.21 Stage 3 oil pressure switch -F447-	1377
1.21.1 Connector -T2t-	1377
1.22 Twin belt buckle -FX4-	1377-1379
1.22.1 Connector -T4bd-	1378
1.22.2 Connector -T4bx-	1378-1379
833 - -Connector views: parts with prefix G - 3	1380-1502
1. Parts with prefix G	1380-1502
1.1 Oil pressure sender -G10-	1383
1.1.1 Connector -T3i-	1383
1.2 Ambient temperature sensor -G17-	1384
1.2.1 Connector -T2bq-	1384
1.3 Engine speed sender -G28-	1385-1386
1.3.1 Connector -T3d-	1385
1.3.2 Connector -T3k-	1386
1.4 Charge pressure sender -G31-	1387-1388
1.4.1 Connector -T4cc-	1387
1.4.2 Connector -T3bj-	1388
1.4.3 Connector -T3di-	1388
1.5 Coolant shortage indicator sender -G32-	1389
1.5.1 Connector -T2bt-	1389
1.6 Windscreen washer fluid level sender -G33-	1390
1.6.1 Connector -T2br-	1390
1.7 Front right brake pad wear sender -G35-	1391
1.7.1 Connector -T2ch-	1391
1.8 Hall sender -G40-	1392-1393
1.8.1 Connector -T3f-	1392
1.8.2 Connector -T3dm-	1393
1.8.3 Connector -T3cv-	1394
1.9 Rear right speed sensor -G44-	1394
1.9.1 Connector -T2eu-	1394
1.10 Front right speed sensor -G45-	1395
1.10.1 Connector -T2cg-	1395
1.11 Rear left speed sensor -G46-	1396
1.11.1 Connector -T2ex-	1396
1.12 Front left speed sensor -G47-	1397
1.12.1 Connector -T2cj-	1397
1.13 Knock sensor 1 -G61-	1398-1399
1.13.1 Connector -T2ag-	1398
1.13.2 Connector -T2u-	1399
1.13.3 Connector -T2kt-	1400
1.14 Coolant temperature sender -G62-	1400-1401
1.14.1 Connector -T2e-	1400
1.14.2 Connector -T2ad-	1401
1.15 Water separator sender -G63-	1402
1.15.1 Connector -T3ck-	1402
1.16 Rear left vehicle level sender -G76-	1403



1.16.1 Connector -T4bf-	1403
1.17 Front left vehicle level sender -G78-	1403
1.17.1 Connector -T4bb-	1403
1.18 Fuel temperature sender -G81-	1404
1.18.1 Connector -T2fx-	1404
1.19 Engine outlet coolant temperature sender -G82-	1405-1406
1.19.1 Connector -T2hd-	1405
1.19.2 Connector -T2az-	1406
1.20 Radiator outlet coolant temperature sender -G83-	1407
1.20.1 Connector -T2bl-	1407
1.21 Sunlight penetration photosensor -G107-	1407
1.21.1 Connector -T6ak-	1408
1.22 Seat occupied sensor on front passenger side -G128-	1408
1.22.1 Connector -T2ay-	1408
1.23 Left vent temperature sender -G150-	1409
1.23.1 Connector -T2eb-	1409
1.24 Right vent temperature sender -G151-	1410
1.24.1 Connector -T2en-	1410
1.25 Fuel gauge sender 2 -G169-	1411
1.25.1 Connector -T3aq-	1411
1.26 Side airbag crash sensor on driver side -G179-	1412
1.26.1 Connector -T2as-	1412
1.27 Side airbag crash sensor on front passenger side -G180-	1413
1.27.1 Connector -T2hx-	1413
1.28 Crash sensor for front airbag -G190-	1414
1.28.1 Connector -T2a-	1414
1.29 Footwell vent temperature sender -G192-	1415
1.29.1 Connector -T2gg-	1415
1.30 Rear left parking aid sender -G203-	1416
1.30.1 Connector -T3x-	1416
1.31 Rear centre left parking aid sender -G204-	1417
1.31.1 Connector -T3w-	1417
1.32 Rear centre right parking aid sender -G205-	1418
1.32.1 Connector -T3v-	1418
1.33 Rear right parking aid sender -G206-	1419
1.33.1 Connector -T3u-	1419
1.34 Exhaust gas temperature sender 1 -G235-	1420-1421
1.34.1 Connector -T2fz-	1420
1.34.2 Connector -T2cw-	1421
1.34.3 Connector -T3bf-	1422
1.35 Air quality sensor -G238-	1422
1.35.1 Connector -T3ao-	1422
1.36 Fuel pressure sender -G247-	1423-1424
1.36.1 Connector -T3h-	1423
1.36.2 Connector -T3cw-	1424
1.36.3 Connector -T3bg-	1425
1.37 Front right parking aid sender -G252-	1425
1.37.1 Connector -T3p-	1425
1.38 Front centre right parking aid sender -G253-	1426
1.38.1 Connector -T3o-	1426
1.39 Front centre left parking aid sender -G254-	1427
1.39.1 Connector -T3n-	1427
1.40 Front left parking aid sender -G255-	1428
1.40.1 Connector -T3m-	1428
1.41 Rear side airbag crash sensor on driver side -G256-	1429
1.41.1 Connector -T2cu-	1429
1.42 Rear side airbag crash sensor on passenger side -G257-	1430
1.42.1 Connector -T2dc-	1430
1.43 Oil level and oil temperature sender -G266-	1431-1433
1.43.1 Connector -T3ac-	1431
1.43.2 Connector -T3aa-	1432
1.43.3 Connector -T3ai-	1433
1.43.4 Connector -T3az-	1433
1.44 Front right vehicle level sender -G289-	1434
1.44.1 Connector -T4ba-	1434
1.45 Hall sender 3 -G300-	1435-1436

1.45.1 Connector -T3a-	1435
1.45.2 Connector -T3dj-	1436
1.46 Evaporator temperature sensor -G308-	1437
1.46.1 Connector -T2gh-	1437
1.47 Intake manifold flap potentiometer -G336-	1437-1438
1.47.1 Connector -T3bn-	1438
1.47.2 Connector -T3cx-	1438
1.48 Front left body acceleration sender -G341-	1439
1.48.1 Connector -T2cd-	1439
1.49 Front right body acceleration sender -G342-	1440
1.49.1 Connector -T2ce-	1440
1.50 Rear body acceleration sender -G343-	1441
1.50.1 Connector -T2cv-	1441
1.51 Rain and light sensor -G397-	1442
1.51.1 Connector -T3ap-	1442
1.52 Fuel pressure sender for low pressure -G410-	1443
1.52.1 Connector -T3b-	1443
1.53 Exhaust gas temperature sender 2 -G448-	1444-1445
1.53.1 Connector -T2be-	1444
1.53.2 Connector -T2dj-	1445
1.54 Exhaust gas pressure sensor 1 -G450-	1446
1.54.1 Connector -T3db-	1446
1.55 Toll collection sender -G459-	1446
1.55.1 Connector -T2ji-	1447
1.56 Clutch position sender -G476-	1447
1.56.1 Connector -T5aa-	1447
1.57 Exhaust gas temperature sender 3 -G495-	1448
1.57.1 Connector -T2bf-	1448
1.58 Pressure differential sender -G505-	1449
1.58.1 Connector -T3bk-	1449
1.59 Temperature sender before particulate filter -G506-	1450
1.59.1 Connector -T3cn-	1450
1.60 Temperature sender after particulate filter -G527-	1451
1.60.1 Connector -T3co-	1451
1.61 Front left sender for park assist steering on left side of vehicle -G568-	1452
1.61.1 Connector -T3l-	1452
1.62 Front right sender for park assist steering on right side of vehicle -G569-	1453
1.62.1 Connector -T3q-	1453
1.63 Anti-theft alarm sensor -G578-	1454
1.63.1 Connector -T4bu-	1454
1.64 Position sender for charge pressure positioner -G581-	1455
1.64.1 Connector -T3bi-	1455
1.65 Vacuum sender -G608-	1456
1.65.1 Connector -T3ak-	1456
1.66 Exhaust gas temperature sender 4 -G648-	1457
1.66.1 Connector -T2bi-	1457
1.67 Sender 1 for turbocharger speed -G688-	1458
1.67.1 Connector -T3dl-	1458
1.68 Temperature sensor 2 for exhaust recirculation -G690-	1459
1.68.1 Connector -T2bb-	1459
1.69 Gearbox neutral position sender -G701-	1460
1.69.1 Connector -T3aj-	1460
1.70 Rear left park assist steering sender -G716-	1461
1.70.1 Connector -T3y-	1461
1.71 Rear right park assist steering sender -G717-	1462
1.71.1 Connector -T3t-	1462
1.72 Pressure sender for refrigerant circuit -G805-	1463
1.72.1 Connector -T3al-	1463
1.73 Charge air temperature sender before charge air cooler -G810-	1464
1.73.1 Connector -T2gd-	1464
1.74 Charge air temperature sender after charge air cooler -G811-	1465
1.74.1 Connector -T2fq-	1465
1.75 Inlet camshaft position sender -G1002-	1466-1467
1.75.1 Connector -T3ci-	1466
1.75.2 Connector -T3dc-	1467
1.76 Exhaust camshaft position sender -G1003-	1468

1.76.1 Connector -T3cj-	1468
1.77 Pressure differential sender for particulate filter -G1037-	1468-1470
1.77.1 Connector -T3cl-	1469
1.77.2 Connector -T3dk-	1469
1.77.3 Connector -T3dp-	1470
1.78 Coolant temperature sender for charge air cooler -G1130-	1471
1.78.1 Connector -T2akh-	1471
1.79 Fuel delivery unit -GX1-	1471-1475
1.79.1 Connector -T2dd-	1472
1.79.2 Connector -T6af-	1472
1.79.3 Connector -T5ag-	1473
1.79.4 Connector -T4bg-	1474
1.79.5 Connector -T3as-	1474
1.79.6 Connector -T4ao-	1475
1.80 Accelerator pedal module -GX2-	1476
1.80.1 Connector -T6aa-	1476
1.81 Throttle valve module -GX3-	1476-1478
1.81.1 Connector -T6da-	1477
1.81.2 Connector -T6d-	1477
1.81.3 Connector -T5as-	1478
1.81.4 Connector -T5bk-	1479
1.82 Exhaust gas recirculation valve 1 -GX5-	1479
1.82.1 Connector -T6at-	1479
1.83 Exhaust gas recirculation valve 2 -GX6-	1480-1481
1.83.1 Connector -T5ar-	1480
1.83.2 Connector -T5bl-	1481
1.84 Lambda probe 1 after catalytic converter -GX7-	1482
1.84.1 Connector -T4ap-	1482
1.85 Intake manifold sender -GX9-	1482-1484
1.85.1 Connector -T3cm-	1483
1.85.2 Connector -T4e-	1483
1.85.3 Connector -T4k-	1484
1.85.4 Connector -T4dg-	1485
1.86 Lambda probe 1 before catalytic converter -GX10-	1485-1487
1.86.1 Connector -T6w-	1486
1.86.2 Connector -T5v-	1486
1.86.3 Connector -T4aq-	1487
1.86.4 Connector -T5bh-	1488
1.87 Delivery unit for reducing agent metering system -GX19-	1488-1489
1.87.1 Connector -T5b-	1488
1.87.2 Connector -T4a-	1489
1.88 Temperature and pressure sender for low-pressure fuel system -GX20-	1490
1.88.1 Connector -T4de-	1490
1.89 Charge pressure sender -GX26-	1491
1.89.1 Connector -T3ea-	1491
1.89.2 Connector -T4j-	1491
1.90 Control unit for NOx sender -GX30-	1492
1.90.1 Connector -T5w-	1492
1.91 Engine temperature regulation module -GX33-	1493-1494
1.91.1 Connector -T5ax-	1493
1.91.2 Connector -T5bm-	1494
1.92 Charge pressure control module -GX34-	1495
1.92.1 Connector -T6bb-	1495
1.92.2 Connector -T6bj-	1495
1.93 Air mass measurement module -GX35-	1496-1497
1.93.1 Connector -T4ar-	1496
1.93.2 Connector -T3dd-	1497
1.94 Dual exhaust gas temperature sensor 1 -GX41-	1498
1.94.1 Connector -T3bb-	1498
1.95 Pressure sensor for activated charcoal filter air flushing -GX44-	1498
1.95.1 Connector -T4cz-	1499
1.96 Control unit 2 for NOx sender -GX46-	1499-1500
1.96.1 Connector -T5ab-	1499
1.96.2 Connector -T5bf-	1500
1.97 Control unit 3 for NOx sender -GX50-	1501
1.97.1 Connector -T5ba-	1501

1.98 Control unit 1 for particulate sensor -GX52-	1501-1502
1.98.1 Connector -T4bw-	1502
834 - -Connector views: parts with prefix H to I - 3	1503-1508
1. Parts with prefix H to I	1503-1508
1.1 Alarm horn -H12-	1503
1.1.1 Connector -T3an-	1503
1.2 Rear parking aid warning buzzer -H15-	1504
1.2.1 Connector -T2dq-	1504
1.3 Front parking aid warning buzzer -H22-	1504
1.3.1 Connector -T2ea-	1504
1.4 Rear lid warning buzzer -H32-	1505
1.4.1 Connector -T2aq-	1505
1.5 Left horn -H33-	1506
1.5.1 Connector -T2bm-	1506
1.6 Right horn -H34-	1507-1508
1.6.1 Connector -T2bw-	1507-1508
835 - -Connector views: parts with prefix J - 3	1509-1594
1. Parts with prefix J	1509-1594
1.1 ABS control unit -J104-	1510
1.1.1 Connector -T46a-	1510
1.2 Fresh air blower control unit -J126-	1511-1512
1.2.1 Connector -T4bq-	1511
1.2.2 Connector -T2ib-	1512
1.3 Automatic gearbox control unit -J217-	1513
1.3.1 Connector -T81a-	1513
1.4 Airbag control unit -J234-	1513-1515
1.4.1 Connector -T90c-	1514
1.4.2 Connector -T90a-	1514
1.4.3 Connector -T90b-	1515
1.5 Sliding sunroof adjustment control unit -J245-	1516
1.5.1 Connector -T5ac-	1516
1.6 Electronically controlled damping control unit -J250-	1516
1.6.1 Connector -T47a-	1517
1.7 Vacuum pump relay -J318-	1517
1.7.1 Connector -T4ax-	1517
1.8 Trailer detector control unit -J345-	1518-1519
1.8.1 Connector -T10q-	1518
1.8.2 Connector -T6ad-	1519
1.8.3 Connector -T24a-	1520
1.9 Auxiliary heater control unit -J364-	1520-1521
1.9.1 Connector -T2bx-	1520
1.9.2 Connector -T6z-	1521
1.10 Battery monitor control unit -J367-	1522
1.10.1 Connector -T2bj-	1522
1.10.2 Connector -T2fi-	1523
1.11 Driver door control unit -J386-	1523-1526
1.11.1 Connector -T20b-	1523
1.11.2 Connector -T20b-	1524
1.11.3 Connector -T6i-	1525
1.11.4 Connector -T32g-	1525
1.11.5 Connector -T16i-	1526
1.11.6 Connector -T6h-	1527
1.12 Front passenger door control unit -J387-	1527-1530
1.12.1 Connector -T32a-	1528
1.12.2 Connector -T6j-	1528
1.12.3 Connector -T20h-	1529
1.12.4 Connector -T16j-	1530
1.12.5 Connector -T20a-	1530
1.13 Wiper motor control unit -J400-	1531
1.13.1 Connector -T4ay-	1531
1.14 Adaptive cruise control unit -J428-	1532
1.14.1 Connector -T7a-	1532
1.15 Parking aid control unit -J446-	1533-1534
1.15.1 Connector -T18a-	1533
1.15.2 Connector -T26a-	1534
1.16 Multifunction steering wheel control unit -J453-	1535

1.16.1 Connector -T6ap-	1535
1.16.2 Connector -T5at-	1535
1.17 All-wheel drive control unit -J492-	1536-1537
1.17.1 Connector -T8ah-	1536
1.17.2 Connector -T2hj-	1537
1.18 Power steering control unit -J500-	1538
1.18.1 Connector -T3z-	1538
1.18.2 Connector -T2bc-	1538
1.19 Onboard supply control unit -J519-	1539-1542
1.19.1 Connector -T73b-	1539
1.19.2 Connector -T73b-	1540
1.19.3 Connector -T73a-	1541
1.19.4 Connector -T46b-	1541
1.19.5 Connector -T46c-	1542
1.20 Digital sound package control unit -J525-	1543
1.20.1 Connector -T38a-	1543
1.21 Steering column electronics control unit -J527-	1543-1545
1.21.1 Connector -T12o-	1544
1.21.2 Connector -T14q-	1544
1.21.3 Connector -T16f-	1545
1.21.4 Connector -T4bm-	1546
1.22 Data bus diagnostic interface -J533-	1546
1.22.1 Connector -T20g-	1546
1.23 Fuel pump control unit -J538-	1547-1548
1.23.1 Connector -T5af-	1547
1.23.2 Connector -T6ag-	1548
1.23.3 Connector -T6ao-	1549
1.24 Rear lid control unit -J605-	1549-1550
1.24.1 Connector -T32e-	1549
1.24.2 Connector -T10r-	1550
1.25 Engine/motor control unit -J623-	1551-1554
1.25.1 Connector -T91a-	1551
1.25.2 Connector -T105a-	1552
1.25.3 Connector -T60a-	1552
1.25.4 Connector -T94a-	1553
1.25.5 Connector -T60b-	1554
1.25.6 Connector -T94b-	1554
1.26 Chip card reader control unit -J676-	1555-1556
1.26.1 Connector -T10au-	1555
1.26.2 Connector -T2jh-	1556
1.26.3 Connector -T5az-	1557
1.27 Display unit for front information display and operating unit control unit -J685-	1557-1559
1.27.1 Connector -T12e-	1558
1.27.2 Connector -T5bn-	1558
1.27.3 Connector -T5ah-	1559
1.28 Mechatronic unit for dual clutch gearbox -J743-	1560-1561
1.28.1 Connector -T16c-	1560
1.28.2 Connector -T25a-	1561
1.28.3 Connector -T20k-	1561
1.29 Control unit for cornering light and headlight range control -J745-	1562
1.29.1 Connector -T20c-	1562
1.30 Control unit for electronic steering column lock -J764-	1563
1.30.1 Connector -T4bn-	1563
1.31 Lane change assist control unit -J769-	1564
1.31.1 Connector -T8ac-	1564
1.32 Lane change assist control unit 2 -J770-	1565
1.32.1 Connector -T8ab-	1565
1.33 Control unit 1 for information electronics -J794-	1566-1575
1.33.1 Connector -T12g-	1567
1.33.2 Connector -T12f-	1567
1.33.3 Connector -T8ad-	1568
1.33.4 Connector -T2ek-	1569
1.33.5 Connector -T2eo-	1569
1.33.6 Connector -T4bp-	1570
1.33.7 Connector -T5aj-	1571
1.33.8 Connector -T12h-	1571

1.33.9 Connector -T2el-	1572
1.33.10 Connector -T8ae-	1573
1.33.11 Connector -T5ai-	1573
1.33.12 Connector -T5al-	1574
1.33.13 Connector -T2em-	1575
1.33.14 Connector -T5ay-	1575
1.34 Driver seat adjustment control unit -J810-	1576-1578
1.34.1 Connector -T10av-	1576
1.34.2 Connector -T32h-	1577
1.34.3 Connector -T12l-	1578
1.34.4 Connector -T16l-	1578
1.35 Control unit for navigation system -J856-	1579-1582
1.35.1 Connector -T5ba-	1579
1.35.2 Connector -T2jj-	1580
1.35.3 Connector -T5bc-	1581
1.35.4 Connector -T20i-	1581
1.35.5 Connector -T20j-	1582
1.35.6 Connector -T10t-	1583
1.36 Control unit for structure-borne sound -J869-	1583
1.36.1 Connector -T6bi-	1583
1.37 Exhaust flap control unit -J883-	1584-1585
1.37.1 Connector -T3ar-	1584
1.37.2 Connector -T5g-	1585
1.38 Control unit for reducing agent heater -J891-	1586
1.38.1 Connector -T4b-	1586
1.38.2 Connector -T5a-	1586
1.39 Rear lid power opening control unit -J938-	1587-1588
1.39.1 Connector -T4dq-	1587
1.39.2 Connector -T4dr-	1588
1.40 Exhaust flap control unit 2 -J945-	1589
1.40.1 Connector -T3cq-	1589
1.41 Emergency call module control unit and communication unit -J949-	1589-1593
1.41.1 Connector -T36a-	1590
1.41.2 Connector -T26c-	1590
1.41.3 Connector -T2fc-	1591
1.41.4 Connector -T4bl-	1592
1.41.5 Connector -T26b-	1592
1.41.6 Connector -T4df-	1593
1.42 Interface for entry and start system -J965-	1594
1.42.1 Connector -T40a-	1594
836 - -Connector views: parts with prefix K to M - 3	1595-1624
1. Parts with prefix K to M	1595-1624
1.1 Central locking SAFELOCK function warning lamp -K133-	1595
1.1.1 Connector -T2ff-	1596
1.2 Front left footwell light -K268-	1596
1.2.1 Connector -T2ee-	1596
1.3 Front right footwell light -K269-	1597
1.3.1 Connector -T2ei-	1597
1.4 Airbag warning lamp -KX1-	1598
1.4.1 Connector -T4bc-	1598
1.5 Dash panel insert -KX2-	1599-1600
1.5.1 Connector -T18b-	1599
1.5.2 Connector -T2ec-	1600
1.6 Left fog light bulb -L22-	1601
1.6.1 Connector -T2bn-	1601
1.7 Right fog light bulb -L23-	1601
1.7.1 Connector -T2bv-	1602
1.8 Centre console illumination bulb -L150-	1602
1.8.1 Connector -T2ef-	1602
1.9 Driver door storage compartment illumination bulb -L160-	1603
1.9.1 Connector -T2gl-	1603
1.10 Front passenger door storage compartment illumination bulb -L161-	1604
1.10.1 Connector -T2go-	1604
1.11 Light for driver side interior door handle illumination -L219-	1605
1.11.1 Connector -T2gi-	1605
1.12 Light for passenger side interior door handle illumination -L220-	1606

1.12.1 Connector -T2gp-	1606
1.13 Light conductor for contour lighting in radiator grille, front right -L362-	1607
1.13.1 Connector -T6bl-	1607
1.14 Light conductor for contour lighting in radiator grille, front left -L363-	1608
1.14.1 Connector -T6bk-	1608
1.15 High-level brake light bulb -M25-	1609
1.15.1 Connector -T2dp-	1609
1.16 Front left headlight -MX1-	1610-1611
1.16.1 Connector -T10o-	1610
1.16.2 Connector -T14k-	1611
1.17 Front right headlight -MX2-	1612
1.17.1 Connector -T10p-	1612
1.17.2 Connector -T14l-	1612
1.18 Left tail light cluster -MX3-	1613-1614
1.18.1 Connector -T8y-	1613
1.18.2 Connector -T8y-	1614
1.18.3 Connector -T8w-	1615
1.19 Right tail light cluster -MX4-	1615-1616
1.19.1 Connector -T8z-	1615
1.19.2 Connector -T8aa-	1616
1.20 Left tail light cluster 2 -MX5-	1617
1.20.1 Connector -T8e-	1617
1.21 Right tail light cluster 2 -MX6-	1618-1619
1.21.1 Connector -T8k-	1618
1.21.2 Connector -T8f-	1618
1.21.3 Connector -T8g-	1619
1.22 Left light module -MX7-	1620-1621
1.22.1 Connector -T4av-	1620
1.22.2 Connector -T8t-	1621
1.22.3 Connector -T6bm-	1621
1.23 Right light module -MX8-	1622-1624
1.23.1 Connector -T4aw-	1622
1.23.2 Connector -T8u-	1623
1.23.3 Connector -T6bn-	1624
837 - -Connector views: parts with prefix N - 3	1625-1721
1. Parts with prefix N	1625-1721
1.1 Injector, cylinder 1 -N30-	1627-1630
1.1.1 Connector -T2la-	1627
1.1.2 Connector -T2ha-	1628
1.1.3 Connector -T2ft-	1629
1.1.4 Connector -T2aa-	1629
1.1.5 Connector -T3de-	1630
1.1.6 Connector -T2iq-	1631
1.2 Injector, cylinder 2 -N31-	1631-1635
1.2.1 Connector -T2lb-	1632
1.2.2 Connector -T2hb-	1632
1.2.3 Connector -T2fu-	1633
1.2.4 Connector -T2ab-	1634
1.2.5 Connector -T3dg-	1634
1.2.6 Connector -T2ir-	1635
1.3 Injector, cylinder 3 -N32-	1636-1639
1.3.1 Connector -T2hc-	1636
1.3.2 Connector -T2fv-	1637
1.3.3 Connector -T2lc-	1637
1.3.4 Connector -T2ac-	1638
1.3.5 Connector -T3dh-	1639
1.3.6 Connector -T2is-	1639
1.4 Injector, cylinder 4 -N33-	1640-1643
1.4.1 Connector -T2jb-	1640
1.4.2 Connector -T2ja-	1641
1.4.3 Connector -T2fw-	1642
1.4.4 Connector -T3df-	1642
1.4.5 Connector -T2it-	1643
1.5 Ignition coil 1 with output stage -N70-	1644
1.5.1 Connector -T4f-	1644
1.6 Charge pressure control solenoid valve -N75-	1644

1.6.1 Connector -T2bg-	1645
1.7 Heater element for crankcase breather -N79-	1645
1.7.1 Connector -T2bh-	1645
1.8 Activated charcoal filter solenoid valve 1 -N80-	1646-1647
1.8.1 Connector -T2ae-	1646
1.8.2 Connector -T2f-	1647
1.9 Coolant shut-off valve -N82-	1648
1.9.1 Connector -T2d-	1648
1.10 Airbag igniter on driver side -N95-	1648-1649
1.10.1 Connector -T2ld-	1649
1.10.2 Connector -T2hm-	1649
1.11 Ignition coil 2 with output stage -N127-	1650
1.11.1 Connector -T4g-	1650
1.12 Airbag igniter 1 on front passenger side -N131-	1651
1.12.1 Connector -T3aw-	1651
1.13 Driver seat belt tensioner igniter 1 -N153-	1652
1.13.1 Connector -T2cs-	1652
1.14 Front passenger seat belt tensioner igniter 1 -N154-	1653
1.14.1 Connector -T2ct-	1653
1.15 Rear belt tensioner igniter on driver side -N196-	1654
1.15.1 Connector -T2do-	1654
1.16 Rear belt tensioner igniter on passenger side -N197-	1655
1.16.1 Connector -T2cy-	1655
1.17 Side airbag igniter on driver side -N199-	1656
1.17.1 Connector -T3bd-	1656
1.18 Side airbag igniter on front passenger side -N200-	1657
1.18.1 Connector -T3ce-	1657
1.19 Camshaft control valve 1 -N205-	1658-1660
1.19.1 Connector -T2r-	1658
1.19.2 Connector -T2z-	1659
1.19.3 Connector -T2kn-	1660
1.19.4 Connector -T2ig-	1660
1.20 Turbocharger air recirculation valve -N249-	1661-1662
1.20.1 Connector -T2p-	1661
1.20.2 Connector -T2ko-	1662
1.21 Driver side curtain airbag igniter -N251-	1663
1.21.1 Connector -T2ck-	1663
1.22 Front passenger side curtain airbag igniter -N252-	1663
1.22.1 Connector -T2cp-	1664
1.23 Fuel pressure regulating valve -N276-	1664-1665
1.23.1 Connector -T2y-	1664
1.23.2 Connector -T2gb-	1665
1.23.3 Connector -T2ai-	1666
1.24 Air conditioner compressor regulating valve -N280-	1666-1667
1.24.1 Connector -T2fg-	1666
1.24.2 Connector -T2fo-	1667
1.25 Fuel metering valve -N290-	1668-1670
1.25.1 Connector -T2ge-	1668
1.25.2 Connector -T2jn-	1669
1.25.3 Connector -T2did-	1669
1.25.4 Connector -T2jc-	1670
1.26 Ignition coil 3 with output stage -N291-	1671
1.26.1 Connector -T4h-	1671
1.27 Ignition coil 4 with output stage -N292-	1671
1.27.1 Connector -T4i-	1672
1.28 Intake manifold flap valve -N316-	1672-1673
1.28.1 Connector -T2v-	1672
1.28.2 Connector -T2ih-	1673
1.29 Exhaust camshaft control valve 1 -N318-	1674-1676
1.29.1 Connector -T2q-	1674
1.29.2 Connector -T2kb-	1675
1.29.3 Connector -T2kp-	1675
1.29.4 Connector -T2iv-	1676
1.30 Front left shock absorber damping adjustment valve -N336-	1677
1.30.1 Connector -T2ci-	1677
1.31 Front right shock absorber dampina adiustment valve -N337-	1677



1.31.1 Connector -T2cf-	1678
1.32 Rear left shock absorber damping adjustment valve -N338-	1678
1.32.1 Connector -T2ey-	1678
1.33 Rear right shock absorber damping adjustment valve -N339-	1679
1.33.1 Connector -T2ev-	1679
1.34 Exhaust gas recirculation cooler changeover valve -N345-	1680
1.34.1 Connector -T2fa-	1680
1.35 Ignition key withdrawal lock solenoid -N376-	1681
1.35.1 Connector -T2hn-	1681
1.36 Valve for oil pressure control -N428-	1682-1683
1.36.1 Connector -T2iw-	1682
1.36.2 Connector -T2w-	1683
1.36.3 Connector -T2ah-	1684
1.37 Injector for reducing agent -N474-	1684
1.37.1 Connector -T2bu-	1684
1.38 Coolant valve for gearbox -N488-	1685-1686
1.38.1 Connector -T2x-	1685
1.38.2 Connector -T2kr-	1686
1.39 Coolant valve for cylinder head -N489-	1687
1.39.1 Connector -T2fs-	1687
1.40 Actuator for engine temperature regulation -N493-	1687-1688
1.40.1 Connector -T5e-	1688
1.40.2 Connector -T2dib-	1688
1.41 Coolant regulating valve -N515-	1689
1.41.1 Connector -T2fb-	1689
1.42 Piston cooling jet control valve -N522-	1690-1691
1.42.1 Connector -T2o-	1690
1.42.2 Connector -T2kd-	1691
1.42.3 Connector -T2kq-	1692
1.43 Injector 2, cylinder 1 -N532-	1692
1.43.1 Connector -T2he-	1692
1.44 Injector 2, cylinder 2 -N533-	1693
1.44.1 Connector -T2hf-	1693
1.45 Injector 2, cylinder 3 -N534-	1694
1.45.1 Connector -T2hg-	1694
1.46 Injector 2, cylinder 4 -N535-	1695
1.46.1 Connector -T2hh-	1695
1.47 Inlet cam actuator A for cylinder 1 -N576-	1696-1697
1.47.1 Connector -T2g-	1696
1.47.2 Connector -T2ii-	1697
1.48 Inlet cam actuator B for cylinder 1 -N577-	1698
1.48.1 Connector -T2h-	1698
1.48.2 Connector -T2ij-	1698
1.49 Inlet cam actuator for cylinder 2 -N583-	1699
1.49.1 Connector -T3eb-	1699
1.50 Inlet cam actuator A for cylinder 2 -N584-	1700-1701
1.50.1 Connector -T2i-	1700
1.50.2 Connector -T2ik-	1701
1.51 Inlet cam actuator B for cylinder 2 -N585-	1702
1.51.1 Connector -T2j-	1702
1.51.2 Connector -T2il-	1702
1.52 Exhaust cam actuator for cylinder 2 -N587-	1703
1.52.1 Connector -T3cp-	1703
1.53 Inlet cam actuator for cylinder 3 -N591-	1704
1.53.1 Connector -T3br-	1704
1.54 Inlet cam actuator A for cylinder 3 -N592-	1705-1706
1.54.1 Connector -T2k-	1705
1.54.2 Connector -T2im-	1706
1.55 Inlet cam actuator B for cylinder 3 -N593-	1707
1.55.1 Connector -T2l-	1707
1.55.2 Connector -T2in-	1707
1.56 Exhaust cam actuator for cylinder 3 -N595-	1708
1.56.1 Connector -T3bq-	1708
1.57 Inlet cam actuator A for cylinder 4 -N600-	1709-1710
1.57.1 Connector -T2m-	1709
1.57.2 Connector -T2io-	1710

1.58 Inlet cam actuator B for cylinder 4 -N601-	1711
1.58.1 Connector -T2n-	1711
1.58.2 Connector -T2ip-	1711
1.59 Inlet camshaft control valve 1 -N727-	1712-1713
1.59.1 Connector -T2if-	1712
1.59.2 Connector -T2kc-	1713
1.60 Injector 2 for reducing agent -N758-	1714
1.60.1 Connector -T2ke-	1714
1.61 Gearbox -NX1-	1714-1715
1.61.1 Connector -T28a-	1715
1.61.2 Connector -T8at-	1715
1.62 Front left seat belt -NX10-	1716-1718
1.62.1 Connector -T5ad-	1716
1.62.2 Connector -T2hw-	1717
1.62.3 Connector -T2hy-	1718
1.62.4 Connector -T5au-	1718
1.63 Front right seat belt -NX11-	1719-1721
1.63.1 Connector -T5ae-	1719
1.63.2 Connector -T2hv-	1720
1.63.3 Connector -T5av-	1721
838 - -Connector views: parts with prefix O to Q - 3	1722-1728
1. Parts with prefixes O to Q	1722-1728
1.1 Glow plug 1 -Q10-	1722
1.1.1 Connector -T1om-	1722
1.1.2 Connector -T1akb-	1723
1.2 Glow plug 2 -Q11-	1723-1724
1.2.1 Connector -T1on-	1723
1.2.2 Connector -T1akc-	1724
1.3 Glow plug 3 -Q12-	1725
1.3.1 Connector -T1ajr-	1725
1.4 Glow plug 4 -Q13-	1725-1726
1.4.1 Connector -T1oo-	1726
1.4.2 Connector -T1ake-	1726
1.5 Glow plug 3 -QX3-	1727-1728
1.5.1 Connector -T4cg-	1727-1728
839 - -Connector views: parts with prefix R - 3	1729-1779
1. Parts with prefix R	1729-1779
1.1 Front left loudspeaker -R2-	1730
1.1.1 Connector -T4t-	1730
1.2 Front right loudspeaker -R3-	1731
1.2.1 Connector -T4y-	1731
1.3 Rear left loudspeaker -R4-	1731
1.3.1 Connector -T4ab-	1731
1.4 Rear right loudspeaker -R5-	1732
1.4.1 Connector -T4ae-	1732
1.5 Rear left bass loudspeaker -R15-	1733
1.5.1 Connector -T4cq-	1733
1.6 Rear right bass loudspeaker -R17-	1734
1.6.1 Connector -T4cr-	1734
1.7 Front left treble loudspeaker -R20-	1735-1736
1.7.1 Connector -T2cm-	1735
1.7.2 Connector -T2cn-	1736
1.8 Front left bass loudspeaker -R21-	1737
1.8.1 Connector -T4co-	1737
1.9 Front right treble loudspeaker -R22-	1737-1738
1.9.1 Connector -T2cq-	1738
1.9.2 Connector -T2cr-	1738
1.10 Front right bass loudspeaker -R23-	1739
1.10.1 Connector -T4cp-	1739
1.11 Telephone microphone -R38-	1740
1.11.1 Connector -T2cl-	1740
1.12 Aerial amplifier 1 for TV -R82-	1741-1742
1.12.1 Connector -T4dc-	1741
1.12.2 Connector -T3cy-	1742
1.13 Aerial amplifier 2 for TV -R83-	1743
1.13.1 Connector -T2if-	1743

1.13.2 Connector -T3cz-	1743
1.14 Aerial amplifier 3 for TV -R84-	1744-1745
1.14.1 Connector -T2jg-	1744
1.14.2 Connector -T3da-	1745
1.15 CD ROM drive -R92-	1746
1.15.1 Connector -T5ak-	1746
1.15.2 Connector -T9a-	1746
1.16 Left aerial module -R108-	1747-1749
1.16.1 Connector -T4bj-	1747
1.16.2 Connector -T3cf-	1748
1.16.3 Connector -T2dz-	1749
1.16.4 Connector -T3cg-	1749
1.17 Right aerial module -R109-	1750-1751
1.17.1 Connector -T2dx-	1750
1.17.2 Connector -T3ch-	1751
1.18 Rear bumper aerial for entry and start system -R136-	1752
1.18.1 Connector -T2cz-	1752
1.19 Interior aerial 1 for entry and start system -R138-	1752
1.19.1 Connector -T2ep-	1753
1.20 Interior aerial 2 for entry and start system -R139-	1753
1.20.1 Connector -T2db-	1753
1.21 Remote control receiver for auxiliary coolant heater -R149-	1754-1755
1.21.1 Connector -T6ah-	1754
1.21.2 Connector -T2df-	1755
1.22 Traffic data aerial -R173-	1756
1.22.1 Connector -T8as-	1756
1.23 Amplitude modulation (AM) frequency filter -R177-	1756
1.23.1 Connector -T2ar-	1757
1.24 Frequency modulation (FM) frequency filter in negative wire -R178-	1757
1.24.1 Connector -T1bd-	1757
1.25 Frequency modulation (FM) frequency filter in positive wire -R179-	1758
1.25.1 Connector -T1bc-	1758
1.26 Subwoofer -R211-	1759
1.26.1 Connector -T4be-	1759
1.27 Actuator for structure-borne sound -R214-	1760
1.27.1 Connector -T2iu-	1760
1.28 Front camera for driver assist systems -R242-	1761
1.28.1 Connector -T12d-	1761
1.29 Storage compartment with interface for mobile telephone -R265-	1762-1763
1.29.1 Connector -T2eg-	1762
1.29.2 Connector -T6aj-	1763
1.30 USB hub -R293-	1764-1767
1.30.1 Connector -T5ao-	1764
1.30.2 Connector -T5ap-	1765
1.30.3 Connector -T5aq-	1765
1.30.4 Connector -T4bs-	1766-1767
1.31 LTE aerial 1 -R297-	1768
1.31.1 Connector -T2dia-	1768
1.32 LTE aerial 2 -R306-	1769
1.32.1 Connector -T2di-	1769
1.33 Transmission and reception stabilisation control unit -R308-	1769-1771
1.33.1 Connector -T2ds-	1769
1.33.2 Connector -T2dt-	1770
1.33.3 Connector -T4bi-	1771
1.33.4 Connector -T2dta-	1771
1.34 Loudspeaker for emergency call module -R335-	1772-1773
1.34.1 Connector -T2eh-	1772
1.34.2 Connector -T2eha-	1773
1.35 Roof aerial -RX5-	1774-1775
1.35.1 Connector -T2dv-	1774
1.35.2 Connector -T2dw-	1775
1.35.3 Connector -T2du-	1775
1.36 TV tuner -RX6-	1776-1779
1.36.1 Connector -T12k-	1776
1.36.2 Connector -T2jd-	1777
1.36.3 Connector -T4db-	1778

1.36.4 Connector -T2je-	1778-1779
840 - -Connector views: parts with prefix S to U - 3	1780-1889
1. Parts with prefix S to U	1780-1889
1.1 Coupling point for exhaust flap control unit -TAGK-	1781-1784
1.1.1 Connector -T5bi-	1781
1.1.2 Connector -T5bj-	1782
1.1.3 Connector -T3ct-	1782
1.1.4 Connector -T3cu-	1783
1.1.5 Connector -T3cr-	1784
1.1.6 Connector -T3cs-	1784
1.2 Coupling point for gearbox oil cooling -TGOK-	1785-1786
1.2.1 Connector -T5z-	1785
1.2.2 Connector -T5d-	1786
1.3 Coupling point for roof -TH-	1787
1.3.1 Connector -T16d-	1787
1.3.2 Connector -T16a-	1787
1.4 Coupling point on rear lid, left -THKL-	1788-1790
1.4.1 Connector -T10d-	1788
1.4.2 Connector -T10y-	1789
1.4.3 Connector -T10c-	1790
1.4.4 Connector -T10x-	1790
1.5 Coupling point on rear lid, right -THKR-	1791-1792
1.5.1 Connector -T10aa-	1791
1.5.2 Connector -T10e-	1792
1.6 Coupling point in luggage compartment, left -THRL-	1793
1.6.1 Connector -T8c-	1793
1.6.2 Connector -T8x-	1793
1.7 Coupling point in luggage compartment, centre -THRM-	1794-1795
1.7.1 Connector -T3ba-	1794
1.7.2 Connector -T3bh-	1795
1.8 Coupling point in luggage compartment, right -THRR-	1796-1799
1.8.1 Connector -T2es-	1796
1.8.2 Connector -T2aw-	1797
1.8.3 Connector -T10h-	1797
1.8.4 Connector -T10ah-	1798
1.8.5 Connector -T14ar-	1799
1.8.6 Connector -T14aq-	1799
1.9 Coupling point in interior, right -TIR-	1800-1801
1.9.1 Connector -T2jk-	1800
1.9.2 Connector -T2jl-	1801
1.10 Coupling point in interior, below left -TIUL-	1802-1813
1.10.1 Connector -T17k-	1802
1.10.2 Connector -T17k-	1803
1.10.3 Connector -T17w-	1804
1.10.4 Connector -T17e-	1804
1.10.5 Connector -T17v-	1805
1.10.6 Connector -T17c-	1806
1.10.7 Connector -T17z-	1806
1.10.8 Connector -T17f-	1807
1.10.9 Connector -T17m-	1808
1.10.10 Connector -T17d-	1808
1.10.11 Connector -T17la-	1809
1.10.12 Connector -T17l-	1810
1.10.13 Connector -T17j-	1810
1.10.14 Connector -T17b-	1811
1.10.15 Connector -T17o-	1812
1.10.16 Connector -T17g-	1812
1.10.17 Connector -T17n-	1813
1.11 Coupling point in interior, below right -TIUR-	1814-1816
1.11.1 Connector -T17h-	1814
1.11.2 Connector -T17q-	1815
1.11.3 Connector -T17p-	1815
1.11.4 Connector -T17i-	1816
1.12 Coupling point for fuel delivery unit -TKFE-	1817
1.12.1 Connector -T4ck-	1817
1.12.2 Connector -T4cl-	1817

1.13 Coupling point in engine compartment, left -TML-	1818-1838
1.13.1 Connector -T10n-	1819
1.13.2 Connector -T10n-	1820
1.13.3 Connector -T10an-	1821
1.13.4 Connector -T10an-	1821
1.13.5 Connector -T8r-	1822
1.13.6 Connector -T8ag-	1823
1.13.7 Connector -T4at-	1823
1.13.8 Connector -T4cb-	1824
1.13.9 Connector -T8ax-	1825
1.13.10 Connector -T8aw-	1825
1.13.11 Connector -T14am-	1826
1.13.12 Connector -T14ag-	1827
1.13.13 Connector -T14an-	1827
1.13.14 Connector -T6x-	1828
1.13.15 Connector -T6u-	1829
1.13.16 Connector -T14i-	1829
1.13.17 Connector -T14c-	1830
1.13.18 Connector -T14ae-	1831
1.13.19 Connector -T10m-	1831
1.13.20 Connector -T10l-	1832
1.13.21 Connector -T8au-	1833
1.13.22 Connector -T8av-	1833
1.13.23 Connector -T14ap-	1834
1.13.24 Connector -T2b-	1835
1.13.25 Connector -T2bp-	1835
1.13.26 Connector -T14e-	1836
1.13.27 Connector -T4al-	1837
1.13.28 Connector -T4am-	1837
1.13.29 Connector -T8d-	1838
1.13.30 Connector -T8s-	1839
1.14 Coupling point on engine, top -TMO-	1839-1842
1.14.1 Connector -T14af-	1840
1.14.2 Connector -T14a-	1840
1.14.3 Connector -T8aq-	1841
1.14.4 Connector -T8ar-	1842
1.14.5 Connector -T14ao-	1842
1.15 Coupling point on engine, top centre -TMOM-	1843-1844
1.15.1 Connector -T8b-	1843
1.15.2 Connector -T8aj-	1844
1.16 Coupling point on engine, top right -TMOR-	1845
1.16.1 Connector -T8a-	1845
1.16.2 Connector -T8ai-	1845
1.17 Coupling point for reducing agent metering system -TRMD-	1846-1851
1.17.1 Connector -T10aq-	1846
1.17.2 Connector -T10al-	1847
1.17.3 Connector -T6ai-	1848
1.17.4 Connector -T6a-	1848
1.17.5 Connector -T10s-	1849
1.17.6 Connector -T10a-	1850
1.17.7 Connector -T6b-	1850
1.17.8 Connector -T6bd-	1851
1.18 Coupling point for all-wheel drive -TSAA-	1852
1.18.1 Connector -T6au-	1852
1.18.2 Connector -T6ac-	1852
1.19 Coupling point for front left seat -TSVL-	1853-1858
1.19.1 Connector -T17a-	1853
1.19.2 Connector -T17r-	1854
1.19.3 Connector -T4dm-	1855
1.19.4 Connector -T4dl-	1855
1.19.5 Connector -T8ba-	1856
1.19.6 Connector -T8bb-	1857
1.19.7 Connector -T3au-	1857
1.19.8 Connector -T3bc-	1858
1.20 Coupling point for front right seat -TSVR-	1859-1863
1.20.1 Connector -T4do-	1859

1.20.2 Connector -T4dn-	1860
1.20.3 Connector -T17t-	1860
1.20.4 Connector -T17s-	1861
1.20.5 Connector -T8bc-	1862
1.20.6 Connector -T8bd-	1862
1.20.7 Connector -T3at-	1863
1.20.8 Connector -T3be-	1864
1.21 Coupling point for rear left door -TTHL-	1864-1866
1.21.1 Connector -T19e-	1865
1.21.2 Connector -T19a-	1865
1.21.3 Connector -T19b-	1866
1.22 Coupling point for rear right door -TTHR-	1867-1868
1.22.1 Connector -T19f-	1867
1.22.2 Connector -T19c-	1868
1.22.3 Connector -T19d-	1868
1.23 Coupling point in front left door -TTIVL-	1869-1870
1.23.1 Connector -T4s-	1869
1.23.2 Connector -T4ag-	1870
1.24 Coupling point in front right door -TTIVR-	1871
1.24.1 Connector -T4ai-	1871
1.24.2 Connector -T4x-	1871
1.25 Coupling point for front left door -TTVL-	1872-1874
1.25.1 Connector -T27c-	1872
1.25.2 Connector -T27a-	1873
1.25.3 Connector -T4ci-	1874
1.25.4 Connector -T4u-	1874
1.26 Coupling point for front right door -TTVR-	1875-1877
1.26.1 Connector -T27b-	1875
1.26.2 Connector -T27d-	1876
1.26.3 Connector -T4z-	1877
1.26.4 Connector -T4cj-	1877
1.27 Trailer socket -U10-	1878
1.27.1 Connector -T13a-	1878
1.28 12 V socket 2 -U18-	1879
1.28.1 Connector -T3av-	1879
1.29 12 V socket 3 -U19-	1880
1.29.1 Connector -T3ay-	1880
1.30 Diagnostic connection -U31-	1881
1.30.1 Connector -T16e-	1881
1.31 USB charging socket 1 -U37-	1882-1883
1.31.1 Connector -T4di-	1882
1.31.2 Connector -T4br-	1883
1.32 USB connection 1 -U41-	1884-1887
1.32.1 Connector -T4dh-	1884
1.32.2 Connector -T4bh-	1885-1886
1.32.3 Connector -T5an-	1887
1.32.4 Connector -T7c-	1887
1.33 USB connection 2 -U42-	1888-1889
1.33.1 Connector -T5am-	1888-1889
841 - -Connector views: parts with prefix V - 3	1890-1926
1. Parts with prefix V	1890-1926
1.1 Washer pump -V5-	1891
1.1.1 Connector -T2bs-	1891
1.2 Rear window wiper motor -V12-	1892
1.2.1 Connector -T4p-	1892
1.3 Driver seat longitudinal adjustment motor -V28-	1892
1.3.1 Connector -T5bo-	1892
1.4 Driver seat backrest adjustment motor -V45-	1893
1.4.1 Connector -T5br-	1893
1.5 Coolant circulation pump -V50-	1894
1.5.1 Connector -T3dn-	1894
1.6 Metering pump -V54-	1895
1.6.1 Connector -T2de-	1895
1.7 Air recirculation flap control motor -V113-	1896
1.7.1 Connector -T6be-	1896
1.8 Driver seat lumbar support longitudinal adjustment motor -V125-	1897

1.8.1 Connector -T4dj-	1897
1.9 Driver seat lumbar support height adjustment motor -V129-	1898
1.9.1 Connector -T4dk-	1898
1.10 Driver seat height adjustment motor -V138-	1899
1.10.1 Connector -T5bq-	1899
1.11 Driver side window regulator motor -V147-	1900
1.11.1 Connector -T3r-	1900
1.12 Front passenger side window regulator motor -V148-	1901
1.12.1 Connector -T3s-	1901
1.13 Charge air cooling pump -V188-	1902
1.13.1 Connector -T3g-	1902
1.14 Vacuum pump for brakes -V192-	1903-1904
1.14.1 Connector -T2bz-	1903
1.14.2 Connector -T6y-	1904
1.15 Driver seat rake adjustment motor -V243-	1905
1.15.1 Connector -T5bp-	1905
1.16 Left parking brake motor -V282-	1905
1.16.1 Connector -T2ew-	1906
1.17 Right parking brake motor -V283-	1906
1.17.1 Connector -T2et-	1906
1.18 Motor 1 for rear lid -V444-	1907
1.18.1 Connector -T10w-	1907
1.19 Charge pressure positioner -V465-	1908-1909
1.19.1 Connector -T6c-	1908
1.19.2 Connector -T6e-	1909
1.20 Rear driver side window regulator motor -V471-	1910
1.20.1 Connector -T10f-	1910
1.21 Rear passenger side window regulator motor -V472-	1910
1.21.1 Connector -T10g-	1911
1.22 Auxiliary hydraulic pump 1 for gearbox oil -V475-	1911
1.22.1 Connector -T4d-	1911
1.23 Auxiliary pump for heating -V488-	1912-1913
1.23.1 Connector -T3e-	1912
1.23.2 Connector -T3ab-	1913
1.24 Driver side exterior mirror -VX4-	1914
1.24.1 Connector -T2at-	1914
1.25 Power latching for rear lid -VX16-	1914
1.25.1 Connector -T6g-	1915
1.26 Driver door lock unit -VX21-	1915
1.26.1 Connector -T8m-	1915
1.27 Front passenger door lock unit -VX22-	1916
1.27.1 Connector -T8ao-	1916
1.28 Rear left door lock unit -VX23-	1917
1.28.1 Connector -T8n-	1917
1.29 Rear right door lock unit -VX24-	1918
1.29.1 Connector -T8o-	1918
1.30 Rear lid lock unit -VX25-	1919
1.30.1 Connector -T4q-	1919
1.31 Air distribution flap -VX33-	1920
1.31.1 Connector -T6ay-	1920
1.32 Front left temperature flap -VX34-	1921
1.32.1 Connector -T6az-	1921
1.33 Front right temperature flap -VX35-	1922
1.33.1 Connector -T6ax-	1922
1.34 Defroster flap -VX47-	1923
1.34.1 Connector -T6aw-	1923
1.35 Radiator fan -VX57-	1924-1925
1.35.1 Connector -T4as-	1924
1.35.2 Connector -T4da-	1925
1.36 Fresh air and air recirculation flap -VX96-	1926
1.36.1 Connector -T6av-	1926
842 - -Connector views: parts with prefix W to Z - 3	1927-1949
1. Parts with prefix W to Z	1927-1949
1.1 Luggage compartment light -W3-	1927
1.1.1 Connector -T2dr-	1927
1.2 Glove compartment light -W6-	1928

1.2.1 Connector -T2ej-	1928
1.3 Front passenger side illuminated vanity mirror -W14-	1929
1.3.1 Connector -T2an-	1929
1.4 Driver side illuminated vanity mirror -W20-	1930
1.4.1 Connector -T2al-	1930
1.5 Rear left interior light -W47-	1931
1.5.1 Connector -T4m-	1931
1.6 Rear right interior light -W48-	1932
1.6.1 Connector -T4n-	1932
1.7 Light for driver door background lighting -W86-	1933
1.7.1 Connector -T2gj-	1933
1.8 Light for passenger door background lighting -W87-	1934
1.8.1 Connector -T2gn-	1934
1.9 Light 2 for driver door background lighting -W97-	1935
1.9.1 Connector -T2gk-	1935
1.10 Light 2 for passenger door background lighting -W98-	1936
1.10.1 Connector -T2gm-	1936
1.11 Front interior light -WX1-	1937
1.11.1 Connector -T6ab-	1937
1.12 Rear interior light -WX2-	1938
1.12.1 Connector -T4l-	1938
1.13 Left number plate light -X4-	1939
1.13.1 Connector -T2av-	1939
1.14 Right number plate light -X5-	1940
1.14.1 Connector -T2au-	1940
1.15 Left washer jet heater element -Z20-	1941
1.15.1 Connector -T2cb-	1941
1.16 Right washer jet heater element -Z21-	1942
1.16.1 Connector -T2cc-	1942
1.17 Auxiliary air heater element -Z35-	1943
1.17.1 Connector -T3am-	1943
1.18 Heater for reducing agent line (heater circuit 2) -Z104-	1944
1.18.1 Connector -T2c-	1944
1.19 Windscreen heater for front sensors -Z113-	1945
1.19.1 Connector -T2co-	1945
1.20 Rear window -ZX1-	1946
1.20.1 Connector -T1bj-	1946
1.21 Seat heating (driver side) -ZX15-	1947
1.21.1 Connector -T4ak-	1947
1.22 Seat heating (front passenger side) -ZX16-	1948-1949
1.22.1 Connector -T4an-	1948-1949