



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when using testing and measuring instruments during a road test	1
2 Repair notes	2
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 Routing and attachment of lines	2
27 - Starter, current supply, CCS	4
1 Battery	4
1.1 Assembly overview – battery	4
1.2 Removing and installing battery	6
1.3 Disconnecting and connecting battery	8
1.4 Removing and installing battery tray	10
1.5 Checking battery	10
1.6 Charging battery	11
1.7 Removing and installing earth wire with battery monitor control unit J367	11
2 Alternator	12
2.1 Assembly overview – alternator	12
2.2 Removing and installing alternator	13
2.3 Checking alternator	20
2.4 Removing and installing poly V-belt pulley	20
2.5 Removing and installing voltage regulator	29
3 Starter	32
3.1 Assembly overview – starter	32
3.2 Removing and installing starter	34
3.3 Checking starter	39
90 - Gauges, instruments	40
1 Dash panel insert	40
1.1 Assembly overview – dash panel insert	40
1.2 Removing and installing dash panel insert KX2	41
2 Horn	45
2.1 Assembly overview – horn	45
2.2 Removing and installing left horn H33/right horn H34	45
92 - Windscreen wash/wipe system	47
1 Windscreen wiper system	47
1.1 Assembly overview – windscreen wiper system	47
1.2 Moving wipers to service position	49
1.3 Removing and installing wiper blade	49
1.4 Removing and installing wiper arms	50
1.5 Adjusting wiper arms	52
1.6 Removing and installing wiper motor V	53
1.7 Removing and installing rain and light sensor	54
2 Windscreen washer system	59
2.1 Assembly overview – windscreen washer system	59
2.2 Removing and installing washer fluid reservoir	63
2.3 Removing and installing windscreen washer fluid level sender	67
2.4 Removing and installing windscreen washer pump	68



2.5	Removing and installing spray jets	70
2.6	Adjusting spray jets	71
3	Rear window wiper system	72
3.1	Assembly overview – rear window wiper system	72
3.2	Removing and installing wiper blade	73
3.3	Removing and installing wiper arm	73
3.4	Adjusting wiper arm	74
3.5	Removing and installing rear window wiper motor V12	75
4	Rear window washer system	77
4.1	Assembly overview – rear window washer system	77
4.2	Removing and installing washer fluid reservoir	78
4.3	Removing and installing rear window washer pump	78
4.4	Removing and installing spray jet	78
4.5	Adjusting spray jet	78
5	Washer fluid lines	80
5.1	Repairing washer fluid lines	80
94	Lights, bulbs, switches - exterior	81
1	Headlights	81
1.1	Assembly overview – headlight	81
1.2	Removing and installing headlight	84
1.3	Adjusting headlights	86
1.4	Adjusting headlight installation position	86
1.5	Removing and installing output module 1 for LED headlight A31/A27	86
1.6	Daytime running lights	87
2	Tail light cluster	91
2.1	Assembly overview – tail light cluster in body	91
2.2	Assembly overview – tail light clusters in rear lid	91
2.3	Removing and installing tail light in rear lid	92
2.4	Adjusting installation position of tail light	94
2.5	Removing and installing tail light cluster	95
2.6	Removing and installing tail light bulb M2/M4	96
2.7	Removing and installing rear fog light bulb L46/L47	96
2.8	Removing and installing brake and tail light bulb M21/M22	96
2.9	Removing and installing reversing light bulb	96
2.10	Removing and installing turn signal bulb	96
3	High-level brake light	97
3.1	Assembly overview – high-level brake light	97
3.2	Removing and installing high-level brake light	97
4	Additional exterior lights	99
4.1	Removing and installing light conductor for contour lighting in radiator grille [L362]/[L363]	99
4.2	Removing and installing number plate light X4/X5	100
4.3	Removing and installing turn signal repeater bulb [L131]/[L132]	101
4.4	Removing and installing entry light in exterior mirror -W52-/-W53-	101
5	Entry and start authorisation system	103
5.1	Overview of fitting locations – entry and start authorisation system	103
5.2	Overview of fitting locations – keyless entry system	104
5.3	Removing and installing entry and start authorisation control unit J518	105
5.4	Removing and installing door exterior handle contact sensor G415/G416	107
5.5	Removing and installing interior aerial 1 for entry and start authorisation R138	107
5.6	Removing and installing interior aerial 2 for entry and start system R139	108
5.7	Removing and installing left entry and start authorisation aerial R200	108
5.8	Removing and installing right entry and start authorisation aerial R201	109
5.9	Removing and installing rear bumper aerial for entry and start system R136	109
5.10	Removing and installing aerial for entry and start system R134/R135	109



6	Steering column switch module	110
6.1	Assembly overview – steering column switch module	110
6.2	Removing and installing lock cylinder	112
6.3	Removing and installing ignition key withdrawal lock solenoid N376	115
6.4	Removing and installing ignition/starter switch	115
6.5	Removing and installing steering column switch module	116
6.6	Removing and installing steering column electronics control unit J527	120
6.7	Removing and installing turn signal switch E2	123
6.8	Removing and installing cruise control system switch E45	124
6.9	Removing and installing intermittent wiper switch E22	124
6.10	Removing and installing base for steering column combination switch	124
6.11	Removing and installing steering lock housing	125
7	Automatic headlight range control	128
7.1	Assembly overview - automatic headlight range control	128
7.2	Removing and installing cornering light and headlight range control unit J745	129
96	Lights, bulbs, switches - interior	132
1	Lights	132
1.1	Overview of fitting locations – lights in dash panel	132
1.2	Overview of fitting locations – lights in front doors	133
1.3	Overview of fitting locations - lights in centre console	134
1.4	Overview of fitting locations – lights in luggage compartment	135
1.5	Overview of fitting locations – lights in roof trim	136
1.6	Removing and installing glove compartment light W6	138
1.7	Replacing bulb for glove compartment light W6	139
1.8	Removing and installing front footwell light K268/K269	140
1.9	Removing and installing front footwell illumination bulb L151/L152	141
1.10	Removing and installing centre console illumination bulb L150	142
1.11	Removing and installing Central locking SAFELock function warning lamp K133	142
1.12	Removing and installing light for interior door handle illumination L219/L220	143
1.13	Removing and installing light 2 for door background lighting W97/W98	144
1.14	Removing and installing light for door ambient lighting W86/W87	145
1.15	Removing and installing door storage compartment illumination bulb L160/L161	145
1.16	Removing and installing selector lever position display Y26	146
1.17	Removing and installing luggage compartment light W3	146
1.18	Removing and installing bulb for luggage compartment light W3	147
1.19	Removing and installing illuminated vanity mirror W20/W14	147
1.20	Renewing front interior light bulb W1/W13/W19	148
1.21	Renewing bulb for rear interior light W43	150
1.22	Removing and installing bulb for rear reading light W11/W12	151
1.23	Renewing bulb of rear interior light W47/W48	151
2	Controls	153
2.1	Overview of fitting locations - controls in dash panel	154
2.2	Overview of fitting locations - controls in front doors	155
2.3	Overview of fitting locations - controls in rear doors	155
2.4	Overview of fitting locations - controls in centre console	156
2.5	Overview of fitting locations - controls in luggage compartment	158
2.6	Overview of fitting locations - controls in roof trim	158
2.7	Removing and installing rotary light switch EX1	161
2.8	Removing and installing TCS and ESP button E256	161
2.9	Removing and installing parking aid button E266	162
2.10	Removing and installing park assist steering button E581	162
2.11	Removing and installing Start/Stop operation button E693	162
2.12	Removing and installing driving mode selection button E735	162
2.13	Removing and installing switch module in centre console EX23/EX30	162



2.14	Removing and installing front passenger side airbag deactivated warning lamp K145	163
2.15	Removing and installing hazard warning light switch EX3	165
2.16	Removing and installing buttons for seat heating E653/E654	165
2.17	Removing and installing glove compartment light switch E26	166
2.18	Removing and installing switch for exterior mirror adjuster EX11	167
2.19	Removing and installing operating unit for window regulator in driver door EX36	168
2.20	Removing and installing front passenger side window regulator button E716	168
2.21	Removing and installing driver side interior locking button for central locking system E308	169
2.22	Removing and installing rear lid remote release button E233	170
2.23	Removing and installing door contact switch F2/F3	171
2.24	Removing and installing rear window regulator button E711/E713	171
2.25	Removing and installing rear door contact switches F10/F11	171
2.26	Removing and installing electromechanical parking brake button E538/auto-hold button E540	172
2.27	Removing and installing starter button E378	172
2.28	Removing and installing button to close rear lid in luggage compartment E406	173
2.29	Removing and installing rear lid warning buzzer H32	174
2.30	Removing and installing rear lid contact switch	175
2.31	Removing and installing vanity mirror contact switch F147/F148	175
2.32	Removing and installing sliding sunroof switch E8	175
2.33	Removing and installing front interior light/reading light	176
2.34	Removing and installing rear interior light/reading light	177
2.35	Removing and installing front reading light button E633/E634	181
2.36	Removing and installing operating unit for driving mode selection E881	181
2.37	Removing and installing button 1 for roof roller blind E584	182
3	Anti-theft alarm	183
3.1	Assembly overview – interior monitor	183
3.2	Removing and installing alarm horn H12	183
3.3	Removing and installing anti-theft alarm sensor G578	185
4	Immobiliser	186
4.1	Removing and installing immobiliser control unit	186
4.2	Removing and installing immobiliser reader coil	186
5	Towing bracket	188
5.1	Assembly overview - socket, trailer detector control unit	188
5.2	Trailer socket	188
5.3	Removing and installing trailer detector control unit J345	189
6	Cigarette lighter, socket	190
6.1	Removing and installing cigarette lighter U1	190
6.2	Removing and installing socket illumination bulb L42	190
6.3	Removing and installing rear cigarette lighter illumination bulb L32	190
6.4	Removing and installing electric socket U	190
97 - Wiring		191
1	Relay carriers, fuse holders, electronics boxes	191
1.1	Overview of fitting locations - relay carriers, fuse holders, electronics boxes	191
1.2	Removing and installing electronics box	193
1.3	Removing and installing relay and fuse holder in electronics box	195
1.4	Removing and installing relay and fuse holder behind dash panel on driver side	198
2	Control units	201
2.1	Overview of fitting locations - control units	201
2.2	Removing and installing onboard supply control unit J519	202
2.3	Removing and installing data bus diagnostic interface J533	207
2.4	Removing and installing bracket for onboard supply control unit J519	209
2.5	Removing and installing parking aid control unit J446/park assist steering control unit J791	211



3	Connectors	213
3.1	Repairing electrical wiring harnesses and plug-in connections	213
4	Releasing and dismantling connector housings	214
5	Repairing aerial wires	215
6	Fibre optic cables	216