



Contents

1	Engine list	1
2	Service work	4
2.1	Information about flexible or fixed service	4
2.2	Service tables T-Roc (A11*) up to model year ▶2020	7
2.3	Service tables T-Roc Cabriolet as of model year 2020▶, T-Roc as of model year 2021▶	15
3	General information	24
3.1	Raising vehicle with lifting platform or trolley jack	24
3.2	Entries in service schedule	26
3.3	Severe operating conditions	26
3.4	Vehicle data sticker	26
3.5	Connecting vehicle diagnostic tester	28
3.6	Vehicle identification number	29
3.7	Countries with hot climate	30
3.8	Country overview for diesel not compliant with EN 590/EN 15940	31
3.9	Country overview for petrol not compliant with EN 228	32
3.10	Engine code and engine number	33
3.11	Countries with high levels of dust	33
3.12	Identification plate	34
3.13	Shortened intervals for spark plug replacement	35
4	Descriptions of work	40
4.1	Removable towing bracket: checking and cleaning if necessary	42
4.2	Swivel joints and suspension link mountings: inspecting	43
4.3	All-wheel drive coupling: changing oil	45
4.4	Automatic headlight control and static cornering light: checking function	49
4.5	Automatic gearbox 09S: changing ATF	50
4.6	Battery (12V): checking battery terminal clamps for secure seating	50
4.7	Battery (12V): checking with battery tester (always refer to workshop manual)	52
4.8	Status of battery (12V): reading - sending diagnosis protocol via online connection	52
4.9	Front passenger front airbag: checking key switch and "ON/OFF function"	52
4.10	Tyres: checking condition, wear pattern, tyre pressure and tread depth	54
4.11	Brake and clutch system: changing brake fluid	65
4.12	Brake system and shock absorbers: inspecting for leaks and damage	71
4.13	Brake fluid level: checking	71
4.14	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	73
4.15	Diesel fuel filter: draining	76
4.16	Diesel fuel filter: renewing	76
4.17	Diesel particulate filter: checking	78
4.18	Dual clutch gearbox 0GC: changing gear oil	78
4.19	Electric windows: checking positioning (open and close functions)	79
4.20	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	79
4.21	Boots: inspecting	80
4.22	Interior and exterior body: inspecting for corrosion with doors and flaps open	80
4.23	Poly V-belt: renewing	81
4.24	Poly V-belt: checking condition	81
4.25	Cooling system: checking frost protection and coolant level	83
4.26	Air filter: cleaning housing and renewing filter element	85
4.27	Multi-purpose additive for diesel fuel: adding	96
4.28	Multi-purpose additive for petrol fuel: adding	98
4.29	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	100
4.30	Engine cover panel "top": removing and installing	100
4.31	Motor compartment cover (noise insulation) "bottom": removing and installing	104
4.32	Engine oil level: checking	104



4.33	Engine oil: draining, renewing oil filter and filling engine oil	105
4.34	Engine oil: capacities and specifications up to model year ►2020	116
4.35	Engine oil: capacities and specifications as of model year 2021►	117
4.36	Panorama sliding roof with rear panorama roof	118
4.37	Road test: performing (driving behaviour, noises, air conditioner etc.)	121
4.38	Wheel securing bolts: tightening to specified torque	121
4.39	Reducing agent (AdBlue®/DEF): replenishing	123
4.40	Reducing agent (AdBlue®/DEF): changing	127
4.41	Tyre Pressure Loss Indicator: calibrating	127
4.42	Tyre repair set: checking	128
4.43	Window wash/wipe system and headlight washer system: checking function	129
4.44	Headlight adjustment: checking halogen headlights	133
4.45	Headlight adjustment: checking LED headlights (T-Roc and T-Roc Cabriolet)	136
4.46	Headlight adjustment: checking LED headlights (Eco) (T-Roc and T-Roc Cabriolet PA)	138
4.47	Headlight adjustment: checking LED matrix beam headlights (T-Roc PA and T-Roc Cabriolet PA)	140
4.48	Headlight adjustment: checking fog lights	146
4.49	Sliding sunroof drains at front: check for blockage, clean if necessary	148
4.50	Service interval display: resetting	149
4.51	Service interval display: recoding	150
4.52	Track rods: checking clearance, attachment and boots	151
4.53	Interior filter: cleaning housing and renewing filter element	152
4.54	Transportation mode: switching off	156
4.55	Transportation devices: removing blocking pieces	156
4.56	Clock and date: setting	158
4.57	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	158
4.58	Convertible top: cleaning and lubricating locking element	159
4.59	Convertible top: perform water test.	159
4.60	Water drain valves at rear: check for blockage, clean if necessary	161
4.61	Toothed belt (petrol engines): renewing	162
4.62	Camshaft drive toothed belt (diesel engines): renewing	162
4.63	Spark plugs: renewing	162
5	Exhaust emissions test	181
5.1	Exhaust emissions test for petrol engines	181
5.2	Exhaust emissions test for diesel engines	183
6	00 Periodic Technical Inspection (PTI)	186
7	Glossary	190
8	---Change history---	193