



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
2 Identification	2
2.1 Allocation of PR number - brakes	2
3 Technical data	4
3.1 Technical data for brakes	4
4 Brake test	8
4.1 General information	8
4.2 Checking vehicles with front-wheel drive	8
4.3 Checking vehicles with all-wheel drive	8
4.4 Checking parking brake	9
45 - Anti-lock brake system	11
1 General information	11
1.1 Repair instructions for repair work on ABS	11
2 Overview of fitting locations	14
2.1 Overview of fitting locations - ABS/ESP	14
3 Control unit and hydraulic unit	16
3.1 Assembly overview - control unit and hydraulic unit	16
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	20
3.3 Separating control unit from hydraulic unit	38
3.4 Fitting control unit to hydraulic unit	39
3.5 Connecting brake lines to hydraulic unit	40
4 Sensors	42
4.1 Assembly overview - speed sensor on front axle	42
4.2 Assembly overview - speed sensor on rear axle	43
4.3 Removing and installing speed sensors on front axle G45 / G47	44
4.4 Removing and installing speed sensors on rear axle G44 / G46	45
4.5 Checking ABS sensor ring	46
4.6 Removing and installing ESP sensor unit G419	47
46 - Brakes - mechanism	48
1 Front brake	48
1.1 Assembly overview - front brake	48
1.2 Removing and installing brake pads	51
1.3 Removing and installing brake caliper	54
2 Rear brake	57
2.1 Assembly overview - rear brakes	57
2.2 Removing and installing brake pads	59
2.3 Removing and installing brake caliper	64
3 Parking brake	69
3.1 Overview of fitting locations - parking brake	69
3.2 Removing and installing control unit for electromechanical parking brake J540	70
3.3 Removing and installing parking brake motor V282 / V283	70
4 Brake pedal	73
4.1 Assembly overview - brake pedal	73
4.2 Removing and installing mounting bracket	76
4.3 Separating brake pedal from brake servo	80
4.4 Connecting brake pedal to brake servo	81
4.5 Removing and installing brake pedal	81



47 - Brakes - hydraulics	83
1 Front brake caliper	83
1.1 Assembly overview – front brake caliper	83
1.2 Removing and installing brake caliper piston	84
2 Rear brake caliper	87
2.1 Assembly overview – rear brake caliper	87
2.2 Removing and installing protective cap	87
3 Brake servo and brake master cylinder	91
3.1 Assembly overview - brake servo/brake master cylinder	91
3.2 Removing and installing brake light switch	96
3.3 Removing and installing brake servo	99
3.4 Removing and installing brake master cylinder	113
4 Vacuum system	123
4.1 Assembly overview - vacuum pump	123
4.2 Checking non-return valve	127
4.3 Removing and installing vacuum sender G608	128
4.4 Checking vacuum system	128
4.5 Removing and installing electric vacuum pump	132
5 Brake lines	135
5.1 Repairing brake lines	135
6 Hydraulic system	139
6.1 General notes on brake fluid	139
6.2 Bleeding hydraulic system following standard procedure	139
6.3 Subsequent bleeding of hydraulic system	140
6.4 Testing for leaks	141