



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
1 <b>Electrical components</b> .....	1
1.1   Access to diagnoses .....	1
<b>91 - Communication</b> .....	<b>2</b>
1 <b>Safety information and repair notes</b> .....	2
1.1   Safety information .....	2
1.2   Repair instructions .....	2
2 <b>Fitting locations</b> .....	3
2.1   Overview of fitting locations – components/control units in middle section of vehicle .....	3
2.2   Overview of fitting locations – components/control units in rear section of vehicle .....	5
3 <b>Components/control units</b> .....	7
3.1   Removing and installing control unit for front display and information control panel [J685] .....	7
3.2   Removing and installing control unit 1 for information electronics [J794] .....	8
3.3   Removing and installing bass loudspeaker .....	8
3.4   Removing and installing front treble loudspeakers -R20-/R22- .....	10
3.5   Removing and installing subwoofer [R211] .....	10
3.6   Removing and installing digital sound package control unit [J525] .....	10
3.7   Removing and installing storage compartment with interface for mobile telephone [R265] .....	12
3.8   Removing and installing frequency filter .....	13
3.9   Removing and installing frequency modulation (FM) frequency filter in positive wire [R179] .....	14
3.10   Removing and installing radio aerial 2 [R93] .....	14
3.11   Removing and installing LTE aerial .....	15
3.12   Removing and installing GPS aerial [R50] .....	16
3.13   Removing and installing data transmission aerial .....	16
3.14   Removing and installing transmission and reception stabilisation control unit [R308] .....	17
3.15   Removing and installing telephone microphone [R38] .....	17
3.16   Removing and installing multifunction buttons in steering wheel [E441]/[E440] .....	18
3.17   Removing and installing Tiptronic switch in steering wheel [E439]/[E438] .....	20
3.18   Removing and installing emergency call module control unit and communication unit [J949] .....	21
3.19   Removing and installing loudspeaker for emergency call module [R335] .....	22
3.20   Removing and installing emergency battery, telematics [A16] .....	22
3.21   Removing and installing USB connection 1 [U41] .....	23
3.22   Removing and installing USB charging socket 1 [U37] .....	24
4 <b>Multifunction steering wheel</b> .....	26
4.1   Assembly overview – multifunction steering wheel .....	26