



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with start/stop system	2
1.2 Safety precautions when using testing and measuring instruments during a road test	3
1.3 Safety measures when working with pyrotechnic components	3
1.4 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	5
1.5 Additional safety regulations for side airbag	5
1.6 Safety regulations for crash sensors (pressure sensors) for front side airbags	6
1.7 Additional safety instructions for repair work on seat occupied recognition for front passenger airbag deactivation - country-specific	6
1.8 Measures for seat occupied recognition for front passenger airbag deactivation following an accident - country-specific	7
1.9 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	7
1.10 Checking airbag securing parts after an accident	8
1.11 Accident without airbag triggering	9
1.12 Checking seat belts	9
1.13 Check belt webbing	9
1.14 Checking inertia reel (locking mechanism)	10
1.15 Visually checking belt buckle	11
1.16 Check operation of belt buckle	11
1.17 Checking belt relays, and buckle tongues	12
1.18 Checking securing parts and anchorage points after an accident	12
1.19 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	12
1.20 Checking child seat anchors after an accident	13
1.21 Roll-over bar	13
<b>2 Repair notes</b>	<b>14</b>
2.1 Contact corrosion	14
2.2 Routing and attachment of lines	14
<b>68 - Interior equipment</b>	<b>15</b>
<b>1 Compartments/covers</b>	<b>15</b>
1.1 Overview of fitting locations – compartments/covers	15
1.2 Assembly overview – dash panel cover on driver side	16
1.3 Assembly overview - steering column trim	17
1.4 Assembly overview – glove compartment	18
1.5 Removing and installing dash panel cover on driver side	19
1.6 Removing and installing upper steering column trim	20
1.7 Removing and installing lower steering column trim	23
1.8 Removing and installing glove compartment opener	24
1.9 Removing and installing lock cylinder for glove box opening mechanism	26
1.10 Removing and installing glove compartment	27
1.11 Service position for glove compartment cover	29
1.12 Removing and installing restrictor for glove compartment cover	30
1.13 Removing and installing footwell cover on front passenger side	30
<b>2 Equipment</b>	<b>32</b>
2.1 Assembly overview – sun visors	32
2.2 Removing and installing sun visor	32
2.3 Removing and installing sun visor centre mount	33
<b>3 Centre console</b>	<b>35</b>
3.1 Assembly overview – centre console	35
3.2 Removing and installing rear centre console trim	39



3.3	Removing and installing centre console cover	40
3.4	Removing and installing centre console insert	41
3.5	Removing and installing centre console front storage compartment	42
3.6	Removing and installing centre console	43
3.7	Removing and installing centre console bracket	45
<b>4</b>	<b>Front centre armrest</b>	<b>48</b>
4.1	Assembly overview – front centre armrest	48
4.2	Removing and installing front centre armrest	48
<b>5</b>	<b>Interior mirror</b>	<b>50</b>
5.1	Assembly overview – interior mirror	50
5.2	Removing and installing interior mirror	50
<b>69</b>	<b>Passenger protection</b>	<b>54</b>
<b>1</b>	<b>Seat belts</b>	<b>54</b>
1.1	Overview of fitting locations – seat belts and anchorage points	54
1.2	Assembly overview – front three-point seat belt	56
1.3	Assembly overview – rear outer three-point seat belt	58
1.4	Assembly overview – front belt buckle	59
1.5	Assembly overview – rear belt buckle	60
1.6	Removing and installing front three-point seat belt	61
1.7	Removing and installing rear three-point seat belt	65
1.8	Removing and installing front belt guide	67
1.9	Removing and installing rear belt guide	67
1.10	Removing and installing front belt end fitting	68
1.11	Removing and installing rear outer belt end fitting	69
1.12	Removing and installing front belt buckle	70
1.13	Removing and installing rear belt buckle	71
<b>2</b>	<b>Child seat anchors</b>	<b>73</b>
2.1	Assembly overview – front child seat anchors	73
2.2	Assembly overview – rear child seat anchors	73
2.3	Removing and installing front child seat anchors	74
2.4	Removing and installing rear child seat anchors	76
<b>3</b>	<b>Airbag system</b>	<b>78</b>
3.1	Overview of fitting locations – airbag system	78
<b>4</b>	<b>Airbag control unit</b>	<b>81</b>
4.1	Assembly overview – airbag control unit	81
4.2	Removing and installing airbag control unit J234	81
<b>5</b>	<b>Front airbag</b>	<b>84</b>
5.1	Assembly overview – front airbag, driver side	84
5.2	Removing and installing airbag unit with igniter	84
5.3	Renewing connector on airbag	92
<b>6</b>	<b>Front passenger airbag</b>	<b>94</b>
6.1	Assembly overview – front passenger airbag	94
6.2	Removing and installing front passenger airbag unit with igniter	95
6.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	97
<b>7</b>	<b>Side airbags</b>	<b>99</b>
7.1	Assembly overview – front side airbag	99
7.2	Removing and installing front side airbag with igniter	100
<b>8</b>	<b>Airbag crash sensors</b>	<b>102</b>
8.1	Overview of fitting locations – airbag crash sensors	102
8.2	Removing and installing crash sensor for front airbag G190	103
8.3	Removing and installing side airbag crash sensors on driver side G179/G180	105
8.4	Removing and installing rear side airbag crash sensor, driver side G256	108
<b>9</b>	<b>Seat belt verification</b>	<b>110</b>



9.1	Removing and installing Seat occupied sensor, front passenger side G128	110
<b>10</b>	<b>Roll-over bar</b>	<b>112</b>
10.1	Assembly overview - roll-over bar	112
10.2	Removing and installing roll-over bar	112
10.3	Retracting roll bar back from extended position	115
<b>70</b>	<b>Trim, insulation</b>	<b>116</b>
<b>1</b>	<b>Front door trims</b>	<b>116</b>
1.1	Assembly overview – front door trim	116
1.2	Assembly overview – mirror cover	118
1.3	Removing and installing front door trim	118
1.4	Removing and installing button trim	123
1.5	Removing and installing trim	124
1.6	Removing and installing mirror cover trim	126
<b>2</b>	<b>Dash panel</b>	<b>128</b>
2.1	Assembly overview - dash panel	128
2.2	Removing and installing dash panel end cover	131
2.3	Removing and installing dash panel trim	132
2.4	Removing and installing dash panel insert trim, 2020 ►	138
2.5	Removing and installing dash panel insert retaining frame	138
2.6	Removing and installing dash panel	141
2.7	Removing and installing radio/navigation system mounting frame, 2022 ►	158
2.8	Removing and installing outer dash panel vents	159
2.9	Removing and installing side defroster vent	162
2.10	Removing and installing centre vent, 2022 ►	163
<b>3</b>	<b>Central tube for dash panel</b>	<b>165</b>
3.1	Assembly overview – central tube for dash panel	165
3.2	Removing and installing crash bar	165
3.3	Removing and installing dash panel cross member	166
<b>4</b>	<b>Interior trims</b>	<b>173</b>
4.1	Overview of fitting locations – interior trims	173
4.2	Assembly overview – sill panel moulding	174
4.3	Assembly overview - A-pillar trim	175
4.4	Assembly overview – windscreen frame trim	177
4.5	Assembly overview - side trim	178
4.6	Assembly overview – back panel upper trim	179
4.7	Assembly overview – back panel front trim	180
4.8	Assembly overview – foot rest and floor covering	181
4.9	Removing and installing sill panel moulding	183
4.10	Removing and installing A-pillar trim	185
4.11	Removing and installing windscreen frame trim	189
4.12	Removing and installing upper roof cross member trim	190
4.13	Removing and installing side trim	192
4.14	Removing and installing back panel upper trim	194
4.15	Removing and installing back panel front trim	195
4.16	Removing and installing foot rest	196
4.17	Removing and installing floor covering	197
<b>5</b>	<b>Luggage compartment trims</b>	<b>199</b>
5.1	Overview of fitting locations – luggage compartment trims	199
5.2	Assembly overview - lower rear lid trim	200
5.3	Assembly overview – luggage compartment side trim	200
5.4	Assembly overview - luggage compartment floor	201
5.5	Removing and installing lower rear lid trim	202
5.6	Removing and installing lock carrier trim	204
5.7	Removing and installing luggage compartment side trim	205



5.8	Removing and installing luggage compartment front trim	206
5.9	Removing and installing back panel side trim	207
5.10	Removing and installing rear luggage compartment floor handle	208
5.11	Removing and installing rear lid lock	209
5.12	Removing and installing lining for spare wheel well	210
<b>6</b>	<b>Convertible roof compartment</b>	<b>211</b>
6.1	Assembly overview – convertible roof compartment	211
6.2	Removing and installing centre convertible roof compartment	211
6.3	Removing and installing front convertible roof compartment trim	213
6.4	Repairing convertible roof compartment	214
<b>72</b>	<b>Seat frames</b>	<b>220</b>
<b>1</b>	<b>Overview of seat variants</b>	<b>220</b>
1.1	Overview of fitting locations – seat variants	220
1.2	Securing front seat to seat repair stand	220
<b>2</b>	<b>Front seats</b>	<b>222</b>
2.1	Assembly overview – front seat	222
2.2	Assembly overview – front backrest	224
2.3	Assembly overview - backrest release mechanism and entry assistance	225
2.4	Assembly overview – seat pan	226
2.5	Assembly overview – seat height adjustment	228
2.6	Removing and installing front seat	228
2.7	Connecting and disconnecting airbag adapter	233
2.8	Removing and installing seat trim	234
2.9	Removing and installing bracket for seat trim	236
2.10	Removing and installing seat height adjuster	237
2.11	Removing and installing seat longitudinal adjustment handle	238
2.12	Removing and installing backrest adjuster	239
2.13	Removing and installing front backrest	240
2.14	Removing and installing lumbar support adjustment motor VX2	242
2.15	Removing and installing trim for backrest release mechanism	244
2.16	Removing and installing backrest release mechanism	246
2.17	Removing and installing slider	254
2.18	Removing and installing head restraint	255
2.19	Removing and installing head restraint guide	257
2.20	Removing and installing lumbar support adjustment switch E176/E177	258
2.21	Removing and installing service wallet holder	258
<b>3</b>	<b>Rear seats</b>	<b>259</b>
3.1	Assembly overview – bench seat/individual seats	259
3.2	Assembly overview – rear seat backrest	259
3.3	Assembly overview – head restraint and head restraint guide	261
3.4	Assembly overview – locking mechanism	261
3.5	Removing and installing bench seat/individual seats	262
3.6	Removing and installing rear seat backrest	264
3.7	Removing and installing locking mechanism for rear seat backrest	267
3.8	Removing and installing head restraint	270
3.9	Removing and installing head restraint guide	271
<b>74</b>	<b>Seat - padding, covers</b>	<b>272</b>
<b>1</b>	<b>Front seat covers and padding</b>	<b>272</b>
1.1	Assembly overview – seat pan cover and padding	272
1.2	Assembly overview – backrest cover and padding	273
1.3	Assembly overview – seat heating element	274
1.4	Assembly overview – backrest heating element	275
1.5	Removing and installing cover and padding in area of seat pan	276



---

1.6	Separating cover and padding in area of seat pan	278
1.7	Removing and installing backrest cover and backrest padding	280
1.8	Separating cover and padding on backrest	282
1.9	Removing and installing seat heating element ZX11/ZX13	284
1.10	Removing and installing backrest heating element Z116/Z117	285
<b>2</b>	<b>Rear seat covers and padding</b>	<b>287</b>
2.1	Assembly overview - cover and padding for bench seat	287
2.2	Assembly overview – cover and padding	287
2.3	Removing and installing bench seat cover and padding	288
2.4	Removing and installing cover and padding, rear seat backrest	289
2.5	Separating cover and padding	290
2.6	Separating cover and padding, rear seat backrest	291