



## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b>   | <b>1</b>  |
| <b>1 Safety information</b>  | <b>1</b>  |
| 1.1 Safety measures when working on vehicles with start/stop system                    | 1         |
| 1.2 Safety precautions when using testers and measuring instruments during a road test | 1         |
| 1.3 Safety precautions when working on the cooling system                              | 1         |
| <b>2 Repair notes</b>  | <b>2</b>  |
| 2.1 Routing and attachment of lines  | 2         |
| 2.2 Contact corrosion  | 2         |
| 2.3 Bonding surfaces for self-adhesive components                                      | 2         |
| 2.4 Secured threaded connections   | 2         |
| <b>50 - Body - front</b>   | <b>3</b>  |
| <b>1 Lock carrier</b>  | <b>3</b>  |
| 1.1 Assembly overview – lock carrier   | 3         |
| 1.2 Removing and installing lock carrier   | 4         |
| 1.3 Moving to and back from service position   | 6         |
| <b>2 Wings</b>   | <b>11</b> |
| 2.1 Assembly overview - wing   | 11        |
| 2.2 Removing and installing wing   | 11        |
| <b>3 Plenum chamber bulkhead</b>   | <b>17</b> |
| 3.1 Assembly overview - plenum chamber bulkhead  | 17        |
| 3.2 Assembly overview - plenum chamber cover   | 17        |
| 3.3 Removing and installing bulkhead   | 18        |
| 3.4 Removing and installing plenum chamber cover                                       | 20        |
| <b>53 - Body - rear</b>  | <b>27</b> |
| <b>1 Installation parts in side panel</b>  | <b>27</b> |
| 1.1 Assembly overview - window regulator   | 27        |
| 1.2 Assembly overview - window channels and window slot (aperture) seals               | 27        |
| 1.3 Removing and installing window regulator motor                                     | 28        |
| 1.4 Removing and installing window regulator   | 30        |
| 1.5 Removing and installing inner cover  | 33        |
| 1.6 Removing and installing window slot outer seal                                     | 35        |
| 1.7 Removing and installing window slot inner seal                                     | 37        |
| <b>55 - Bonnet, rear lid</b>   | <b>40</b> |
| <b>1 Bonnet</b>  | <b>40</b> |
| 1.1 Assembly overview - bonnet   | 40        |
| 1.2 Assembly overview - Bowden cable   | 41        |
| 1.3 Removing and installing bonnet   | 42        |
| 1.4 Adjusting bonnet   | 44        |
| 1.5 Removing and installing rear lid lock  | 51        |
| 1.6 Removing and installing bonnet release lever                                       | 58        |
| 1.7 Removing and installing striker pin  | 61        |
| 1.8 Removing and installing hinges   | 63        |
| 1.9 Removing and installing insulation   | 65        |
| 1.10 Removing and installing support rod   | 67        |
| 1.11 Removing and installing Bowden cable  | 69        |
| <b>2 Tailgate</b>  | <b>77</b> |
| 2.1 Assembly overview - rear lid   | 77        |
| 2.2 Removing and installing rear lid   | 78        |
| 2.3 Adjusting rear lid   | 80        |



|           |  |            |
|-----------|--|------------|
| 2.4       | Removing and installing rear lid lock  | 85         |
| 2.5       | Removing and installing operating mechanism  | 87         |
| 2.6       | Removing and installing hinges   | 92         |
| 2.7       | Removing and installing striker pin  | 94         |
| 2.8       | Removing and installing rear lid seal  | 95         |
| 2.9       | Removing and installing gas strut  | 96         |
| 2.10      | Releasing gas from gas strut   | 97         |
| <b>3</b>  | <b>Tank flap unit</b>  | <b>99</b>  |
| 3.1       | Assembly overview - tank flap unit   | 99         |
| 3.2       | Removing and installing tank flap unit   | 99         |
| 3.3       | Removing and installing fuel tank flap   | 103        |
| <b>57</b> | <b>Front doors, door components, central locking</b>   | <b>105</b> |
| <b>1</b>  | <b>Door</b>  | <b>105</b> |
| 1.1       | Assembly overview - door   | 105        |
| 1.2       | Removing and installing inner door seal  | 108        |
| 1.3       | Removing and installing outer door seal  | 110        |
| 1.4       | Removing and installing door   | 111        |
| 1.5       | Adjusting door   | 114        |
| 1.6       | Adjusting striker pin  | 117        |
| 1.7       | Removing and installing door arrester  | 119        |
| <b>2</b>  | <b>Door components</b>   | <b>122</b> |
| 2.1       | Assembly overview - door components  | 122        |
| 2.2       | Assembly overview - window regulator   | 124        |
| 2.3       | Assembly overview - door handle and door lock  | 124        |
| 2.4       | Removing and installing window regulator motor   | 126        |
| 2.5       | Removing and installing window regulator   | 128        |
| 2.6       | Removing and installing inner door cover   | 131        |
| 2.7       | Removing and installing striker pin  | 133        |
| 2.8       | Removing and installing cap on door handle   | 135        |
| 2.9       | Removing and installing lock cylinder  | 141        |
| 2.10      | Removing and installing door handle  | 144        |
| 2.11      | Removing and installing mounting bracket   | 148        |
| 2.12      | Removing and installing door lock  | 150        |
| 2.13      | Removing and installing window channel   | 155        |
| 2.14      | Removing and installing window slot outer seal   | 156        |
| 2.15      | Removing and installing window slot inner seal   | 158        |
| <b>3</b>  | <b>Central locking</b>   | <b>160</b> |
| 3.1       | Overview of fitting locations - central locking  | 160        |
| 3.2       | Removing and installing driver door control unit J386 and front passenger door control unit J387 | 162        |
| 3.3       | Removing and installing tank filler flap locking motor V155                                      | 163        |
| 3.4       | Removing and installing ignition key battery   | 164        |
| <b>61</b> | <b>Convertible roof, hardtop, canopy</b>   | <b>165</b> |
| <b>1</b>  | <b>Convertible top</b>   | <b>165</b> |
| 1.1       | Assembly overview - convertible top  | 165        |
| 1.2       | Component designation - convertible roof frame   | 166        |
| 1.3       | Assembly overview - convertible top latch  | 167        |
| 1.4       | Removing and installing convertible top  | 168        |
| 1.5       | Adjusting top  | 175        |
| 1.6       | Removing and installing convertible top latch  | 175        |
| 1.7       | Removing and installing stop for locking bracket   | 177        |
| 1.8       | Removing and installing locking mechanism  | 178        |
| 1.9       | Removing and installing striker pin  | 179        |
| 1.10      | Removing and installing convertible roof rest  | 180        |



|           |   |            |
|-----------|---|------------|
| 1.11      | Removing and installing convertible roof rest stop buffer   | 181        |
| <b>2</b>  | <b>Convertible roof cover</b>   | <b>183</b> |
| 2.1       | Assembly overview - convertible roof cover  | 183        |
| 2.2       | Removing and installing convertible top cover   | 183        |
| 2.3       | Removing and installing convertible roof headliner  | 207        |
| 2.4       | Removing and installing tensioning bar  | 217        |
| 2.5       | Removing and installing tensioning belt with bracket  | 219        |
| 2.6       | Adjusting tensioning belt   | 220        |
| 2.7       | Repairing tensioning cords  | 221        |
| <b>3</b>  | <b>Attachments</b>  | <b>223</b> |
| 3.1       | Assembly overview - convertible roof seals  | 223        |
| 3.2       | Assembly overview - convertible roof trim   | 225        |
| 3.3       | Assembly overview - windscreen frame seal   | 225        |
| 3.4       | Assembly overview - water drain   | 226        |
| 3.5       | Removing and installing convertible roof seals  | 227        |
| 3.6       | Removing and installing windscreen frame seal   | 229        |
| 3.7       | Removing and installing convertible roof trim   | 231        |
| 3.8       | Removing and installing front bow trim  | 232        |
| 3.9       | Removing and installing retaining strips  | 234        |
| 3.10      | Removing and installing splash guard  | 236        |
| 3.11      | Removing and installing water drip tray   | 237        |
| <b>4</b>  | <b>Hydraulic system</b>   | <b>240</b> |
| 4.1       | Assembly overview - hydraulic system  | 240        |
| 4.2       | Assembly overview - hydraulic pump  | 240        |
| 4.3       | Safety information  | 241        |
| 4.4       | Rules for cleanliness   | 241        |
| 4.5       | Filling and bleeding the hydraulic system   | 242        |
| 4.6       | Removing and installing the hydraulic cylinder  | 244        |
| 4.7       | Removing and installing hydraulic pump  | 247        |
| 4.8       | Removing and installing pump motor  | 251        |
| 4.9       | Removing and installing oil reservoir   | 252        |
| <b>5</b>  | <b>Electrical and electronic components</b>   | <b>255</b> |
| 5.1       | Overview of fitting locations - electrical and electronic components  | 255        |
| 5.2       | Removing and installing convertible roof stowed switch F171 and convertible roof front switch F202            | 256        |
| 5.3       | Removing and installing left and right latch switches for convertible roof F169 / F170                        | 257        |
| 5.4       | Removing and installing convertible roof latch open switch F294 and convertible roof latch closed switch F295 | 258        |
| 5.5       | Removing and installing convertible roof actuation control unit J256  | 259        |
| <b>63</b> | <b>Bumpers</b>  | <b>261</b> |
| <b>1</b>  | <b>Bumper, front</b>  | <b>261</b> |
| 1.1       | Assembly overview - bumper cover  | 261        |
| 1.2       | Assembly overview - impact bar  | 265        |
| 1.3       | Removing and installing bumper cover  | 267        |
| 1.4       | Removing and installing add-on parts, R-Line  | 270        |
| 1.5       | Repairing bumper cover  | 279        |
| <b>2</b>  | <b>Bumper, rear</b>   | <b>289</b> |
| 2.1       | Assembly overview - bumper cover  | 289        |
| 2.2       | Assembly overview - impact bar  | 292        |
| 2.3       | Removing and installing bumper cover  | 293        |
| 2.4       | Removing and installing impact bar  | 296        |
| 2.5       | Removing and installing add-on parts, R-Line  | 298        |
| 2.6       | Repairing bumper cover  | 303        |
| <b>64</b> | <b>Glazing</b>  | <b>312</b> |



|           |  |            |
|-----------|--|------------|
| <b>1</b>  | <b>Repair notes</b>                                    | <b>312</b> |
| 1.1       | Minimum curing periods for bonded windows              | 312        |
| 1.2       | Window repair  | 312        |
| 1.3       | Installation instructions for bonded windows           | 313        |
| 1.4       | Preparing old undamaged windows for fitting            | 314        |
| 1.5       | Preparing new windows for installing                   | 315        |
| 1.6       | Preparing body flange for fitting                      | 317        |
| 1.7       | Cleaning off excess adhesive                           | 318        |
| <b>2</b>  | <b>Windscreen</b>                                      | <b>319</b> |
| 2.1       | Assembly overview - windscreen                         | 319        |
| 2.2       | Removing and installing windscreen                     | 320        |
| <b>3</b>  | <b>Side window</b>                                     | <b>328</b> |
| 3.1       | Assembly overview - rear side windows                  | 328        |
| 3.2       | Removing and installing rear side window               | 329        |
| 3.3       | Adjusting side window                                  | 334        |
| 3.4       | Removing and installing seal                           | 338        |
| <b>4</b>  | <b>Door windows</b>                                    | <b>340</b> |
| 4.1       | Assembly overview - front door window                  | 340        |
| 4.2       | Removing and installing front door window              | 340        |
| 4.3       | Adjusting front door window                            | 344        |
| <b>66</b> | <b>Exterior equipment</b>                              | <b>349</b> |
| <b>1</b>  | <b>Radiator grille and front trim</b>                  | <b>349</b> |
| 1.1       | Assembly overview – radiator grille                    | 349        |
| 1.2       | Removing and installing radiator grille                | 349        |
| <b>2</b>  | <b>Spoiler</b>   | <b>352</b> |
| 2.1       | Assembly overview - spoiler                            | 352        |
| 2.2       | Removing and installing spoiler                        | 352        |
| <b>3</b>  | <b>Mouldings, trims, extensions</b>                    | <b>356</b> |
| 3.1       | Assembly overview - trim strips                        | 356        |
| 3.2       | Assembly overview - wheel arch covers                  | 356        |
| 3.3       | Assembly overview - wheel arch covers, R-Line          | 357        |
| 3.4       | Assembly overview - side member trim                   | 358        |
| 3.5       | Removing and installing cover                          | 359        |
| 3.6       | Removing and installing trim strip                     | 366        |
| 3.7       | Removing and installing entry moulding                 | 367        |
| 3.8       | Removing and installing wheel arch covers              | 370        |
| 3.9       | Removing and installing side member trim               | 379        |
| <b>4</b>  | <b>Noise insulation</b>                                | <b>382</b> |
| 4.1       | Assembly overview - noise insulation                   | 382        |
| <b>5</b>  | <b>Underbody cladding</b>                              | <b>384</b> |
| 5.1       | Overview of fitting locations - underbody cladding     | 384        |
| 5.2       | Assembly overview - bracing on underbody               | 385        |
| 5.3       | Removing and installing underbody cladding             | 387        |
| 5.4       | Removing and installing tunnel cross-piece             | 394        |
| <b>6</b>  | <b>Exterior mirror</b>                                 | <b>396</b> |
| 6.1       | Assembly overview - exterior mirror                    | 396        |
| 6.2       | Removing and installing exterior mirror                | 397        |
| 6.3       | Removing and installing mirror glass                   | 400        |
| 6.4       | Removing and installing mirror adjustment unit         | 402        |
| 6.5       | Removing and installing mirror cover                   | 404        |
| 6.6       | Removing and installing mirror frame                   | 406        |
| 6.7       | Removing and installing turn signal                    | 407        |
| 6.8       | Removing and installing entry light in exterior mirror | 409        |



|           |   |            |
|-----------|---|------------|
| <b>7</b>  | <b>Wheel housing liner</b> .....                        | <b>411</b> |
| 7.1       | Assembly overview - front wheel housing liner .....     | 411        |
| 7.2       | Assembly overview - rear wheel housing liner .....      | 412        |
| 7.3       | Removing and installing front wheel housing liner ..... | 412        |
| 7.4       | Removing and installing rear wheel housing liner .....  | 414        |
| <b>8</b>  | <b>Lettering and emblems</b> .....                      | <b>416</b> |
| 8.1       | Removing and installing bonded lettering .....          | 416        |
| 8.2       | Dimensions - lettering and badges .....                 | 417        |
| 8.3       | Removing and installing badges at front .....           | 419        |
| 8.4       | Renewing lettering and badges at rear .....             | 421        |
| <b>9</b>  | <b>Towing bracket</b> .....                             | <b>423</b> |
| 9.1       | Assembly overview - towing bracket .....                | 423        |
| 9.2       | Removing and installing towing bracket .....            | 423        |
| <b>10</b> | <b>Heat shields</b> .....                               | <b>426</b> |
| 10.1      | Overview of fitting locations - heat shields .....      | 426        |
| 10.2      | Removing and installing underbody heat shield .....     | 427        |