



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions for working on vehicles with auxiliary heater	1
1.2 Safety measures when working on vehicles with start/stop system	2
1.3 Safety precautions during work on fuel system	2
1.4 Safety precautions when working on cooling system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
<b>2 General information</b>	<b>4</b>
2.1 Starting conditions for auxiliary/supplementary heater	4
2.2 Notes for vehicles with a start/stop system	5
2.3 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	5
2.4 Type plates	5
<b>3 Repair notes</b>	<b>7</b>
3.1 General repair instructions	7
<b>82 - Supplementary heating</b>	<b>8</b>
<b>1 Overview of fitting locations - auxiliary/supplementary heater</b>	<b>8</b>
1.1 Overview of fitting locations - auxiliary/supplementary heater components	8
<b>2 Auxiliary/supplementary heater</b>	<b>10</b>
2.1 Overview of fitting locations - auxiliary/supplementary heater	10
2.2 Assembly overview - auxiliary/supplementary heater attachments	11
2.3 Assembly overview - auxiliary/supplementary heater, internal	12
2.4 Removing and installing auxiliary/supplementary heater	14
2.5 Dismantling and assembling auxiliary/supplementary heater	19
2.6 Removing and installing air intake silencer	20
2.7 Removing and installing circulation pump V55	21
2.8 Removing and installing exhaust system	24
2.9 Removing and installing auxiliary/supplementary heater bracket	25
2.10 Removing and installing covers for auxiliary heater control unit J364	25
2.11 Removing and installing glow plug with flame monitor Q8	27
2.12 Removing and installing temperature sensor G18 and overheating sensor G189	27
2.13 Connector pin assignment for auxiliary/supplementary heater	28
2.14 Dismantling and assembling burner unit	29
2.15 Removing and installing auxiliary heater control unit J364 with combustion air blower V6	30
<b>3 Coolant circuit with auxiliary/supplementary heater</b>	<b>31</b>
3.1 Connection diagram - coolant hoses	31
3.2 Bleeding coolant circuit of auxiliary/supplementary heater	33
3.3 Removing and installing coolant pipes for auxiliary/supplementary heater	34
<b>4 Fuel supply system</b>	<b>37</b>
4.1 Overview of fitting locations - fuel supply system	37
4.2 Checking fuel delivery rate	38
4.3 Removing and installing metering pump V54	38
4.4 Bleeding fuel line to metering pump V54 (filling with fuel)	41
<b>5 Regulation of auxiliary/supplementary heater</b>	<b>43</b>
<b>6 Other controlling and regulating components</b>	<b>44</b>
6.1 Removing and installing ambient temperature sensor G17	44
6.2 Removing and installing remote control receiver for auxiliary coolant heater R149	44