



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
<b>2 Identification</b>	<b>2</b>
2.1 Gearbox identification	2
<b>3 Technical data</b>	<b>4</b>
3.1 Allocation gearbox - engine	4
3.2 Capacities	4
<b>4 Overview - power transmission</b>	<b>5</b>
<b>5 Electrical components</b>	<b>7</b>
5.1 Overview of fitting locations - electrical components	7
<b>6 Repair instructions</b>	<b>9</b>
6.1 General repair instructions	9
<b>30 - Clutch</b>	<b>12</b>
<b>1 Pedal cluster</b>	<b>12</b>
1.1 Assembly overview - pedal cluster	12
1.2 Assembly overview - clutch hydraulics	14
1.3 Removing and installing bearing bush	18
1.4 Checking clutch master cylinder and clutch slave cylinder	19
1.5 Removing and installing clutch position sender G476	20
1.6 Removing and installing return spring	21
1.7 Removing and installing over-centre spring	24
1.8 Removing and installing clutch pedal	27
1.9 Removing and installing mounting bracket	29
1.10 Removing and installing clutch master cylinder	34
1.11 Removing and installing clutch slave cylinder	35
1.12 Removing and installing lines for clutch mechanism	37
1.13 Bleeding clutch mechanism	40
<b>2 Clutch</b>	<b>44</b>
<b>34 - Controls, housing</b>	<b>45</b>
<b>1 Selector mechanism</b>	<b>45</b>
1.1 Installation position - selector mechanism	45
1.2 Assembly overview – gear knob and cover	46
1.3 Assembly overview - selector mechanism	48
1.4 Removing and installing gear knob	50
1.5 Removing and installing selector mechanism	52
1.6 Repairing selector mechanism	61
1.7 Adjusting selector mechanism	66
1.8 Checking selector mechanism	70
<b>2 Removing and installing gearbox</b>	<b>71</b>
2.1 Removing gearbox	71
2.2 Installing gearbox	83
2.3 Specified torques for gearbox	86
<b>3 Assembly mountings</b>	<b>88</b>
3.1 Assembly overview - assembly mountings	88
<b>4 Transporting gearbox</b>	<b>91</b>
<b>5 Gear oil</b>	<b>93</b>
5.1 Checking gear oil level	93
5.2 Draining and filling gear oil	93



<b>6</b>	<b>Dismantling and assembling gearbox</b> .....	<b>97</b>
6.1	Assembly overview - selector unit .....	97
6.2	Removing and installing selector unit with gearbox installed .....	99
6.3	Repairing selector unit .....	102
6.4	Renewing selector shaft seal .....	103
<b>7</b>	<b>Gearbox housing, clutch housing</b> .....	<b>105</b>
<b>35 - Gears, shafts</b> .....		<b>106</b>
<b>1</b>	<b>Input shaft</b> .....	<b>106</b>
<b>2</b>	<b>Output shaft</b> .....	<b>107</b>
<b>39 - Final drive - differential</b> .....		<b>108</b>
<b>1</b>	<b>Oil seals</b> .....	<b>108</b>
1.1	Overview of fitting locations - seals .....	108
1.2	Renewing left seal .....	108
1.3	Renewing right oil seal .....	111
<b>2</b>	<b>Differential</b> .....	<b>115</b>