



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
<b>2 Identification</b>	<b>2</b>
<b>3 Repair instructions</b>	<b>3</b>
3.1 General repair instructions	3
<b>4 Technical data</b>	<b>7</b>
4.1 Allocation gearbox - engine	7
4.2 Capacities	7
<b>5 Overview - power transmission</b>	<b>8</b>
<b>6 Electrical components</b>	<b>10</b>
<b>30 - Clutch</b>	<b>11</b>
<b>1 Clutch mechanism</b>	<b>11</b>
1.1 Assembly overview - clutch release mechanism	11
1.2 Repairing clutch release mechanism	13
<b>2 Clutch</b>	<b>15</b>
2.1 Assembly overview - clutch	15
2.2 Removing and installing clutch	17
<b>34 - Controls, housing</b>	<b>33</b>
<b>1 Selector mechanism</b>	<b>33</b>
<b>2 Removing and installing gearbox</b>	<b>34</b>
<b>3 Transporting gearbox</b>	<b>35</b>
<b>4 Dismantling and assembling gearbox</b>	<b>37</b>
4.1 Schematic overview - gearbox	37
4.2 Dismantling and assembling gearbox; Assembly overview - gearbox	38
4.3 Assembly overview - 5th and 6th gear	39
4.4 Assembly overview - gearbox housing and selector mechanism	42
4.5 Dismantling and assembling gearbox; Assembly overview - input shaft, output shafts, differential, selector rods	44
4.6 Assembly overview - selector forks	46
4.7 Repairing selector forks	49
4.8 Removing 5th and 6th gears	54
4.9 Dismantling and assembling gearbox	60
4.10 Installing 5th/6th gear	80
<b>5 Gearbox housing, clutch housing</b>	<b>90</b>
5.1 Assembly overview - gearbox housing and clutch housing	90
5.2 Gearbox housing, clutch housing; Assembly overview - gearbox housing cover	93
5.3 Repairing gearbox housing	93
5.4 Repairing gearbox housing cover	100
<b>6 Securing to engine and gearbox support</b>	<b>103</b>
<b>7 Gear oil</b>	<b>108</b>
<b>35 - Gears, shafts</b>	<b>109</b>
<b>1 Input shaft</b>	<b>109</b>
1.1 Assembly overview - input shaft	109
1.2 Dismantling and assembling input shaft	111
1.3 Adjusting input shaft	117
1.4 Renewing input shaft seal	122
<b>2 Output shaft</b>	<b>124</b>
2.1 Assembly overview - output shaft	124



2.2	Dismantling and assembling output shaft .....	127
2.3	Adjusting output shaft .....	144
<b>3</b>	<b>Reverse shaft .....</b>	<b>150</b>
3.1	Assembly overview - reverse shaft .....	150
3.2	Dismantling and assembling reverse shaft .....	152
<b>39</b>	<b>- Final drive - differential .....</b>	<b>156</b>
<b>1</b>	<b>Oil seals .....</b>	<b>156</b>
1.1	Overview of fitting locations - seals .....	156
<b>2</b>	<b>Differential .....</b>	<b>157</b>
2.1	Assembly overview - differential .....	157
2.2	Dismantling and assembling differential .....	159
2.3	Adjusting differential .....	167
<b>3</b>	<b>Adjustment overview .....</b>	<b>172</b>