



Contents

00 - Technical data	1
1 Safety information	1
2 Identification	2
3 Repair instructions	3
3.1 General repair instructions	3
4 Technical data	4
4.1 Allocation gearbox - engine	4
4.2 Capacities	4
5 Overview - power transmission	5
6 Electrical components	6
6.1 Overview of fitting locations - electrical components	6
30 - Clutch	7
1 Clutch mechanism	7
1.1 Assembly overview - clutch release mechanism	7
1.2 Removing and installing clutch slave cylinder together with release bearing	7
1.3 Repairing clutch release mechanism	9
2 Clutch	10
2.1 Assembly overview - clutch	10
2.2 Removing and installing clutch	11
34 - Controls, housing	22
1 Selector mechanism	22
1.1 Renewing selector shaft seal	22
2 Removing and installing gearbox	24
3 Transporting gearbox	25
4 Dismantling and assembling gearbox	27
4.1 Assembly overview - gearbox	27
4.2 Assembly overview - selector unit	29
4.3 Removing and installing selector unit	30
4.4 Dismantling and assembling gearbox	32
5 Gearbox housing, clutch housing	55
5.1 Assembly overview - gearbox housing	55
5.2 Assembly overview - clutch housing	58
5.3 Repairing gearbox housing	60
5.4 Repairing clutch housing	68
6 Securing to engine and gearbox support	75
7 Gear oil	76
35 - Gears, shafts	77
1 Input shaft	77
1.1 Assembly overview - input shaft	77
1.2 Dismantling and assembling input shaft	80
1.3 Renewing input shaft seal	96
2 Output shaft	98
2.1 Assembly overview - output shaft	98
2.2 Dismantling and assembling output shaft	99
3 Reverse shaft	110
3.1 Assembly overview - reverse shaft	110
3.2 Dismantling and assembling reverse shaft	110



3.3	Adjusting reverse shaft	112
39	- Final drive - differential	117
1	Oil seals	117
1.1	Overview of fitting locations - oil seals	117
1.2	Renewing left seal	117
1.3	Renewing right seal	120
2	Differential	124
2.1	Adjusting differential	124
3	Adjustment overview	130