



Contents

| | |
|--|------------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety regulations for working on fuel supply | 1 |
| 1.2 Safety measures when working on vehicles with a start/stop system | 1 |
| 1.3 Safety precautions when using testers and measuring instruments during a road test | 2 |
| 1.4 Safety precautions when working on the cooling system | 2 |
| 1.5 Safety precautions when working on ignition system | 2 |
| 2 Identification | 3 |
| 2.1 Engine number/engine data | 3 |
| 3 Repair instructions | 7 |
| 3.1 Rules for cleanliness | 7 |
| 3.2 General information | 7 |
| 3.3 General repair instructions | 8 |
| 3.4 Foreign objects in engine | 8 |
| 3.5 Contact corrosion | 8 |
| 3.6 Routing and attachment of lines | 8 |
| 3.7 Fitting radiator and condensers | 8 |
| 3.8 Checking vacuum system | 8 |
| 10 - Removing and installing engine | 10 |
| 1 Removing and installing engine | 10 |
| 1.1 Removing engine | 10 |
| 1.2 Separating engine and gearbox | 20 |
| 1.3 Securing engine on engine and gearbox support | 23 |
| 1.4 Installing engine | 24 |
| 2 Assembly mountings | 29 |
| 2.1 Assembly overview – assembly mountings | 29 |
| 2.2 Removing and installing engine mounting | 41 |
| 2.3 Removing and installing gearbox mounting | 42 |
| 2.4 Removing and installing pendulum support | 44 |
| 2.5 Supporting engine in installation position | 45 |
| 2.6 Adjusting assembly mountings | 78 |
| 2.7 Checking adjustment of assembly mountings | 80 |
| 3 Engine cover panel | 82 |
| 3.1 Removing and installing engine cover | 82 |
| 13 - Crankshaft group | 83 |
| 1 Cylinder block (pulley end) | 83 |
| 1.1 Assembly overview - poly V-belt drive | 83 |
| 1.2 Removing and installing poly-V belt | 89 |
| 1.3 Removing and installing tensioner for poly V-belt | 94 |
| 1.4 Removing and installing vibration damper | 96 |
| 1.5 Removing and installing engine support | 99 |
| 1.6 Renewing crankshaft oil seal - belt pulley end | 101 |
| 2 Cylinder block, gearbox end | 105 |
| 2.1 Assembly overview - cylinder block, gearbox end | 105 |
| 2.2 Removing and installing flywheel | 108 |
| 2.3 Removing and installing sealing flange on gearbox side | 110 |
| 3 Crankshaft | 123 |
| 3.1 Renewing needle bearing in crankshaft | 123 |
| 3.2 Crankshaft dimensions | 125 |
| 3.3 Measuring axial clearance of crankshaft | 125 |



| | | |
|-----------|---|------------|
| 4 | Pistons and conrods | 127 |
| 4.1 | Assembly overview - pistons and conrods | 127 |
| 4.2 | Removing and installing pistons | 129 |
| 4.3 | Checking pistons and cylinder bores | 131 |
| 4.4 | Separating new conrod | 133 |
| 4.5 | Checking radial clearance of conrods | 133 |
| 4.6 | Removing and installing oil spray jets | 134 |
| 4.7 | Setting piston to TDC position | 135 |
| 15 | Cylinder head, valve gear | 138 |
| 1 | Cylinder head | 138 |
| 1.1 | Assembly overview - cylinder head | 138 |
| 1.2 | Assembly overview - camshaft housing | 140 |
| 1.3 | Removing and installing cylinder head | 143 |
| 1.4 | Removing and installing camshaft housing | 147 |
| 1.5 | Checking compression | 153 |
| 2 | Toothed belt drive | 156 |
| 2.1 | Assembly overview - toothed belt cover | 156 |
| 2.2 | Assembly overview - toothed belt | 157 |
| 2.3 | Assembly overview - valve timing tool | 160 |
| 2.4 | Removing and installing toothed belt guard | 160 |
| 2.5 | Removing and installing toothed belt | 161 |
| 2.6 | Preassembling and installing valve timing tool | 168 |
| 2.7 | Checking valve timing | 178 |
| 2.8 | Adjusting valve timing | 181 |
| 2.9 | Removing toothed belt from camshaft | 192 |
| 3 | Valve gear | 197 |
| 3.1 | Assembly overview - valve gear | 197 |
| 3.2 | Removing and installing camshaft oil seal | 200 |
| 3.3 | Removing and installing camshaft adjuster | 212 |
| 3.4 | Removing and installing cam actuators | 224 |
| 3.5 | Removing and installing inlet camshaft control valve 1 N727 | 226 |
| 3.6 | Removing and installing exhaust camshaft control valve 1 N318 | 227 |
| 3.7 | Removing and installing valve stem seals | 228 |
| 3.8 | Removing and installing holder for oil seal | 243 |
| 4 | Inlet and exhaust valves | 247 |
| 4.1 | Checking valve guides | 247 |
| 4.2 | Checking valves | 248 |
| 4.3 | Valve dimensions | 248 |
| 17 | Lubrication | 249 |
| 1 | Sump, oil pump | 249 |
| 1.1 | Assembly overview - sump/oil pump | 249 |
| 1.2 | Engine oil: | 254 |
| 1.3 | Removing and installing sump | 254 |
| 1.4 | Removing and installing oil pump | 259 |
| 1.5 | Removing and installing oil level and oil temperature sender G266 | 262 |
| 2 | Engine oil cooler | 263 |
| 2.1 | Assembly overview - engine oil cooler | 263 |
| 2.2 | Removing and installing engine oil cooler | 263 |
| 3 | Crankcase ventilation | 265 |
| 3.1 | Assembly overview - crankcase breather system | 265 |
| 3.2 | Removing and installing oil separator | 267 |
| 4 | Oil filter, oil pressure switch | 271 |
| 4.1 | Assembly overview - oil pressure switches/oil pressure control | 271 |



| | | |
|-----------|--|------------|
| 4.2 | Removing and installing oil pressure sender G10 | 271 |
| 4.3 | Checking oil pressure and oil pressure switch | 273 |
| 4.4 | Removing and installing oil filter housing | 273 |
| 4.5 | Removing and installing oil pressure regulating valve N428 | 274 |
| 19 | Cooling | 276 |
| 1 | Cooling system/coolant | 276 |
| 1.1 | Connection diagram - coolant hoses | 276 |
| 1.2 | Checking cooling system for leaks | 278 |
| 1.3 | Draining and adding coolant | 282 |
| 1.4 | Flushing cooling system | 290 |
| 2 | Coolant pump, regulation of cooling system | 305 |
| 2.1 | Assembly overview - coolant pump, thermostat | 305 |
| 2.2 | Assembly overview - electric coolant pump | 307 |
| 2.3 | Assembly overview - coolant temperature sender | 307 |
| 2.4 | Removing and installing electric coolant pump | 308 |
| 2.5 | Removing and installing coolant pump | 311 |
| 2.6 | Removing and installing toothed belt pulley for coolant pump | 316 |
| 2.7 | Removing and installing coolant temperature sender G62 | 320 |
| 2.8 | Removing and installing radiator outlet coolant temperature sender G83 | 322 |
| 2.9 | Removing and installing engine outlet coolant temperature sender G82 | 324 |
| 2.10 | Removing and installing engine temperature regulation module GX33 | 326 |
| 2.11 | Checking coolant pump | 330 |
| 3 | Coolant pipes | 336 |
| 3.1 | Assembly overview - coolant pipes | 336 |
| 3.2 | Removing and installing coolant pipes | 338 |
| 4 | Radiator, radiator fan | 347 |
| 4.1 | Assembly overview - radiator/radiator fan | 347 |
| 4.2 | Assembly overview - radiator cowl and radiator fan | 349 |
| 4.3 | Assembly overview - radiator blind | 351 |
| 4.4 | Removing and installing radiator | 354 |
| 4.5 | Removing and installing water radiator for charge air cooling circuit | 357 |
| 4.6 | Removing and installing radiator cowl | 362 |
| 4.7 | Removing and installing radiator fan | 363 |
| 4.8 | Removing and installing radiator blind | 365 |
| 4.9 | Removing and installing radiator blind control motor V544 | 367 |
| 21 | Turbocharging/supercharging | 373 |
| 1 | Turbocharger | 373 |
| 1.1 | Assembly overview - turbocharger | 373 |
| 1.2 | Removing and installing turbocharger | 379 |
| 1.3 | Removing and installing connection for turbocharger | 384 |
| 1.4 | Removing and installing charge pressure control module GX34 | 386 |
| 2 | Charge air system | 391 |
| 2.1 | Assembly overview - charge air system | 391 |
| 2.2 | Removing and installing charge air cooler | 394 |
| 2.3 | Removing and installing charge pressure sender GX26 | 397 |
| 2.4 | Checking charge air system for leaks | 398 |
| 2.5 | Removing and installing air pipe | 402 |
| 2.6 | Checking charge air cooler for leaks | 409 |
| 24 | Mixture preparation - injection | 415 |
| 1 | Injection system | 415 |
| 1.1 | Overview of fitting locations - injection system | 415 |
| 2 | Air filter | 425 |



| | | |
|-----------------------------|--|------------|
| 2.1 | Assembly overview - air filter housing | 425 |
| 2.2 | Removing and installing air filter housing | 427 |
| 2.3 | Removing and installing air guide on lock carrier | 429 |
| 3 | Intake manifold | 433 |
| 3.1 | Assembly overview – intake manifold | 433 |
| 3.2 | Removing and installing intake manifold | 436 |
| 3.3 | Removing and installing throttle valve module GX3 | 442 |
| 3.4 | Cleaning throttle valve module GX3 | 444 |
| 4 | Injectors | 446 |
| 4.1 | Assembly overview - fuel rail with injectors | 446 |
| 4.2 | Removing and installing fuel rail | 448 |
| 4.3 | Removing and installing injectors | 449 |
| 4.4 | Cleaning injectors | 457 |
| 5 | Senders and sensors | 459 |
| 5.1 | Removing and installing intake manifold sender GX9 | 459 |
| 5.2 | Removing and installing fuel pressure sender G247 | 460 |
| 5.3 | Checking fuel pressure sender G247 | 462 |
| 5.4 | Removing and installing exhaust gas pressure sensor 1 G450 | 466 |
| 5.5 | Removing and installing air mass measurement module GX35 | 467 |
| 6 | High-pressure pump | 469 |
| 6.1 | Assembly overview - high-pressure pump | 469 |
| 6.2 | Removing and installing high-pressure pump | 470 |
| 6.3 | Removing and installing high-pressure pipe | 472 |
| 7 | Lambda probe | 474 |
| 7.1 | Assembly overview - Lambda probe | 474 |
| 7.2 | Removing and installing Lambda probe | 475 |
| 8 | Engine control unit | 477 |
| 8.1 | Removing and installing engine control unit J623 | 477 |
| 26 - Exhaust system | | 485 |
| 1 | Exhaust pipes and silencers | 485 |
| 1.1 | Assembly overview – silencers | 485 |
| 1.2 | Removing and installing silencer | 501 |
| 1.3 | Separating exhaust pipes from silencers | 516 |
| 1.4 | Aligning exhaust system free of stress | 518 |
| 1.5 | Checking exhaust system for leaks | 518 |
| 1.6 | Installation position of clamp | 519 |
| 1.7 | Assembly overview - front exhaust pipe | 520 |
| 1.8 | Removing and installing bracket for front exhaust pipe | 521 |
| 2 | Emission control | 523 |
| 2.1 | Assembly overview – emission control | 523 |
| 2.2 | Removing and installing catalytic converter | 526 |
| 2.3 | Removing and installing particulate filter | 531 |
| 2.4 | Removing and installing exhaust flap control unit J883 | 532 |
| 28 - Ignition system | | 533 |
| 1 | Ignition system | 533 |
| 1.1 | Assembly overview - ignition system | 533 |
| 1.2 | Removing and installing ignition coils with output stage | 535 |
| 1.3 | Removing and installing knock sensor 1 G61 | 539 |
| 1.4 | Removing and installing engine speed sender G28 | 540 |
| 1.5 | Removing and installing inlet camshaft position sender G1002 | 542 |
| 1.6 | Removing and installing exhaust camshaft position sender G1003 | 543 |